



The catalog of products for the visually impaired and hard of hearing
1-800-468-4789 (Toll Free, Monday – Friday 9am-5pm Eastern Time)

One Button Analog Watches: Setting Instructions **101025/101026/101041/101018/101052/101038/101053/101061**

This watch has one protruding button, two recessed buttons and one stem.

Buttons:

TR = Top Right button (Near the “2”)
BR = Bottom Right button (Near the “4”)
BL = Bottom Left button (Near the “8”)

TR - This is the protruding button. It is located at the top right of the rim, at the 2 o'clock position. This button, when pressed, will tell you the current time.

BR - This is a recessed button at the bottom right of the rim, at the 4 o'clock position. This button is used to change the minutes.

BL - This is a recessed button at the bottom left of the rim, at the 8 o'clock position. This button is used to change the hour.

Setting analog time:

The analog time and the talking time run independently of each other and therefore, need to be set separately.

To set the analog time, pull the stem out (at the 3 o'clock position).

There may be a red battery saver tab that needs to be removed before setting the time.

Once that has been removed, you may turn the stem to the correct time.

Once the correct time is displayed, push the stem back in. The second hand should start moving.

Setting talking time:

To set the talking time, you will need the tip of a pen, or some sort of small, pointed object to push the recessed buttons in.

Press the BL recessed button repeatedly to change the hours.

Once the correct hour has been announced, press the BR recessed button repeatedly to change the minutes.

Once the correct minute has been announced, press the TR button to hear the time.

Batteries:

- NOTE: Only a professional, qualified jeweler should change these batteries.

Jeweler tools, and expertise, are required to service these watches and to ensure batteries are correctly changed and properly repositioned, so the watch will operate after being serviced.

- *Battery life is NOT warranted by LS&S.*
- These watches require two batteries:
 - One for the talking voice (CR2016)
 - One for the analog hands (SR626SW).