


Equity®

JUMBO LED DISPLAY ALARM CLOCK Model 30402

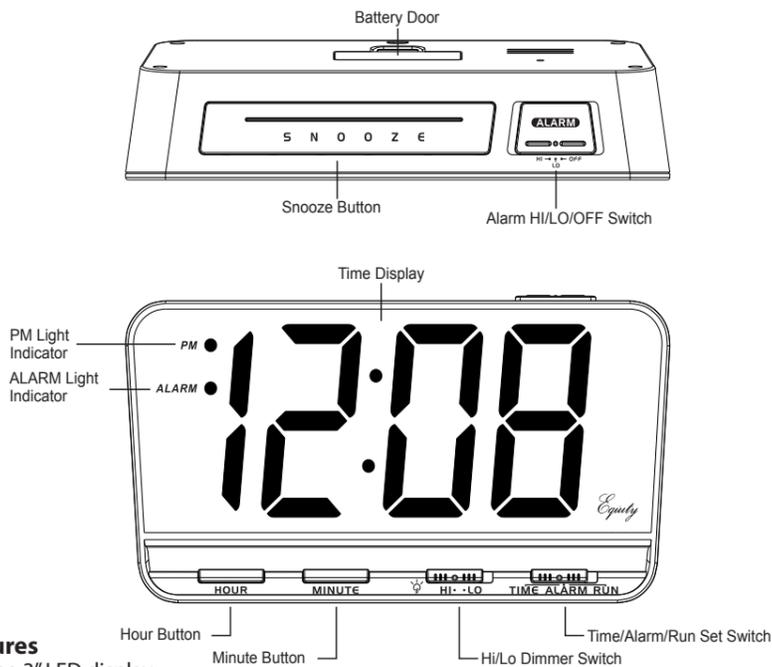

- Features**
- Jumbo 3" LED display
 - Hi/Lo display dimmer
 - Repeat 9 Minute snooze
 - Require one 9V battery for back-up
 - AC 120V, 60 Hz, ETL approved

Please read this before operating your clock

Power Supply

* Begin by plugging in the power cord into a standard household outlet. The display will flash indicating it needs to be set.

Setting The Time

- * Slide the **TIME/ALARM/RUN** set switch to **TIME** position.
- * Press **HOUR** button to set the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- * Press **MINUTE** button to set the correct minute.
- * Slide the **TIME/ALARM/RUN** set switch to **RUN** after set your time.

www.equitybylacrosse.com/support

Setting The Alarm Time

- * Slide the **TIME/ALARM/RUN** set switch to **ALARM** position.
- * Press **HOUR** button to set the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- * Press **MINUTE** button to set the correct minute.
- * Slide the **TIME/ALARM/RUN** set switch to **RUN** after set your alarm time.

Using The Alarm

- * Slide the **HI/LO/OFF** alarm switch to **HI** position to choose loud alarm sound. The alarm indicator will light up.
- * Slide the **HI/LO/OFF** alarm switch to **LO** position for choose regular alarm sound.
- * Slide the **HI/LO/OFF** alarm switch to the **OFF** position to turn the alarm OFF. The alarm indicator will disappear.

Using The Snooze

- * Press the **SNOOZE** button when the alarm sounds will stop the alarm and the alarm will sound again in nine minutes.
- * The snooze function can be repeated many times.

Using The Display Dimmer Switch

- * Slide the **HI/LO** display dimmer switch to **HI** position to choose brighter display.
- * Slide the **HI/LO** display dimmer switch to **LO** position to choose normal display.

Battery Backup

- * Insert one "9V" battery into the battery compartment at the back of the clock. The battery will keep the alarm and time settings until the power is restored. The LED display will not light-up but the alarm will sound at the preset alarm time. If there is no battery installed but the power is interrupted, the display will flash at 12:00 and the time and alarm need to be set again.

Battery Warning

Clean the battery contacts and also those of the device prior to battery installation. Follow the polarity (+) and (-) when inserting battery.

FCC INFORMATION:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and the receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Caution: Changes or modifications not expressly approved by the party responsible for

www.equitybylacrosse.com/support

Safety Instructions

1. Read Instructions-All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions - The safety and operating instructions should be retained for future reference.
3. Water and Moisture - The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
4. Ventilation - The appliance should be situated so that its location or position does not interfere with its proper ventilation, For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings, or, place in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
5. Heat - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
6. Power Sources-The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
7. Grounding or Polarization-The precaution should be taken so that the grounding or polarization means of an appliance is not defeated.
8. Power-Cord Protection - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
9. Cleaning - The appliance should be cleaned only as recommended by the manufacturer.
10. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
11. Damage Requiring Service - The appliance should be serviced by qualified service personnel when:
 - A. The power -supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
12. Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service. personnel.



Please help in preservation of the environment and return used batteries to an authorized depot. Remove the battery from the clock if you do not intend to use for an extended period of time.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

www.equitybylacrosse.com/support

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

Caution: To prevent electrical shock do not use this (polarized). plug with an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent blade exposure.

ATTENTION : POUR PRÉVENIR LES CHOCS ÉLECTRIQUES NE PAS UTILISER CETTE FICHE POLARISÉE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT, OU UNE AUTRE SORTIE DE COURANT SAUF SI LES LAMES PEUVENT ÊTRE INSÉRÉES À FOND SANS EN LAISSER AUCUNE PARTIE À DÉCOUVERT.

	<p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p>	
<p>The lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.</p>	<p>CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (ON BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	<p>The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.</p>

Two Year Limited Warranty (U.S.A.)

Equity products are warranted for two years from the date of consumer purchase against defects in material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option, without charge. This warranty does not cover damage caused by misuse or negligence. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE . Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty give you specific legal rights and you may also have other rights which vary from State to State.

If your product is not working properly, please send:

- the product
- a letter explaining the problem
- and \$5.00 for postage and handling to :

Equity by La Crosse
Warranty Department
2817 Losey Blvd. S
La Crosse, WI 54601

Made in China

Printed in China

www.equitybylacrosse.com/support