

# Fingerprint ID Pad



## Fingerprint & Check-In Computer



### 1. Install Procure

Procure must first be installed on the check-in computer. This includes all software necessary to communicate with the fingerprint reader.





### 3. Select Icon

Double click the Procure Check-In shortcut on your computer desktop.


### 4. Options Menu

At the check-in screen dbl-click anywhere in the gray border area around the main part of the screen, or press the Esc key on your keyboard. This will display the Options, Exit and Cancel buttons.

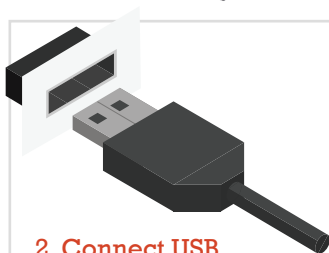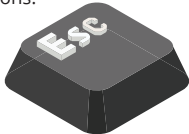

### 2. Connect USB

Connect the attached cable to a USB port on the computer. The Eikon Touch logo should light up indicating it has power.

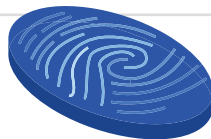

### 5. Select Fingerprint

Select the options button. Under check-in type choose fingerprint.



### 6. Verify Successful Setup

Click the hardware button. The serial number of the fingerprint reader should be displayed.

★ Learn more about check-in, search [procaresupport.com](http://procaresupport.com) for article KB0228.


## Usage and Care Guidelines

### Taking care of your Fingerprint ID

The Fingerprint ID Pad, while tolerant of residues left on the reader, performs optimally when kept clean!

### Instruction for using cleaning solutions

- Use Ethanol or Isopropanol in concentration of less than 50%. Windex® can also be used as a cleaning solution.
- Apply the liquid to a soft lint-free material (same as used to clean eye glasses or camera lenses) or to a cotton swab and gently wipe the capture area.

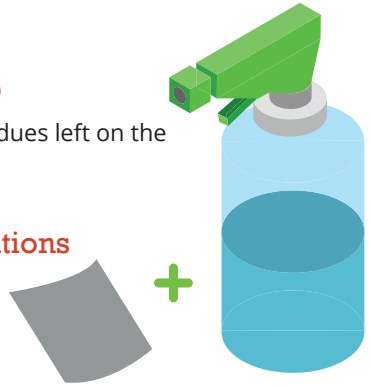

### Protect against the risk of damage

- DO NOT spray/pour any liquid directly on the capture area.
- DO NOT submerge the sensor in liquid.
- DO NOT rub the capture area with any abrasive material, including paper.

### Finger Placement

