

## NOTICE

\*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

\*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

\*This item may require periodic tightening.

\*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

## PREPARATION

\*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

\*If any part is missing or damaged, do not attempt to assemble the product.

 
\*Estimated Assembly Time: 60 minutes.

\*Tools Required for Assembly (included): Allen Key

## CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


### Part List

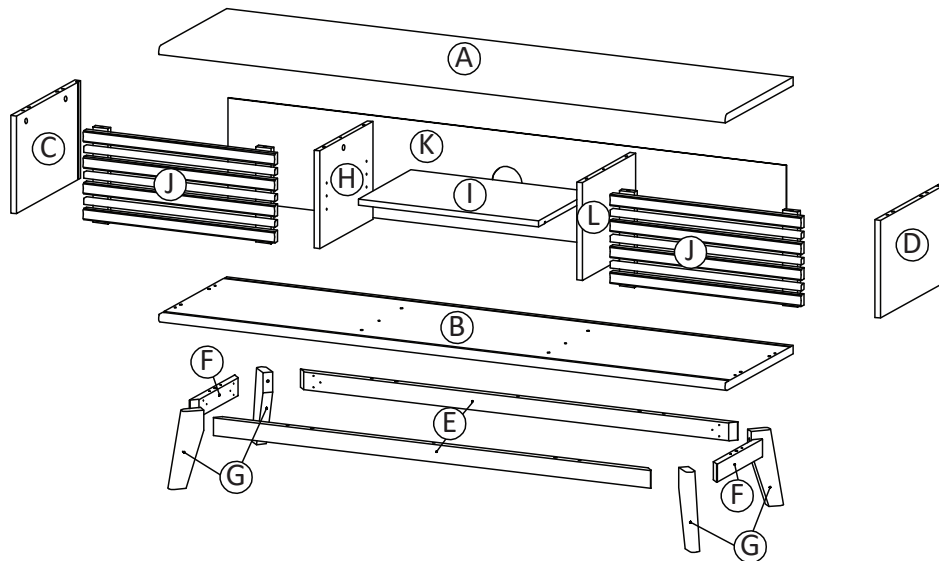

 **SAFAVIEH**  
FURNITURE

**Model# MED9601**

 **Product Dimensions: 59"Wx15"Dx19"H**

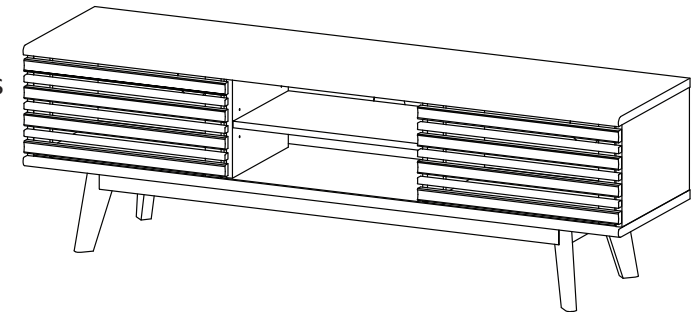






### **WARNING**

This product is intended for use with a  
FLAT SCREEN TV ONLY  
Maximum Screen Size: 65 inches  
Weight Limit: 81.4 lbs  
Shelf Load Limit: 19.8 lbs  
Drawer Load Limit: - lbs  
Use with heavier televisions may result  
in instability causing tip over resulting in  
death or Serious injury.

### **WARNING**

Death or serious injury may occur  
when children climb on audio  
and/or video equipment furniture.  
A remote control or toys placed on  
the furnishing may encourage a  
child to climb on the furnishing and  
as a result the furnishing may tip  
over on the child.
     
## Hardware List
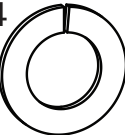
|                                                                                                                                           |                                                                                                                                            |                                                                                                                                              |                                                                                                                                   |                                                                                                                                             |
|-------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| <b>HW1x6</b><br><br>$\varnothing 6 \times 35 \text{ mm}$ | <b>HW2x6</b><br><br>$\varnothing 15 \text{ mm}$           | <b>HW3x22</b><br><br>$\varnothing 8 \times 30 \text{ mm}$ | <b>HW4x6</b><br><br>$M 7 \times 50 \text{ mm}$ | <b>HW5x1</b><br><br>$L 4$                                |
| <b>HW6x24</b><br><br>$M 4 \times 16 \text{ mm}$          | <b>HW7x4</b><br><br>$25 \times 25 \text{ mm}$             | <b>HW8x4</b><br><br>                                      | <b>HW9x4</b><br><br>                           | <b>HW10x10</b><br><br>$9 \times 14 \times 10 \text{ mm}$ |
| <b>HW11x10</b><br><br>$M 3.5 \times 15.5 \text{ mm}$     | <b>HW12x4</b><br><br>$\varnothing 5 \times 15 \text{ mm}$ | <b>HW13x4</b><br><br>                                     | <b>HW14x4</b><br><br>                          | <b>HW15x10</b><br><br>$M 6.4 \times 53 \text{ mm}$       |
| <b>HW16x3</b><br><br>$\varnothing 8 \text{ mm}$          | <b>HW17x6</b><br><br>$\varnothing 15 \text{ mm}$          | <b>HW18x14</b><br><br>$M 6 \times 12.5 \text{ mm}$        | <b>HW19x1</b><br><br>                          | <b>HW BC410x4</b><br><br>                                |
| <b>HW US11x1</b><br>                                     |                                                                                                                                            |                                                                                                                                              |                                                                                                                                   |                                                                                                                                             |

## Part List & HW For Multi-Box Items

| Piece | Description        | Qty |
|-------|--------------------|-----|
| A     | Top Board          | 1   |
| B     | Bottom Board       | 1   |
| C     | Side Board Left    | 1   |
| D     | Side Board Right   | 1   |
| E     | Support Leg 1      | 2   |
| F     | Support Leg 2      | 2   |
| G     | Leg                | 4   |
| H     | Center Board Left  | 1   |
| I     | Adjustable Shelf   | 1   |
| J     | Frame Door         | 2   |
| K     | Back Board         | 1   |
| L     | Center Board Right | 1   |

| Piece    | Description           | Qty |
|----------|-----------------------|-----|
| HW1      | Cambolt               | 6   |
| HW2      | CamLock               | 6   |
| HW3      | Dowel                 | 22  |
| HW4      | Screw M 7 x 50 mm     | 6   |
| HW5      | Allen Key             | 1   |
| HW6      | Screw M 4 x 16 mm     | 24  |
| HW7      | Floor Protector       | 4   |
| HW8      | Spring Washer         | 4   |
| HW9      | Nut                   | 4   |
| HW10     | Wedge                 | 10  |
| HW11     | Screw M 3.5 x 15.5 mm | 10  |
| HW12     | Shelf Pin             | 4   |
| HW13     | Pin Sliding Top       | 4   |
| HW14     | Pin Sliding Bottom    | 4   |
| HW15     | Screw M 6.4 x 53 mm   | 10  |
| HW16     | Bumper                | 3   |
| HW17     | Screw Cap             | 6   |
| HW18     | Screw M 6 x 12.5 mm   | 14  |
| HW19     | Wrench                | 1   |
| HW BC410 | Corner Brace          | 4   |
| HW US11  | Anti Deflection Bar   | 1   |

# PREPARATION

 
\*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

\*If any part is missing or damaged, do not attempt to assemble the product.


\*Estimated Assembly Time: 60 minutes.

\*Tools Required for Assembly (included): Allen Key


\*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

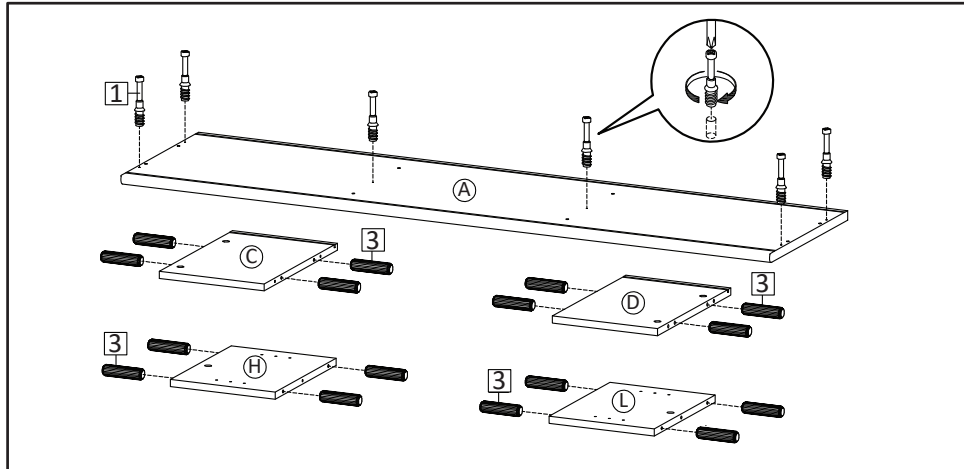

 
**STEP1:** Insert Cambolt (HW1) into Top Board (A)  
Insert Dowel (HW3) into Center Boards (H & L),  
Side Board Left (C) and Side Board Right (D).

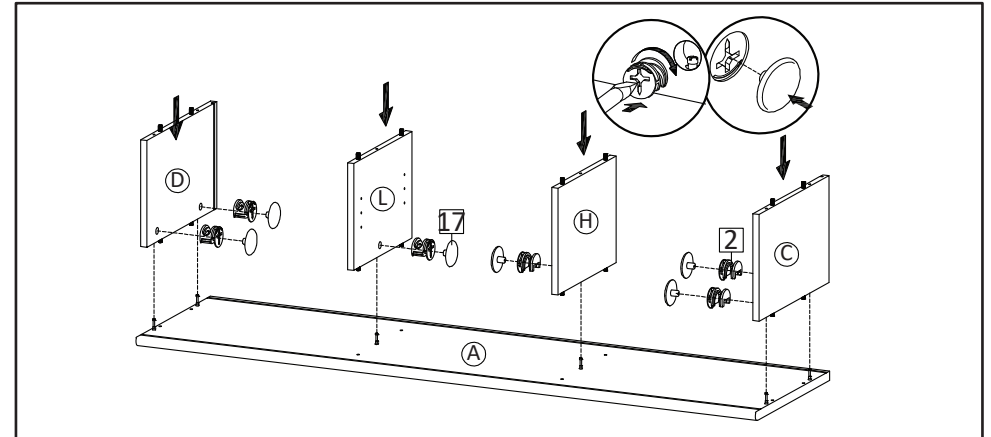

 **STEP2:** Attach Side Board Left (C), Side Board Right (D),  
Center Boards (H & L) to Top Board (A).  
Insert Camlock (HW2) then tighten using screwdriver.  
Put Screw Cover (HW17) over the camlock.

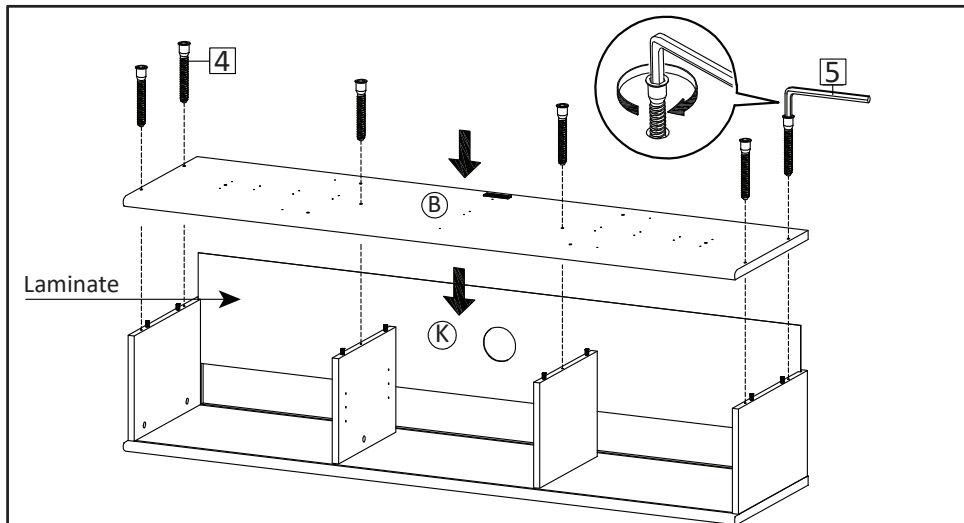

 **Step3:** Insert Backboard (K) as shown in the figure above.  
Place bottom board on top and secure with Screw M7x50 (HW4),  
tighten screws using Allen Key (HW5).

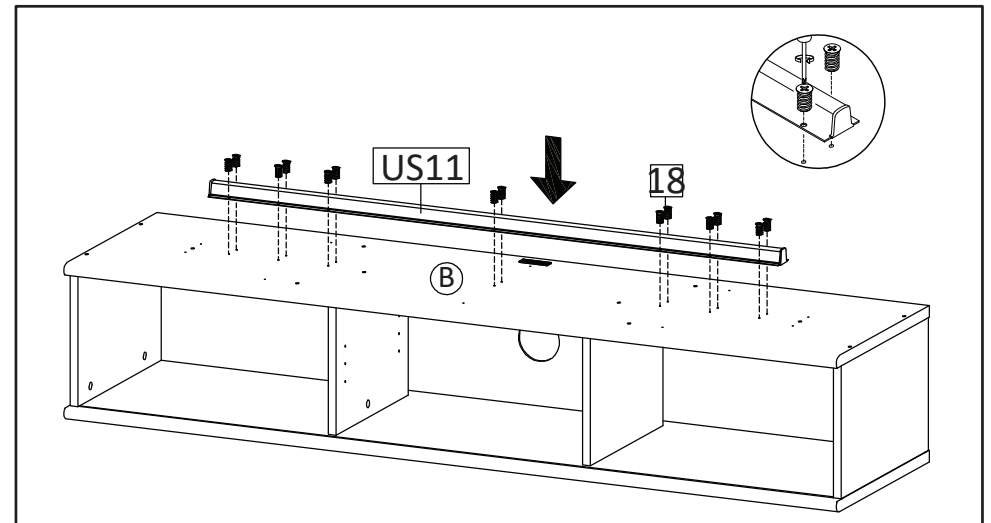

**STEP4:** Place Anti Deflection Metal Bar (HW US11),  
secure with screw M 6 x12,5 (HW18) using screwdriver.

# PREPARATION

 
\*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

\*If any part is missing or damaged, do not attempt to assemble the product.


\*Estimated Assembly Time: 60 minutes.

\*Tools Required for Assembly (included): Allen Key


\*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

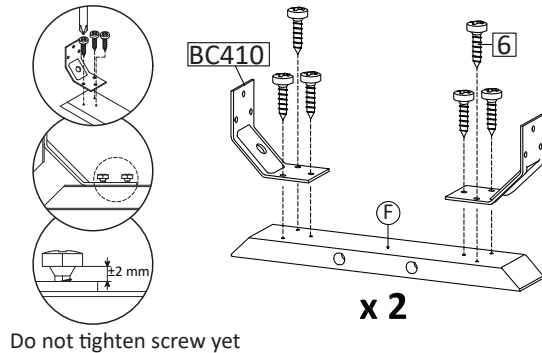

 
**STEP5:** Now lets assemble the Support Leg. Start with installing Corner Brace (HW BC410) into Support Leg 2 (F) using Screw M4x16 (HW6). Do not overtighten the screws yet, leave around 2mm gap.

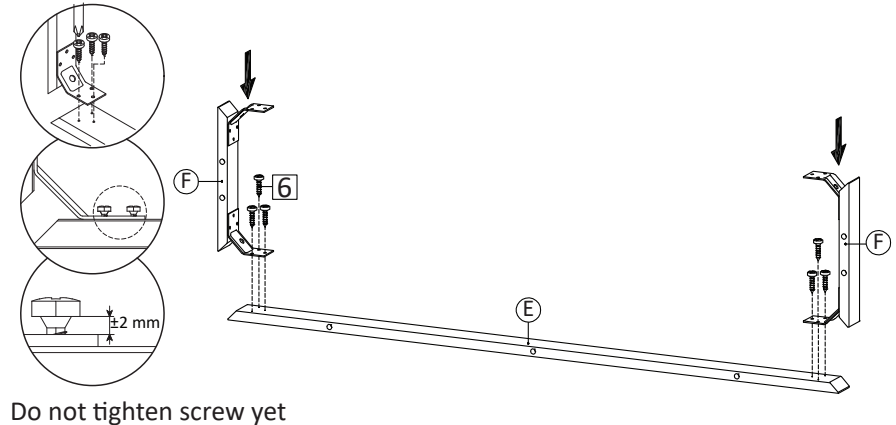

 **STEP6:** Combine the Support Leg 2 from step 5 with Support Leg 1 (E), using Screw M4x16 (HW6). Do not overtighten the screws yet, leave around 2mm gap.

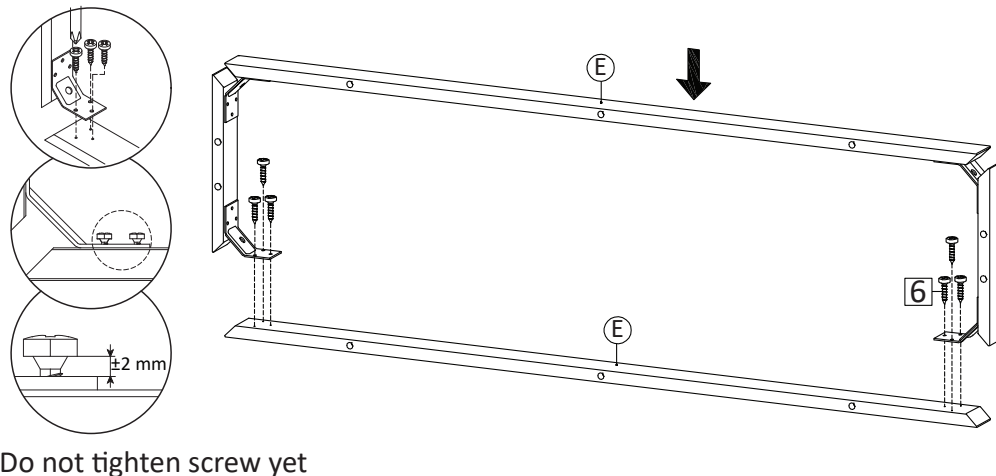

 
**STEP7:** Combine components from step 6 with remaining Support Leg 1 (E), using Screw M4x16 (HW6). Do not overtighten the screws yet, leave around 2mm gap.

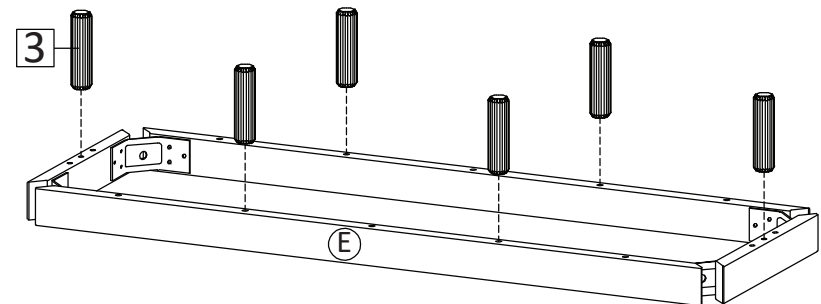


**STEP8:** Insert Dowel (HW3) into assembled Support Leg.

# PREPARATION

 
- \*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \*If any part is missing or damaged, do not attempt to assemble the product.
- \*Estimated Assembly Time: 60 minutes.
- \*Tools Required for Assembly (included): Allen Key
- \*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

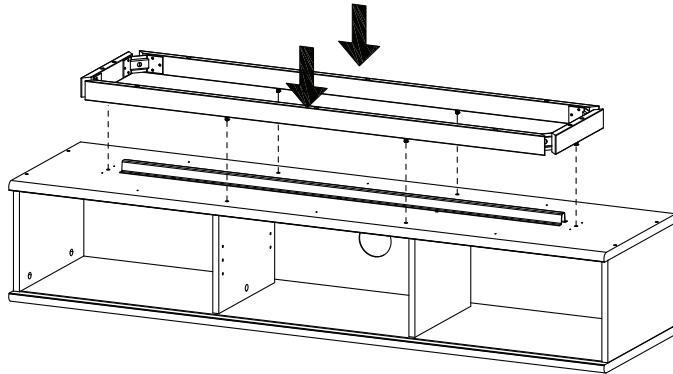

 
**STEP9:** Attach the assembled Support Legs to Bottom Board (B).

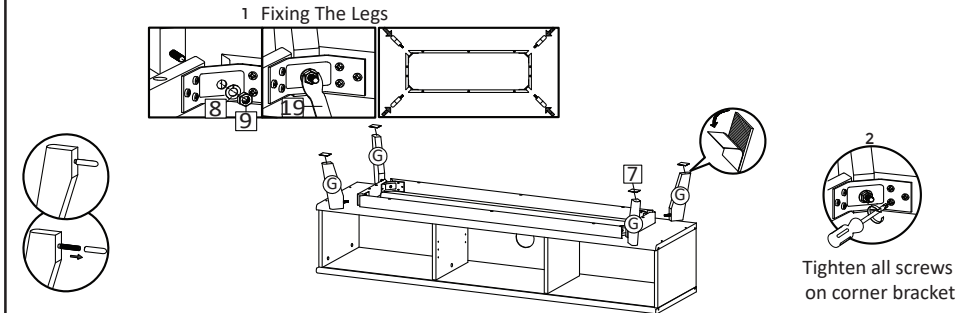

 **STEP10:** Remove plastic cap from Legs. Insert the bolt of the Leg (G) into hole of corner brace as shown in the figure above. Insert Spring Washer (HW8) first into the hanger bolt of leg, then followed by Nut (HW9), tighten all the nuts using provided Wrench (HW19). Ensure that all legs have been tightened then tighten all screws on the corner brace.

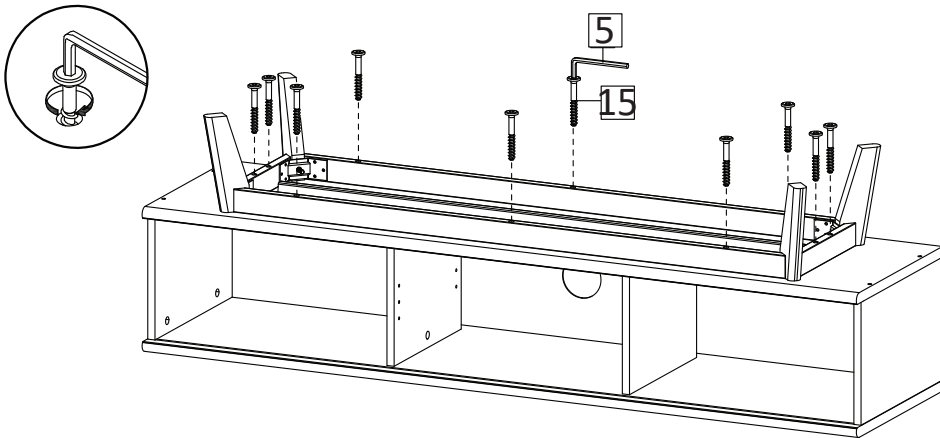

 
**STEP11:** Insert Screw M6.4 x 53 (HW15) and tighten using Allen Key (HW5).

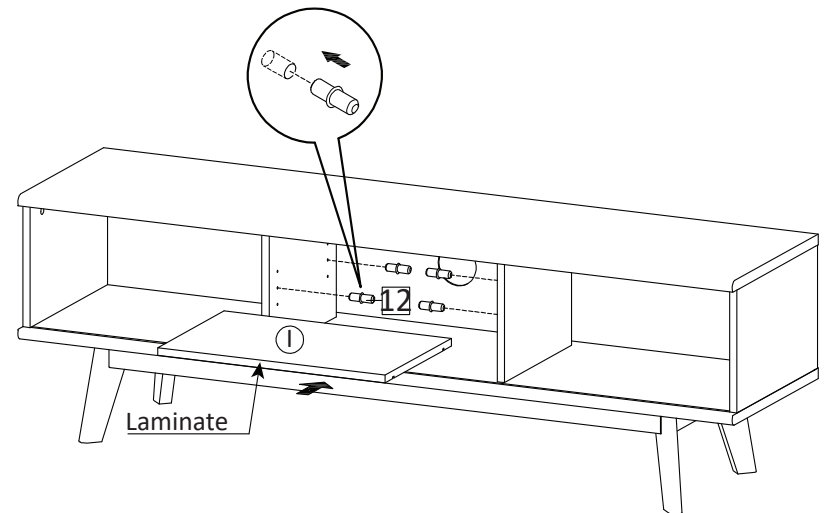


**STEP12:** After bringing the product upright, insert Shelf Pins (HW12) in between the Centerboards on the desired level. Then place the Adjustable Shelf (I) onto the Shelf Pin.

# PREPARATION

 
- \*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \*If any part is missing or damaged, do not attempt to assemble the product.
- \*Estimated Assembly Time: 60 minutes.
- \*Tools Required for Assembly (included): Allen Key
- \*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

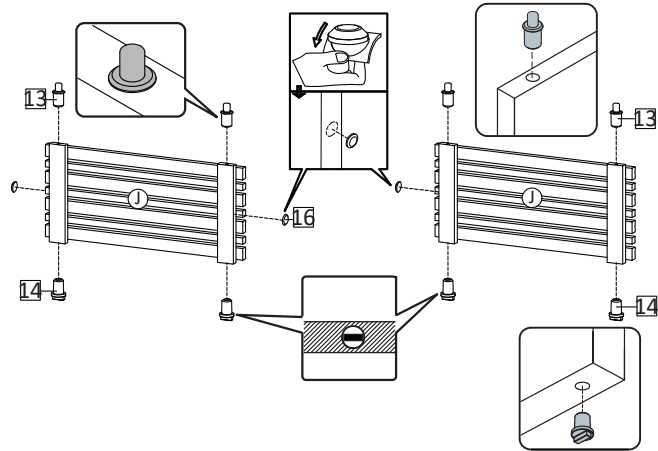

 
**STEP13:** Peel the back paper of Bumper ( HW16) then place on both frame door,position as shown in the figure. Insert Top Pin Sliding (HW13) and Bottom Pin Sliding (HW14) on both end of frame door as specified position in the figure.

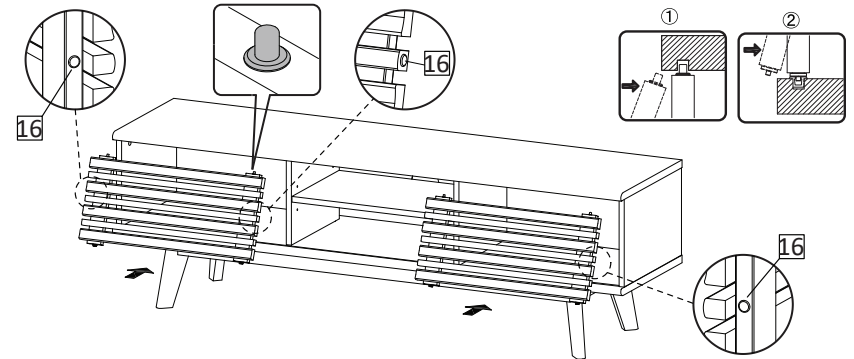

 **STEP14:** Hold the frame door with position of the upper pin shown in facing upward. Put the frame door by inserting it to the upper groove on Top Board (1), then place the lower part aligned into the groove on bottom board (2). Repeat this step for the other door. Slide the item's doors left and right to ensure the doors have been placed properly.

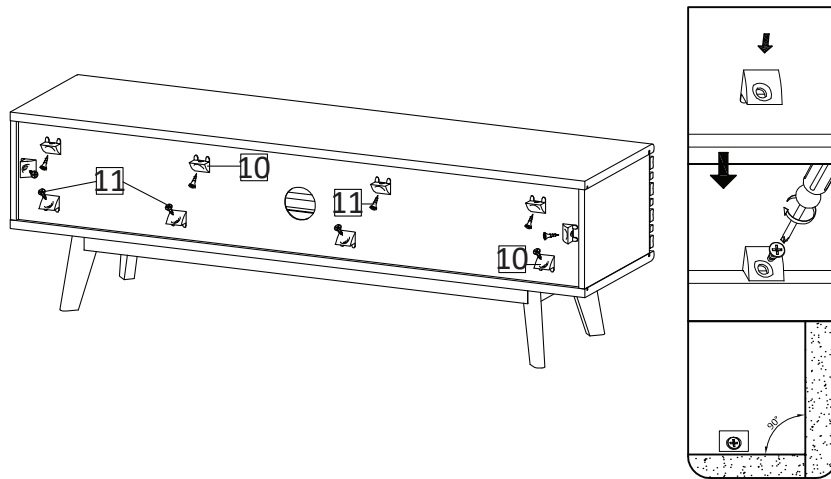

 **STEP15:** Using Wedge (HW10) and Screw M 3.5 x15.5 (HW11) tighten the back of media stand with screwdriver.

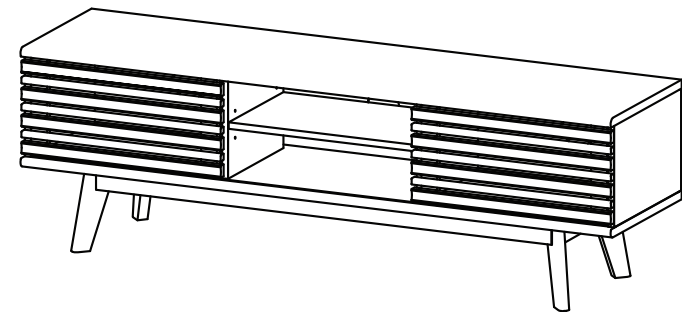






**STEP16:** Assembly is completed.

# TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

     Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

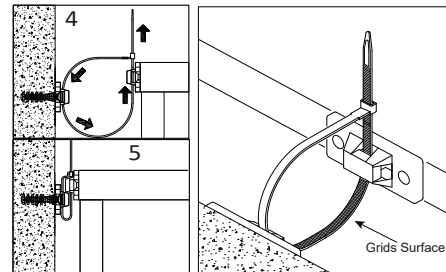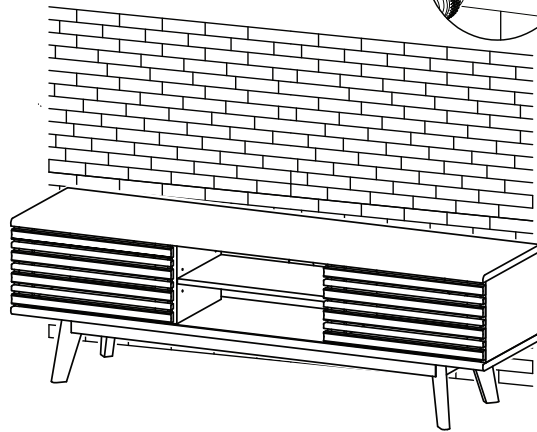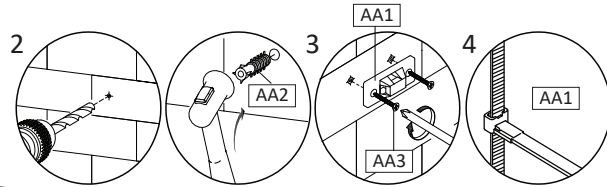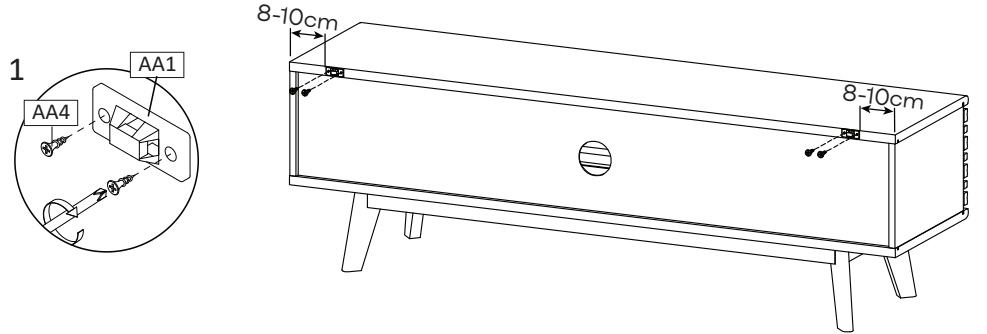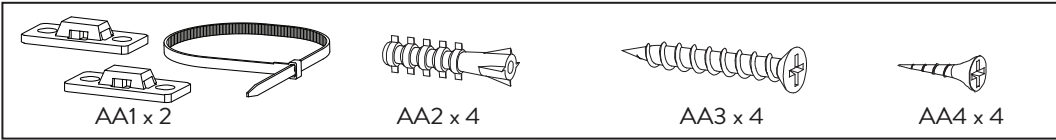

## Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 8 - 10 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit attach the wall plugs (AA2).
3. Locate the other bracket (AA1) on the wall over wall plugs (AA2). Place furniture into position so both brackets (AA1) are vertically in the line.
4. Lace the end of the restraints strap through the larger hole in each bracket. Ensure the restraints strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.