

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List

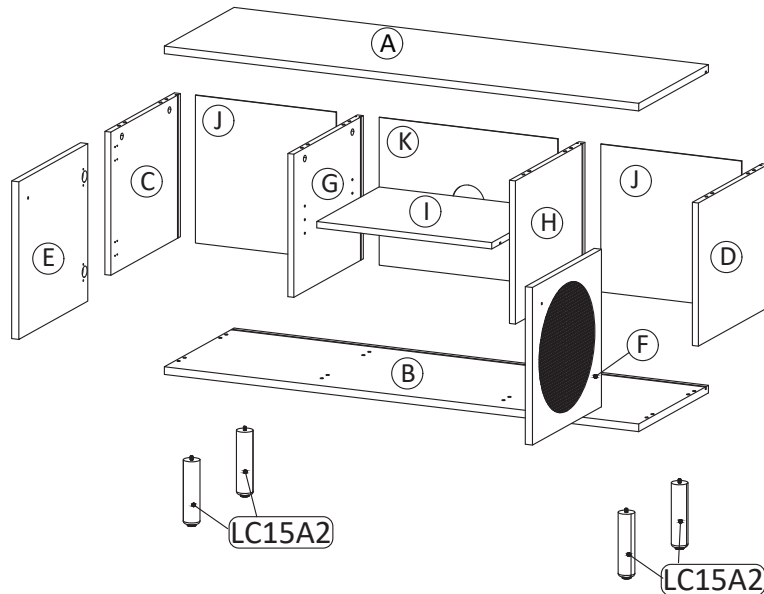

 **SAFAVIEH**
FURNITURE

Model# MED9615

Product Dimensions: 47"Wx15"Dx21"H

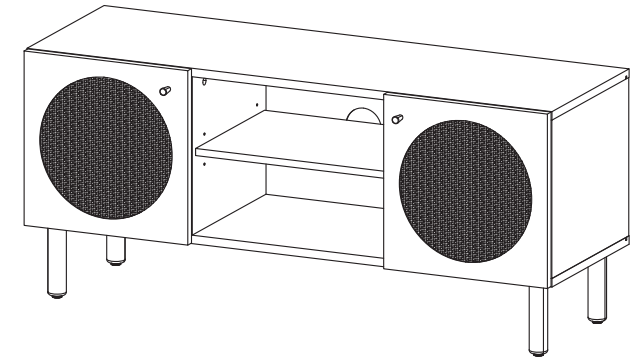






WARNING

This product is intended for use with a
FLAT SCREEN TV ONLY
Maximum Screen Size: 50 inches
Weight Limit: 63.9 lbs
Shelf Load Limit: 22lbs
Drawer Load Limit: - lbs
Use with heavier televisions may result
in instability causing tip over resulting in
death or Serious injury.

WARNING

Death or serious injury may occur
when children climb on audio
and/or video equipment furniture.
A remote control or toys placed on
the furnishing may encourage a
child to climb on the furnishing and
as a result the furnishing may tip
over on the child.

   Hardware List

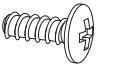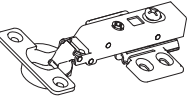HW1x8  $\varnothing 6 \times 35 \text{ mm}$	HW2x8  $\varnothing 15 \text{ mm}$	HW3x8 	HW4x16  $\varnothing 8 \times 30 \text{ mm}$	HW5x8  $M 7 \times 50 \text{ mm}$	HW6x2  $L 4$
HW7x40  $M 4.5 \times 12.5 \text{ mm}$	HW8x2 	HW9x2  $M 4 \times 25 \text{ mm}$	HW10x14  $M 3.5 \times 15.5 \text{ mm}$	HW11x14 	HW12x10  $M 6 \times 12.5 \text{ mm}$
HW13x4 	HW PM2x4 	HW HS26Ax4 	HW US90x1 		

Part List & HW For Multi-Box Items

Piece	Description	Qty	Carton Call
A	Top Board	1	1 of 1
B	Bottom Board	1	1 of 1
C	Side Board Left	1	1 of 1
D	Side Board Right	1	1 of 1
E	Door Left	1	1 of 1
F	Door Right	1	1 of 1
G	Center Board Left	1	1 of 1
H	Center Board Right	1	1 of 1
I	Adjustable Shelf	1	1 of 1
J	Back Board 1	2	1 of 1
K	Back Board 2	1	1 of 1
LC15A2	Leg	4	1 of 1


Piece	Description	Qty	Carton Call
HW1	Cambolt	8	1 of 1
HW2	CamLock	8	1 of 1
HW3	Screw Cap	8	1 of 1
HW4	Dowel	16	1 of 1
HW5	Screw M 7 x 50 mm	8	1 of 1
HW6	Allen Key	2	1 of 1
HW7	Screw M 4.5 x 12.5 mm	40	1 of 1
HW8	Handle	2	1 of 1
HW9	Screw M 4 x 25 mm	2	1 of 1
HW10	Screw M 3.5 x 15.5 mm	14	1 of 1
HW11	Wedge	14	1 of 1
HW12	Screw M 6 x 12.5 mm	10	1 of 1
HW13	Shelf Pin	4	1 of 1
HW PM2	Mounting Plate	4	1 of 1
HW HS26A	Hinge	4	1 of 1
HW US90	Anti-Deflection Bar	1	1 of 1

PREPARATION


part contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.

 
Estimated Assembly Time: 60 minutes.

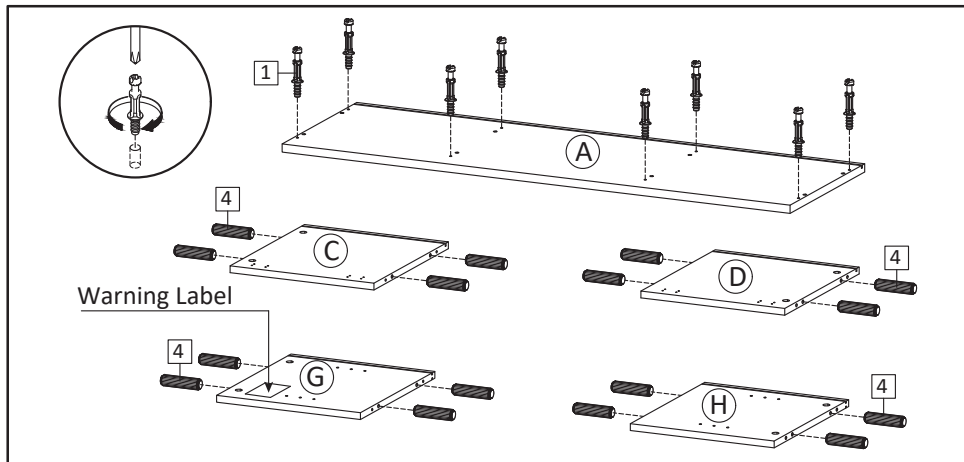

 
STEP1: Insert Cambolt (HW1) into Top Board (A).
Insert Dowel (HW4) into Side Board Left (C), Side Board Right (D),
Center Board Left (G) and Center Right (H).

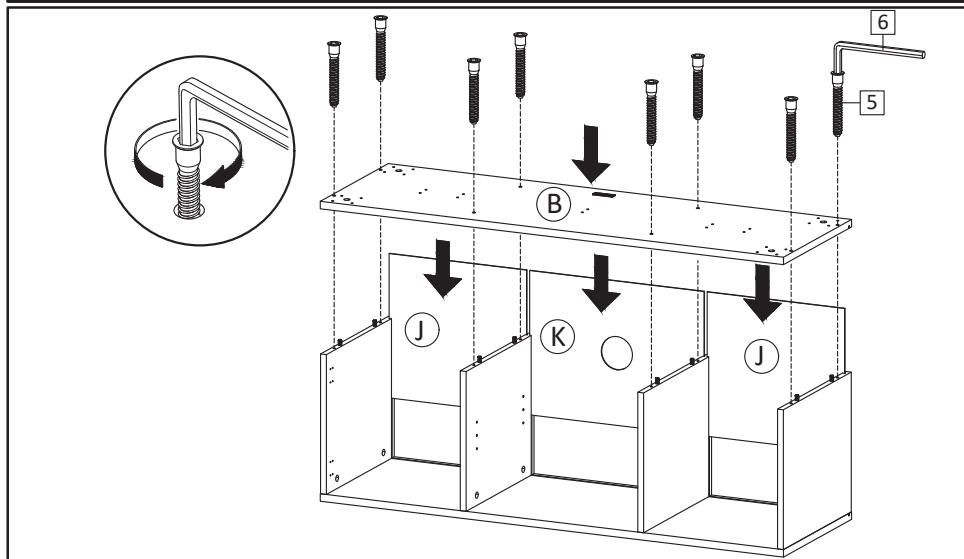

 
Step3: Insert Backboards (J&K) as figure. Put Bottom Board (B)
and secure with Screw M7x50 (HW5),
tighten screws using Allen Key (HW6).

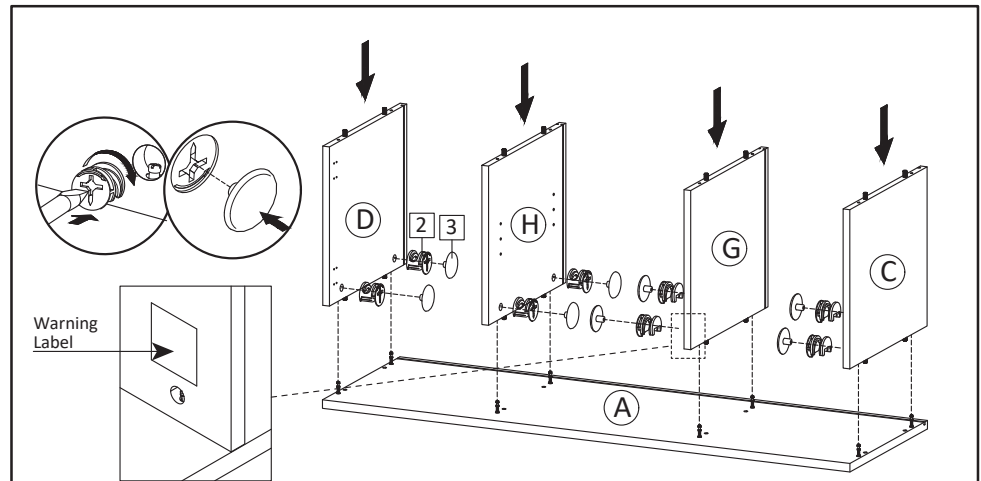

 
STEP2: Attach Side Board Left (C) , Side Board Right (D),
Center Boards (G&H) into Top Board (A) .
Insert Camlock (HW2) then tighten using screwdriver.
Put Screw Cap (HW3) over the camlock.

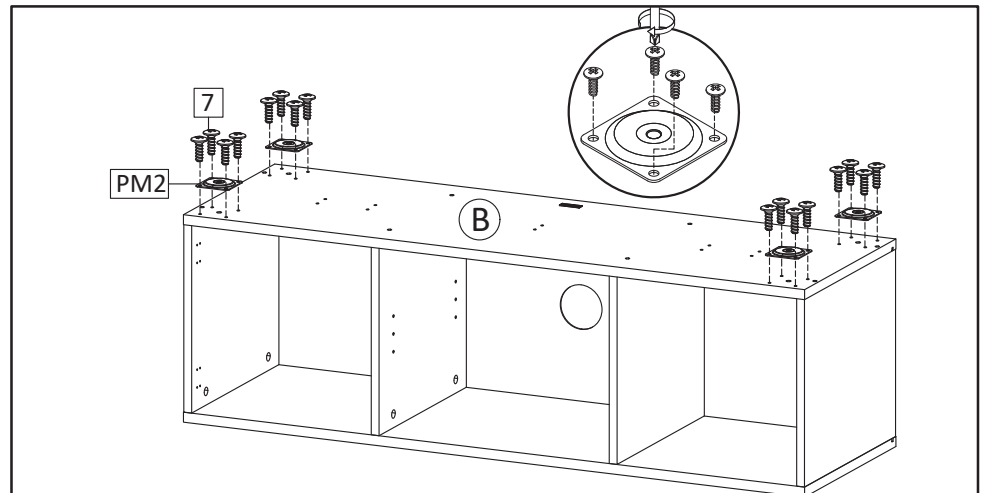

 
STEP4: Install Mounting Plate (PM2) and secure with
screw M4.5x12.5mm (HW7) on Bottom Board.

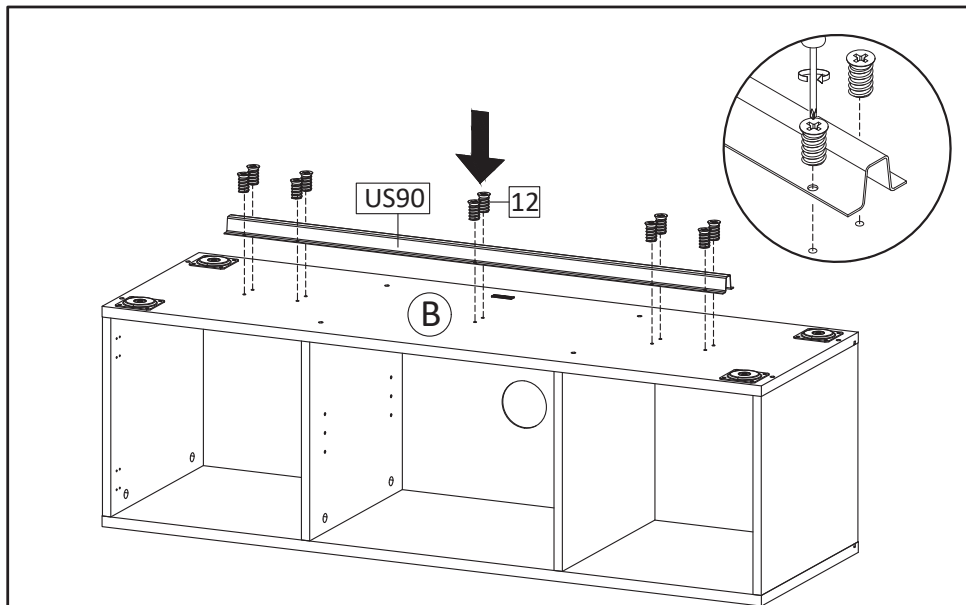

 
STEP5: Place Anti Deflection Metal Bar (HW US90) , secure with screw M 6 x12.5 (HW12) using screwdriver.

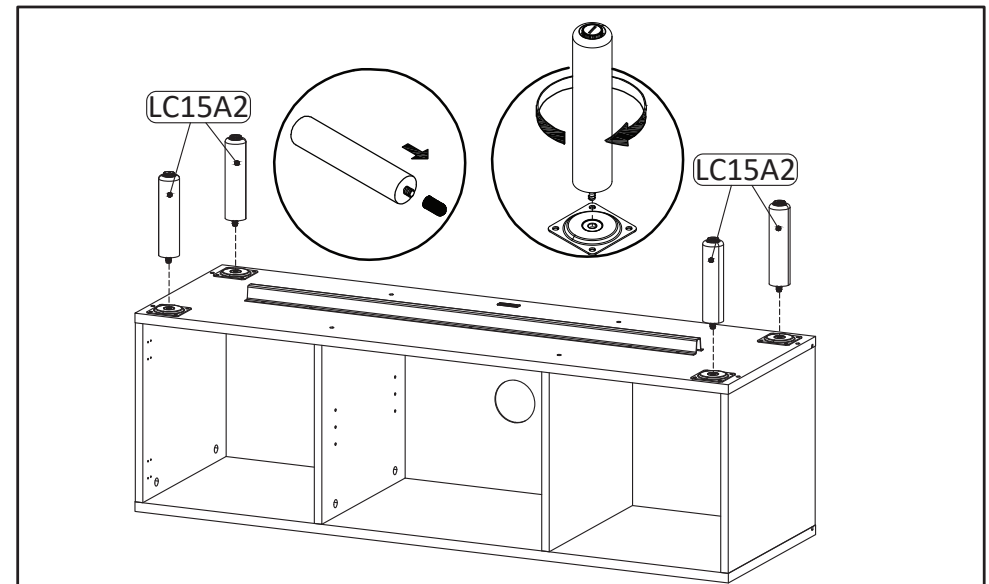

 
STEP6: Insert Leg (LC15A2) into Mounting Plate, tighten by rotating . the leg clockwise.

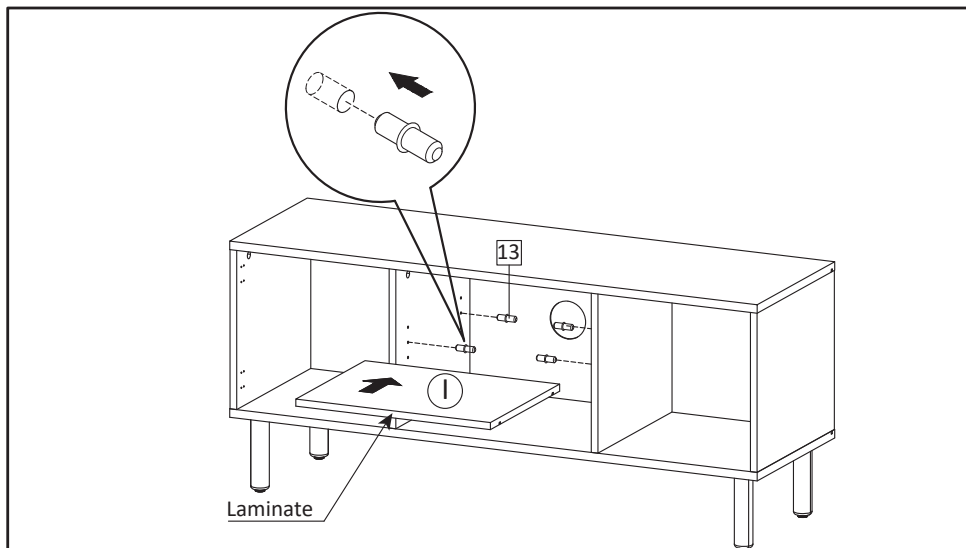

 
STEP7: insert Shelf Pin (HW13) into the between Center boards on the desired level. Then place the Adjustable Shelf (I) onto the Shelf Pin.

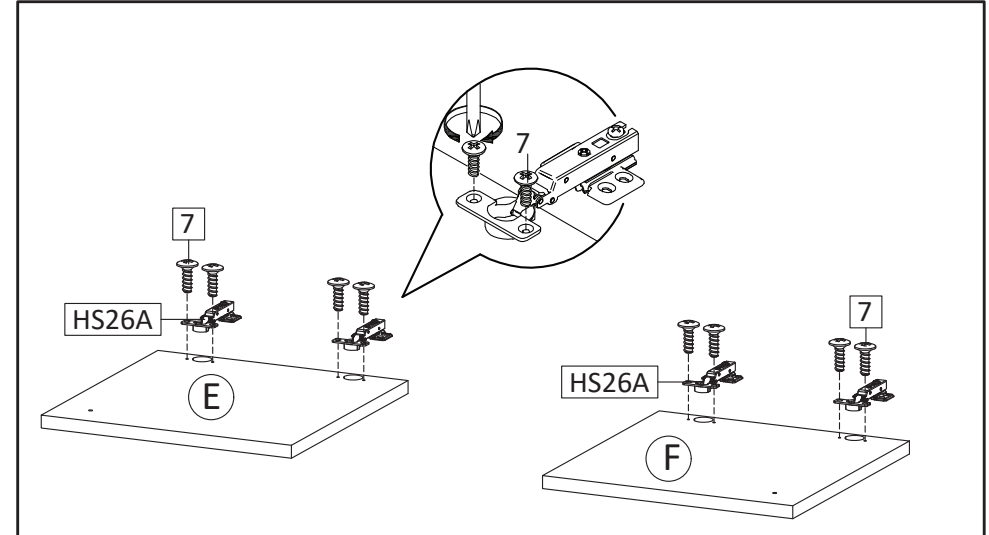


STEP8: Insert Hinge (HW HS26A) into pre-hole in Door Left (E) and Door Right (F). Secure with Screw M4.5 x12.5 (HW7).

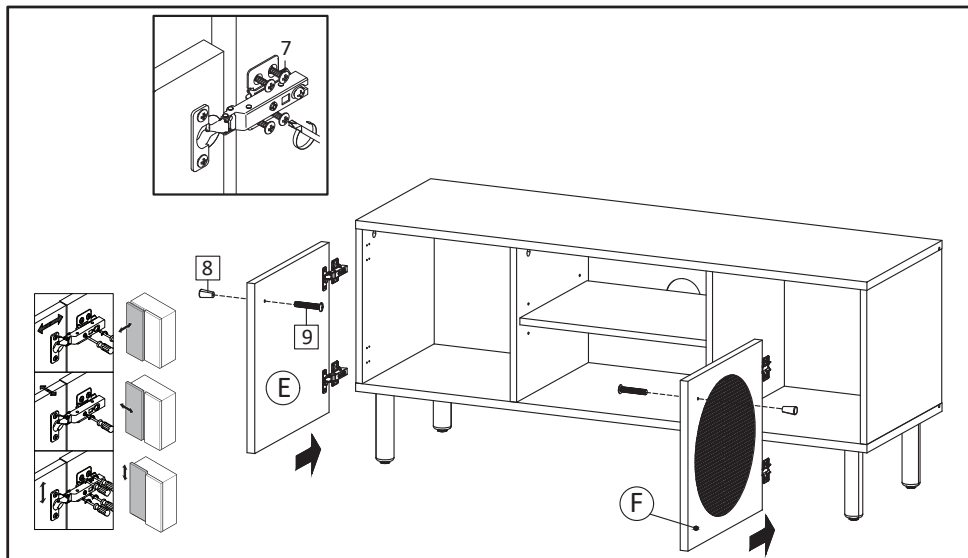

STEP9: Install Door Left (E), into Side Board Left and install Door Right (F), into Side Board Right, Secure with Screw M4.5 x 12.5 (HW7). Please refer to the last page for more guide on how to adjust hinges. Insert Handle (HW8) and Screw M4x25 mm (HW9) into Doors.

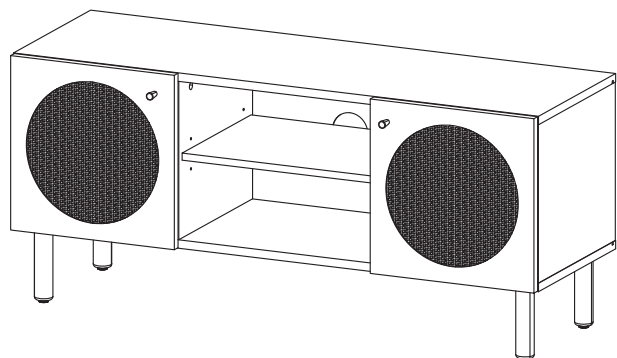

STEP11: Assembly is complete.

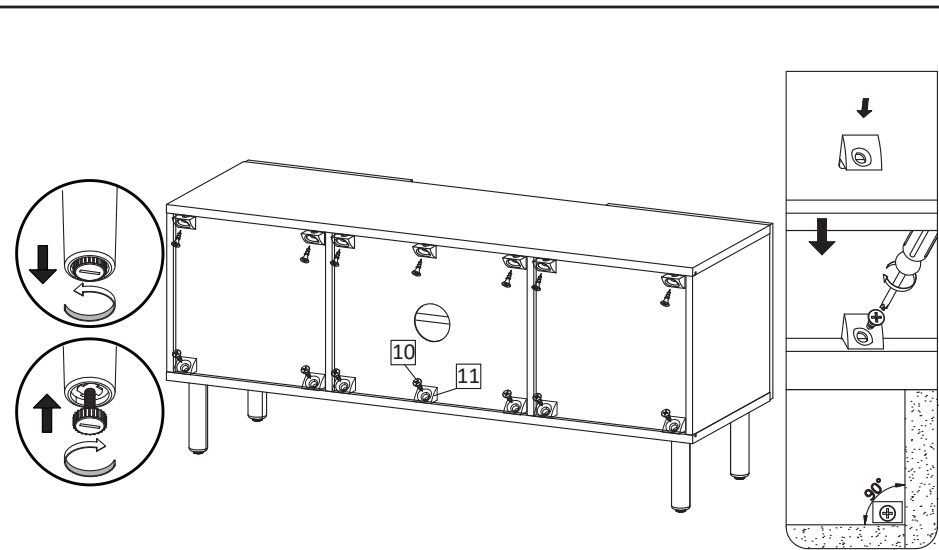

STEP10: Use Wedge (HW11), Screw M 3.5 x15.5 (HW10) to tighten the back of media stand by using screwdriver. Please align the top board and bottom board in 90° position against the side board, before securing the wedges (HW11).






Place your furniture on level floor. The legs come with adjustable leveller, adjust it as needed until your furniture sit steady on the floor.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE



Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

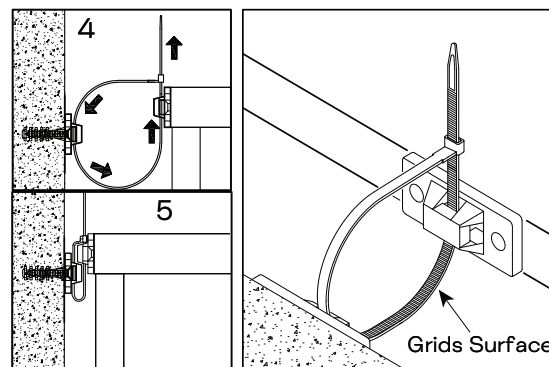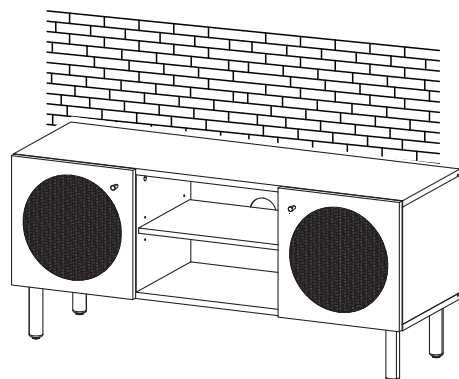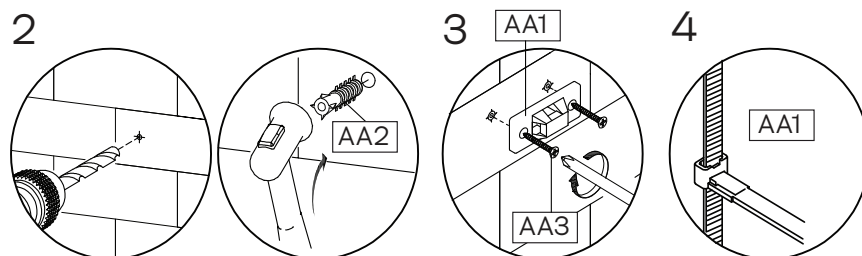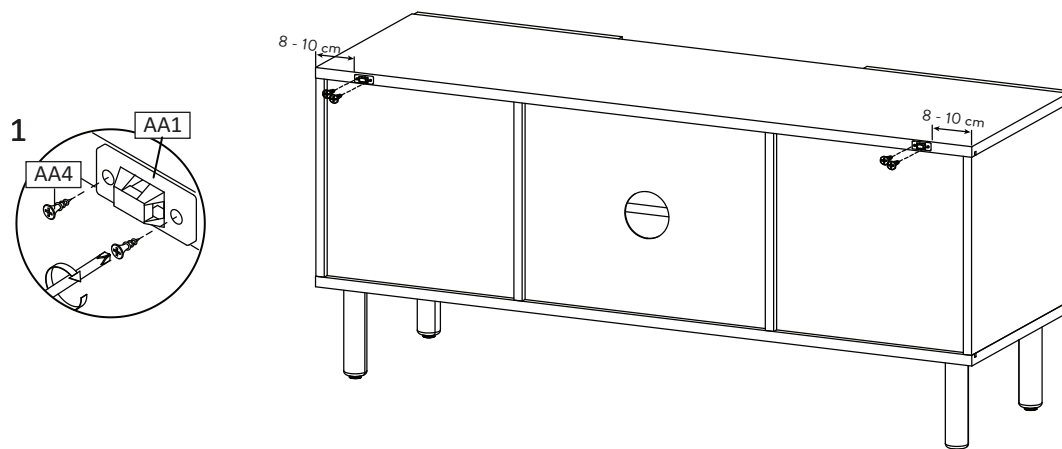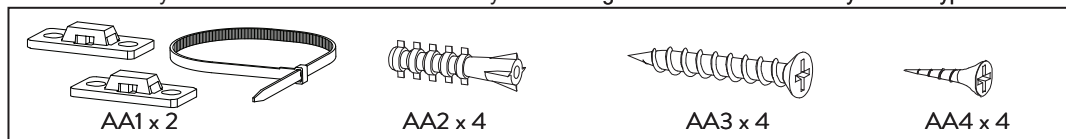


HOW TO ADJUST HINGES

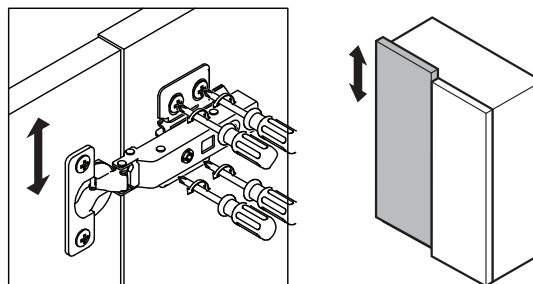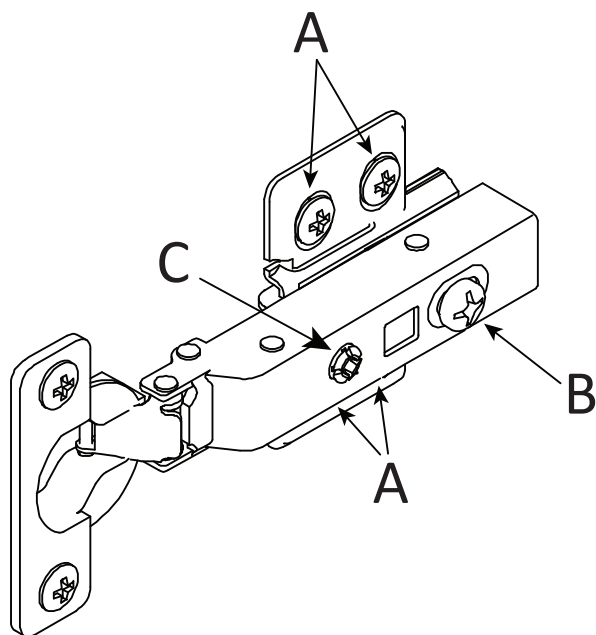


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

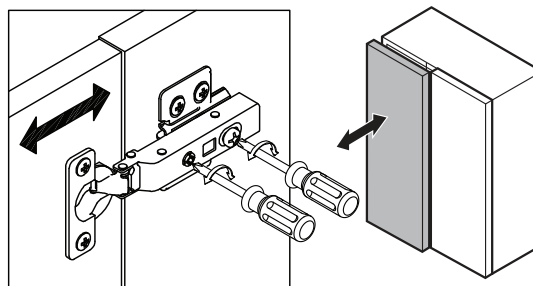

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

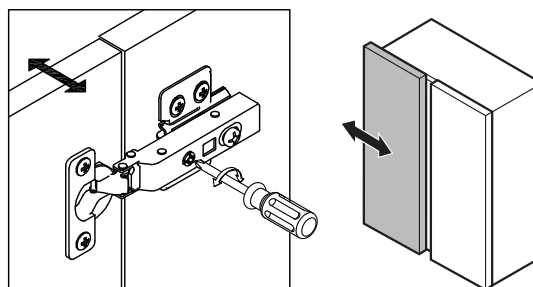

To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.