

CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.

Remove wooden furniture from standing water. Dust regularly with small brush or vacuum

 
 
Spills should be taken care of immediately before they harden or

stain with a slightly dampened sponge.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Top table		1X
B	Leg		4X
C	Bolt	 M8 X 60	8X
D	Pads washer	 8.5 X 14 x 2	8X
E	Iron washer	 8.5 X 20 x 2	8X
F	Allen key	 4 mm	2X



Weight Capacity : 300 Ibs


Warning : Do not stand on table

Warning : Do not over torque bolts / screws



Model# PAT7082

Product Dimensions:35.4" W x 60.2" D x 29.1" H

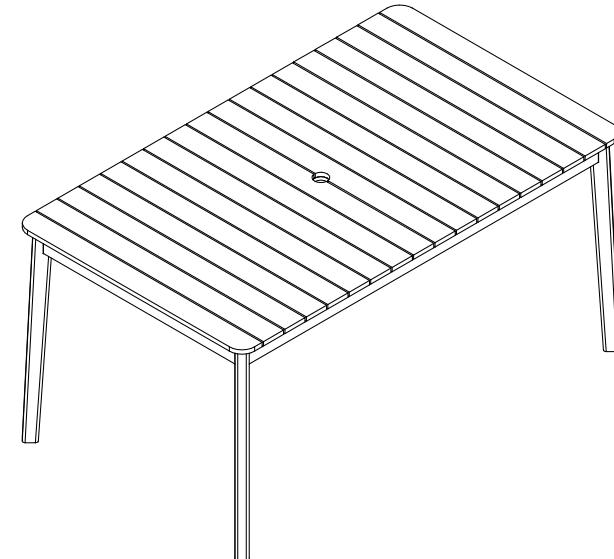


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 30 minutes.

Tools Required for Assembly (included): Allen Key


1

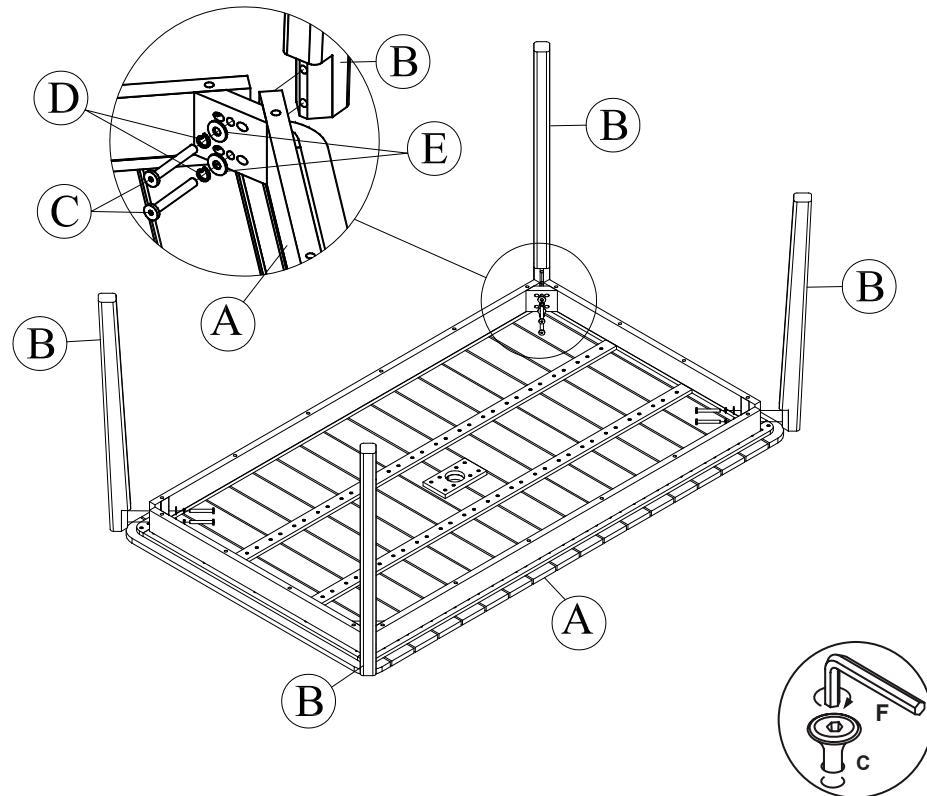

Step 1

Attached Leg (B) to Top table (A). Using Bolt (C), Pads washer (D) and Iron washer (E) tighten with Allen key (F).

2

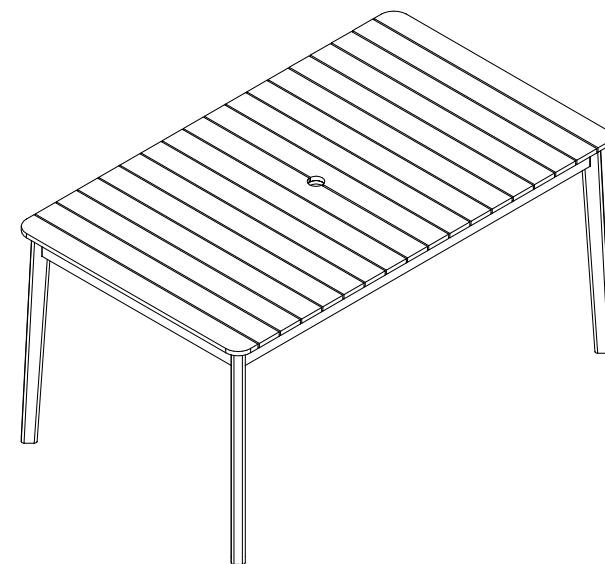

Step 2

Caution: This Table can only be used on a flat, level surface.

CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.

Remove wooden furniture from standing water. Dust regularly with small brush or vacuum

Spills should be taken care of immediately before they harden or

stain with a slightly dampened sponge.

NOTICE

* Please make sure that you have all parts indicated before you begin assembly of this item

* This item should be assembled on a soft surface to prevent scratching the finish during assembly

* This item may require periodic tightening

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Seat frame		1X
B	Leg		4X
C	Apron bar	 M8 X 60	8X
D	Pads washer	 8.5 X 14 x 2	8X
E	Iron washer	 8.5 X 20 x 2	8X
F	Allen key	 4 mm	2X

 **SAFAVIEH**
OUTDOOR

Weight Capacity : 300 Ibs


Warning : Do not stand on chair

Warning : Do not over torque bolts / screws



Model# PAT7082

Product Dimensions: 15" W x 50" D x 17.7" H

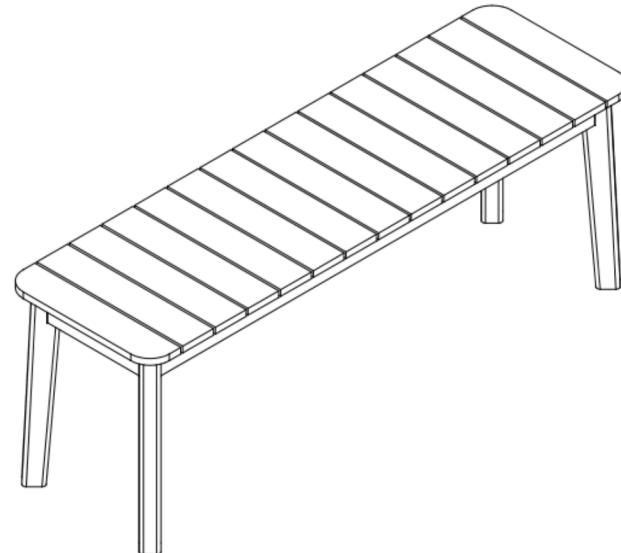


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 30 minutes.

Tools Required for Assembly (included): Allen Key


1

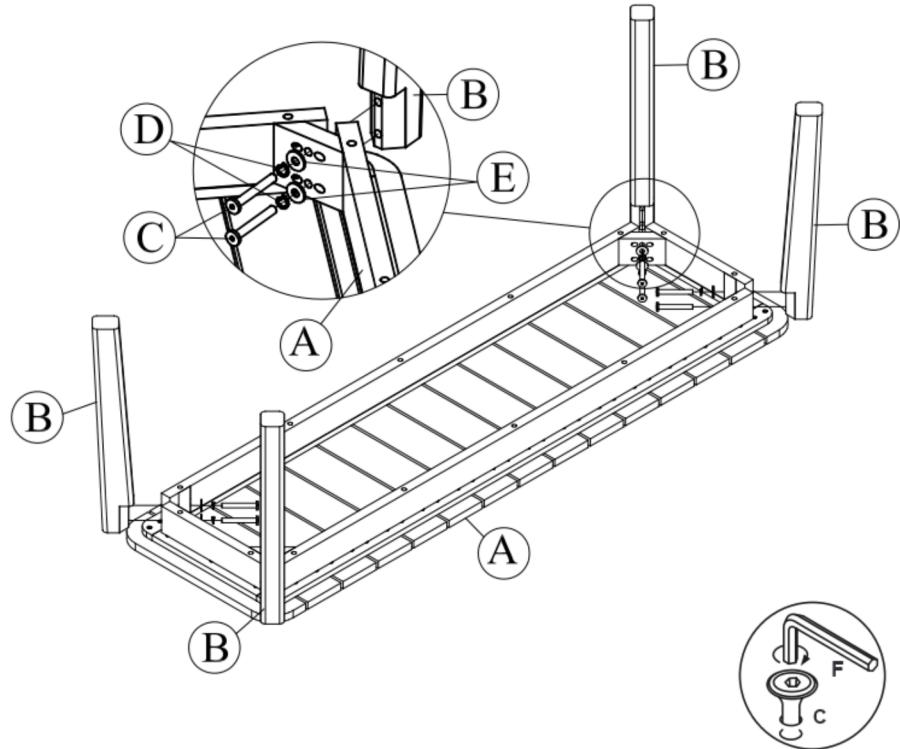

Step 1

Attached Leg (B) to Top table (A). Using Bolt (C), Pads washer (D) and Iron washer (E) tighten with Allen key (F).

2

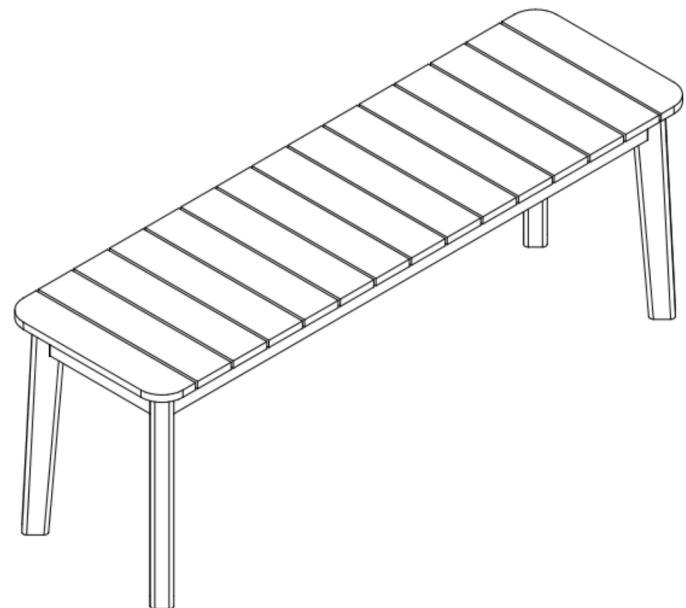

Step 2

Caution: This Chair can only be used on a flat, level surface.

CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.

Remove wooden furniture from standing water. Dust regularly with small brush or vacuum

 
 
Spills should be taken care of immediately before they harden or

stain with a slightly dampened sponge.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Seat frame		1X
B	Leg		4X
C	Apron bar	 M8 X 60	8X
D	Pads washer	 8.5 X 14 x 2	8X
E	Iron washer	 8.5 X 20 x 2	8X
F	Allen key	 4 mm	2X



Weight Capacity : 300 Ibs


Warning : Do not stand on chair

Warning : Do not over torque bolts / screws



Model# PAT7082

Product Dimensions:15" W x 50" D x 17.7" H

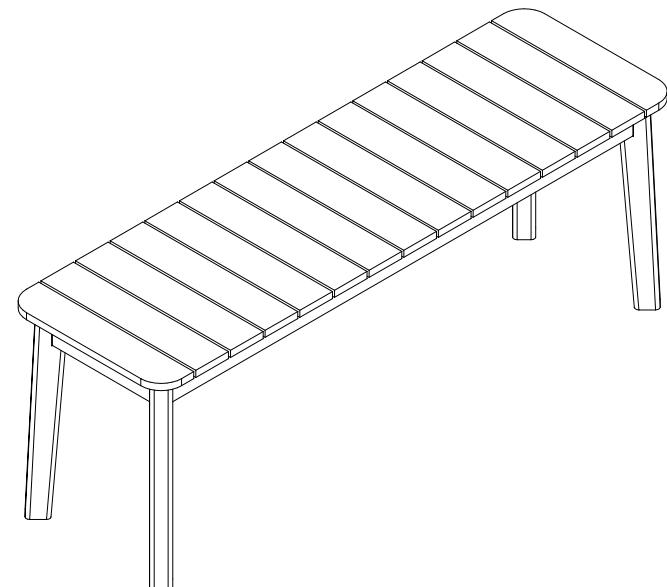


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 30 minutes.

Tools Required for Assembly (included): Allen Key


1

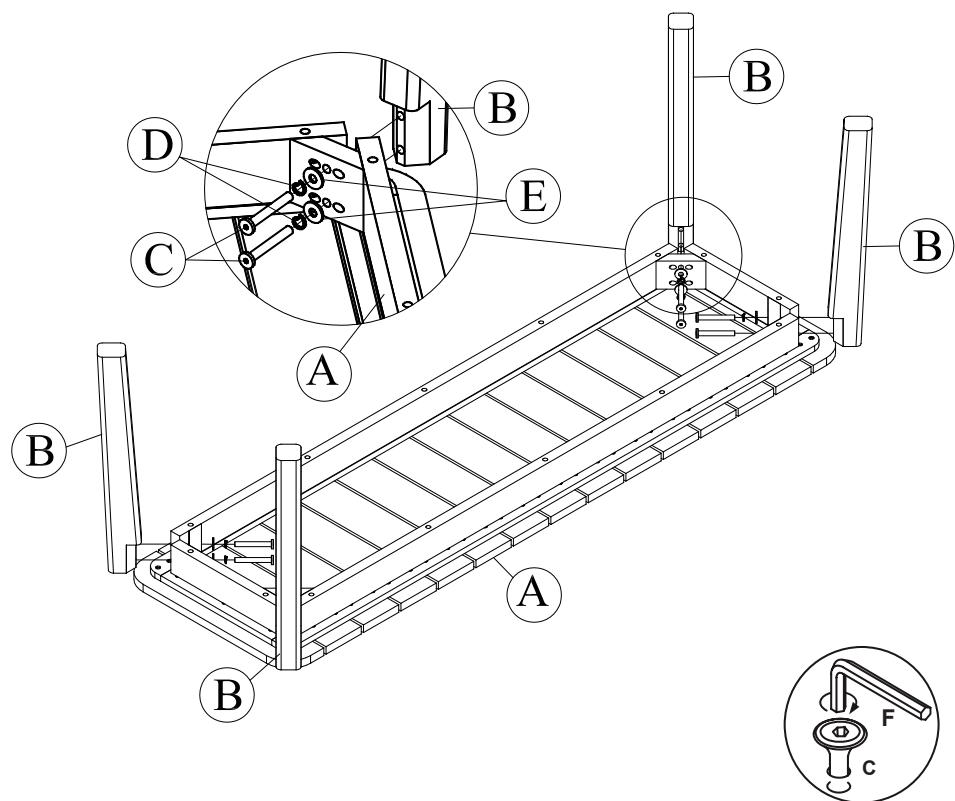

Step 1

Attached Leg (B) to Top table (A). Using Bolt (C), Pads washer (D) and Iron washer (E) tighten with Allen key (F).

2

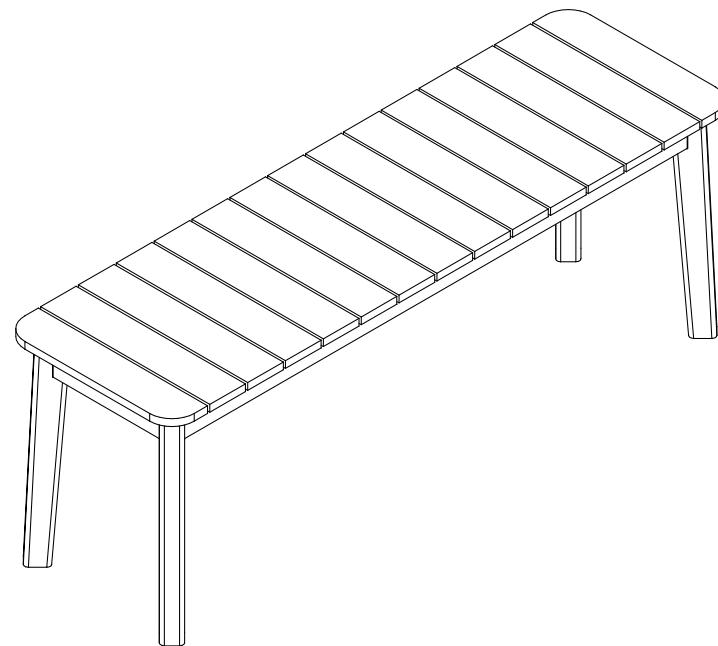

Step 2

Caution: This Chair can only be used on a flat, level surface.

CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.

Remove wooden furniture from standing water. Dust regularly with small brush or vacuum

Spills should be taken care of immediately before they harden or

stain with a slightly dampened sponge.

NOTICE

* Please make sure that you have all parts indicated before you begin assembly of this item

* This item should be assembled on a soft surface to prevent scratching the finish during assembly

* This item may require periodic tightening

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Top table		1X
B	Leg		4X
C	Bolt	 M8 X 60	8X
D	Pads washer	 8.5 X 14 x 2	8X
E	Iron washer	 8.5 X 20 x 2	8X
F	Allen key	 4 mm	2X

 **SAFAVIEH**
OUTDOOR

Weight Capacity : 300 Ibs


Warning : Do not stand on table

Warning : Do not over torque bolts / screws



Model# PAT7082

Product Dimensions: 35.4" W x 60.2" D x 29.1" H

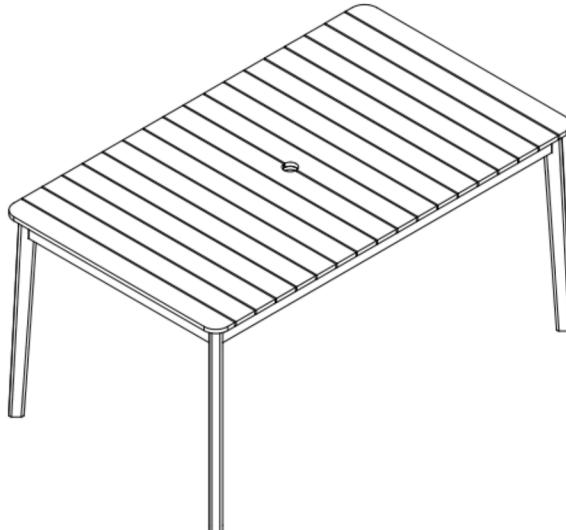


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 30 minutes.

Tools Required for Assembly (included): Allen Key


1

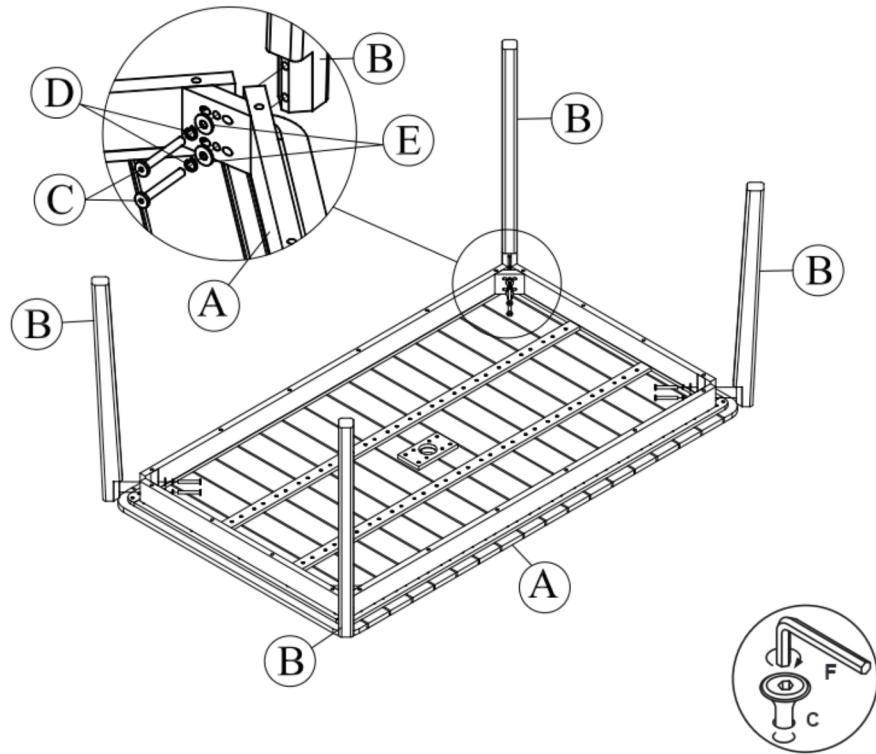

Step 1

Attached Leg (B) to Top table (A). Using Bolt (C), Pads washer (D) and Iron washer (E) tighten with Allen key (F).

2

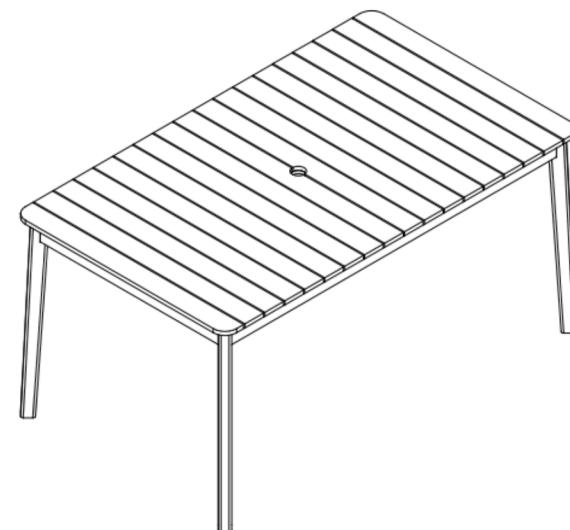

Step 2

Caution: This Table can only be used on a flat, level surface.