

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives.Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

NOTICE


- *Please make sure that you have all parts indicated before you begin assembly of this item
- *This item should be assembled on a soft surface to prevent scratching the finish during assembly
- *This item may require periodic tightening

Part List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	ACRYLIC LEG		4X
B	ACRYLIC KNOB		2X
C	SCREWS	 4X22	2X
D	BOLT	 M8X25	16X
E	WASHER		16X
F	ALLEN WRENCH		1X

SAFAVIEH
CO U T U R E


Item# SFV3574A
Product dimensions: 42.6"Wx18"Dx27.2"H

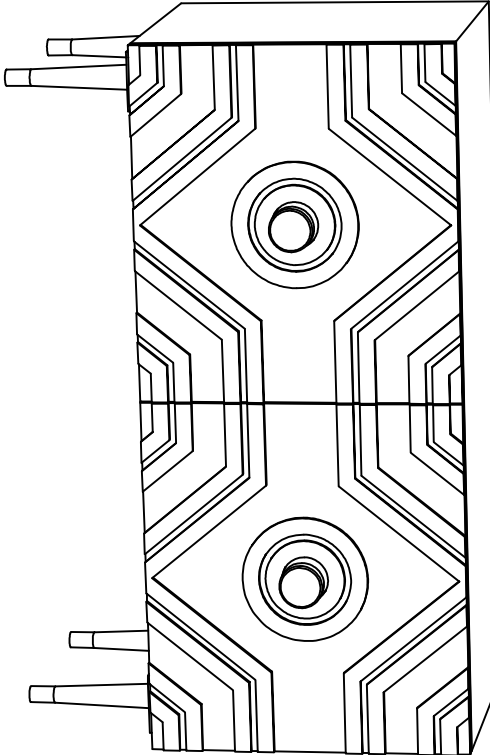

PREPARATION


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimate Assembly Time: 8 minutes

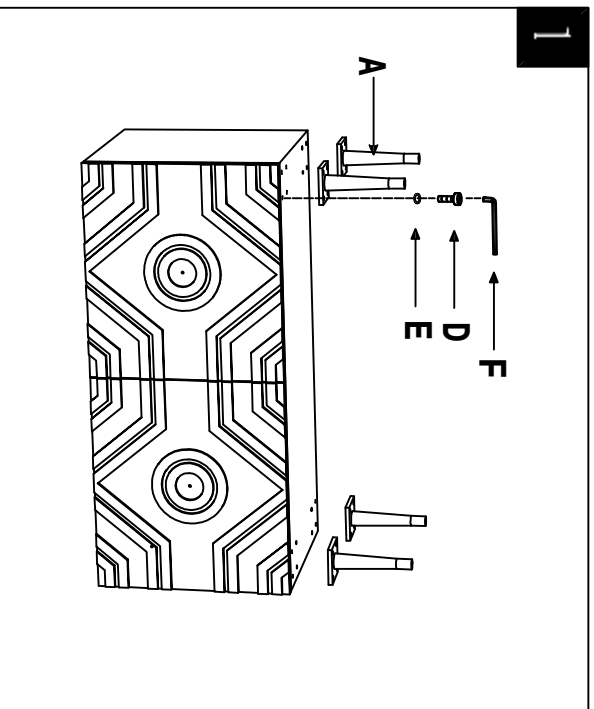

Step 1

Place the side board upside down and the bottom face up. Use the bolt and washer lock the acrylic legs .

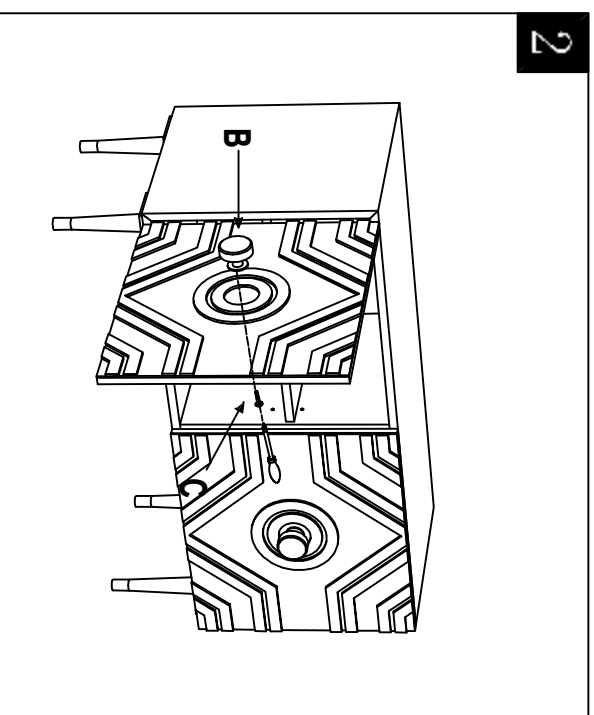

Step 2

Place the side board upright. Use the screws lock the knobs which are in the hardware bag onto the front of the drawer and door.