

WB0540


HANGING BAG

AUDIO CABINET

PACKING LIST

REF. NO.	ITEM NO.	QTY	DESCRIPTION
1	1	1	LEFT SIDE
2	1	1	RIGHT SIDE
3	1	1	BACK
4	1	1	VERTICAL DIVIDER
5	1	1	BOTTOM
6	2	2	KICKBOARD
7	1	1	TOP
8	1	1	BANNER
9	013-019	26	LARGE HEAD WOOD SCREW
10	013-008	4	SMALL HEAD WOOD SCREW
11	020-700	2	DOWEL

INSERT HARDWARE DRAWINGS

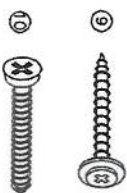

PHILIPS HEAD SCREWDRIVER NOT INCLUDED


SAFETY NOTE
The Whitney Bros. Co. products are designed for supervised use in pre-school or day care centers. The materials and workmanship meet all known safety requirements. It is as safe as we know how to make it. To prevent accidental tipping, we strongly recommend the product be attached to the back of the wall. It is the consumer's responsibility to follow the instructions and use the product in a safe manner consistent with its intended purpose.

WHITNEY BROTHERS
EDUCATIONAL FURNITURE FOR CHILDREN

For assistance, please call us toll free
1-(800)-225-5381
or visit us at
WWW.WHITNEYBROS.COM


ASSEMBLY INSTRUCTIONS

1. Read all the assembly instructions before starting to assemble the item.
2. Open the hardware pack, sort and identify the different fasteners you will be using.
3. Follow each step in order and make sure all fasteners are tightened when finished.
4. DO NOT use power drivers. It is too easy to over tighten or strip the fasteners with power tools!

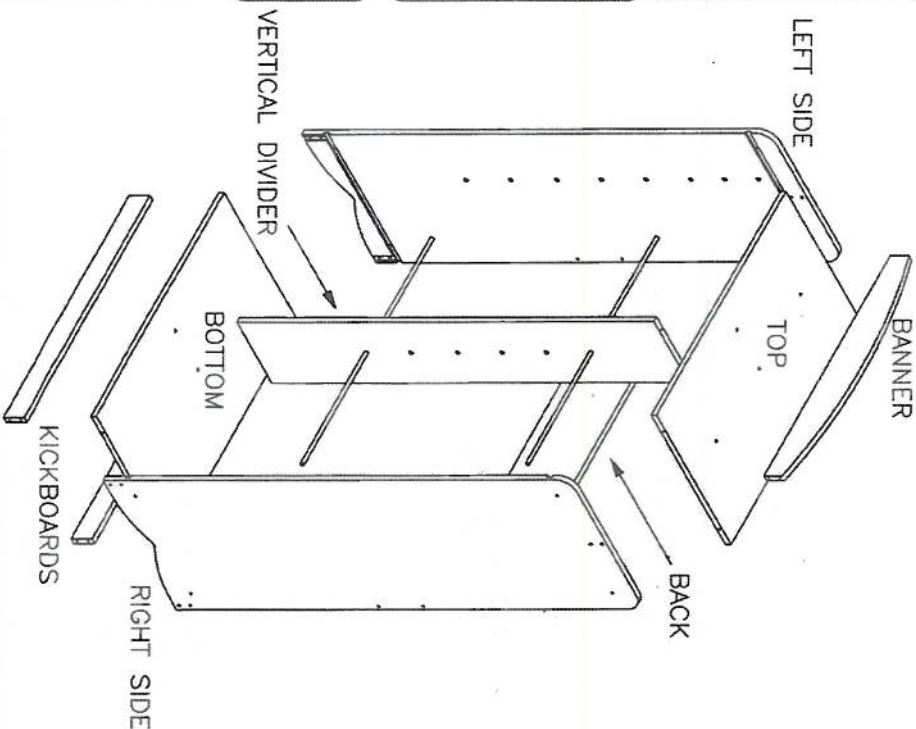

ASSEMBLY GUIDE STEP 1

1. Attach the vertical divider to the top and to the bottom with 4 small head screws (#10)
2. Attach the banner to the top with 2 large head screws (#9)

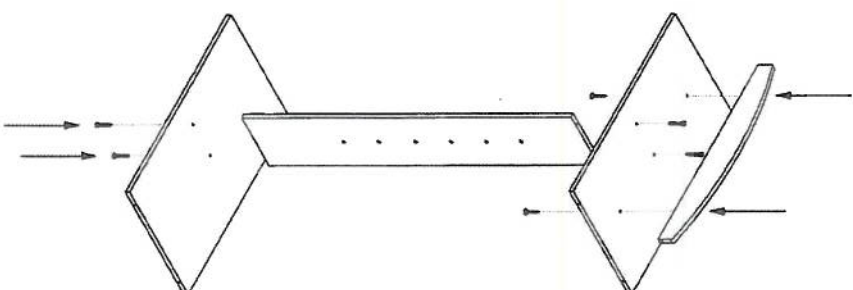


WB0540

HANGING BAG AUDIO CABINET


ASSEMBLY GUIDE STEP 2

3. Attach the top, bottom and banner to the left side with 6 large head screws (#9). Make sure that the holes for the dowels in the vertical divider are straight across from the holes in the left side before attaching.
4. Lay the cabinet down on the left side and slide the dowels through the vertical divider and into the hole in the left side (pick a set of holes that will allow you to hang your bags the way you like).
5. Attach the right side to the top, bottom and banner with 6 large head screws (#9).

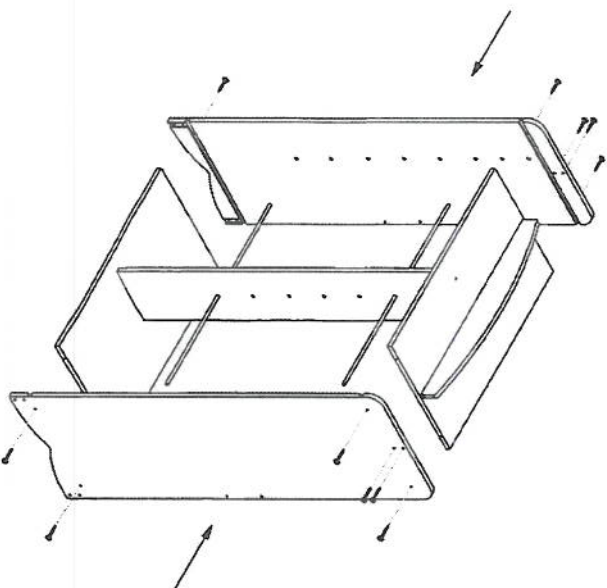


ASSEMBLY GUIDE STEP 3

6. Attach the back and kickboards to the right and left sides using 12 large head screws (#9).
7. Check that all screws are tight and stand the unit upright.
8. Hang your bags as desired, if the size of your bags change you may need to relocate the dowels. To do so, unscrew the right side and reinstall the dowels. Contact Whitney Brothers for replacement bags 800-225-5381.

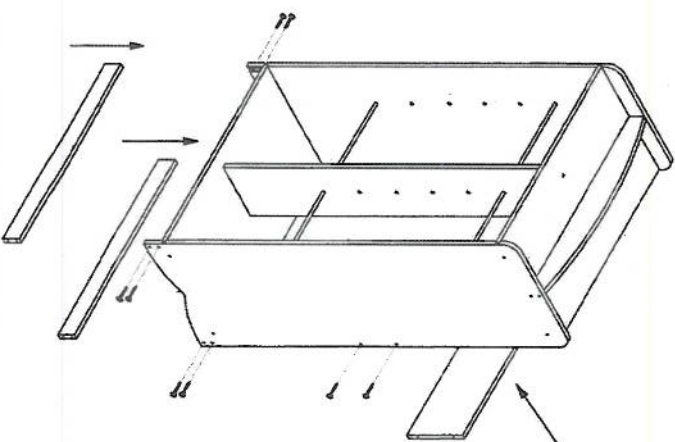

FULLY ASSEMBLED UNIT

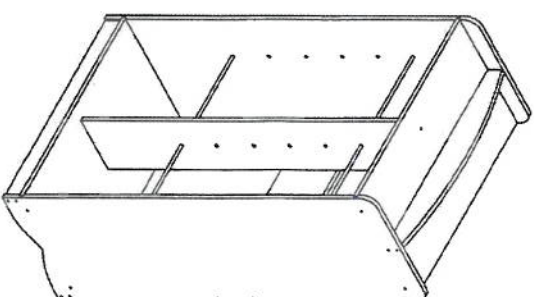

WHITNEY BROTHERS
EDUCATIONAL FURNITURE FOR CHILDREN

For assistance, please call us toll free
1-(800)-225-5381
or visit us at
WWW.WHITNEYBROS.COM