 

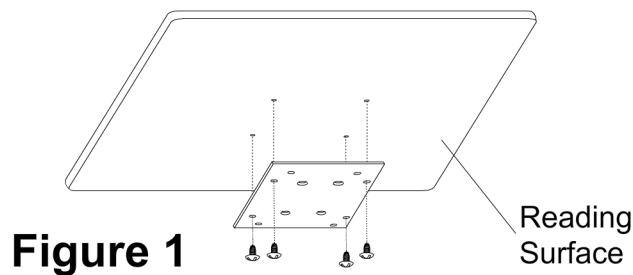



Tools Required

Philips screw driver 
 Allen Wrench (Included) 


Step 1: Lay reading surface upside down on a flat area. Attach plate to bottom side of reading surface using four screws. See **Figure 1**.




Step 2: Attach inner tube with slant pointing toward front, using four Allen screws, to the plate under reading surface. See **Figure 2**.

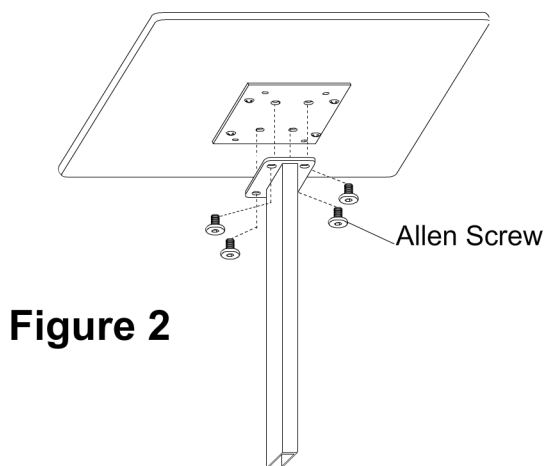

Step 3: Attach outer tube part A to part B and secure using bolt. Screw four glides into holes located in the bottom of part A and part B. See **Figure 3**.

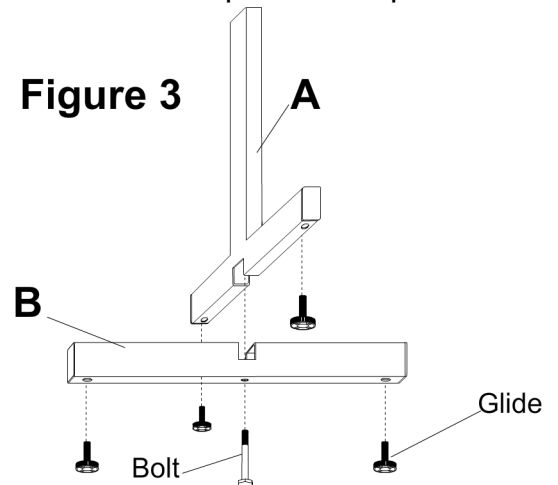

Step 4: Insert inner tube into outer tube. Screw Knob into insert located on the front of the outer tube and tighten well. See **Figure 4**.

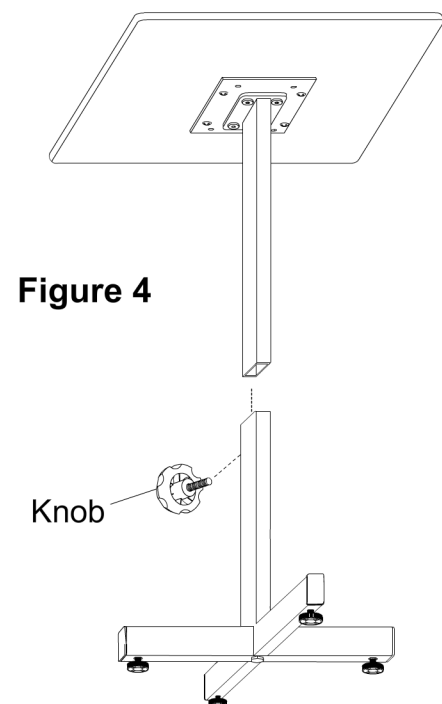

Height Adjustment: To adjust the height of the unit hold the inner tube with one hand and loosen the knob with the other hand. Set height at desired level and tighten knob.



OKLAHOMA SOUND CORP.

140 ENTIN ROAD, CLIFTON, NJ 07014
 TEL 973-594-1100 FAX 973-594-1500
 e-mail: info@NationalPublicSeating.com