



RGBW LED Light Remote

OWNER'S MANUAL

- RGBW LED Light Remote
(Item #652699)

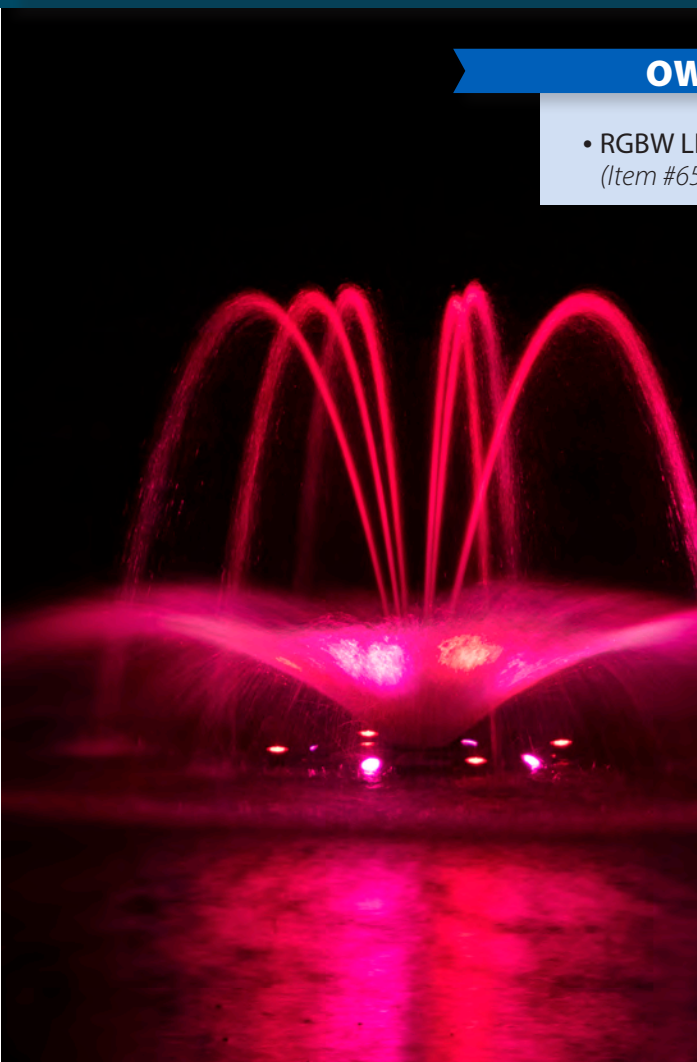


Table of Contents:

| | | | |
|-----------------------------------|---|----------------------------|---|
| Important Information | 2 | Maintenance | 4 |
| Technical Specs | 2 | Warranty Information | 4 |
| Pairing & Using Your Remote | 3 | | |

IMPORTANT INFORMATION

Please read these instructions thoroughly before use. Failure to follow instructions may result in equipment damage or failure, losses, injury or death.

⚠ CAUTION ⚠

To reduce the risk of equipment damage or failure:


- During freezing temperatures, remove and store inside.

IMPORTANT: Airmax, Inc. is not responsible for equipment damage or failure, losses, injury or death resulting from failure to follow safety precautions, misuse or abuse of equipment.

TECHNICAL SPECS

The Airmax Color-Changing RGBW LED Light Set is run by a wireless remote with a range of up to 200ft. The wireless remote allows you to change the color, dim/brighten the lights, control flash speed and run up to 9 preset programs.

Requires: 2 AAA Batteries (Included).

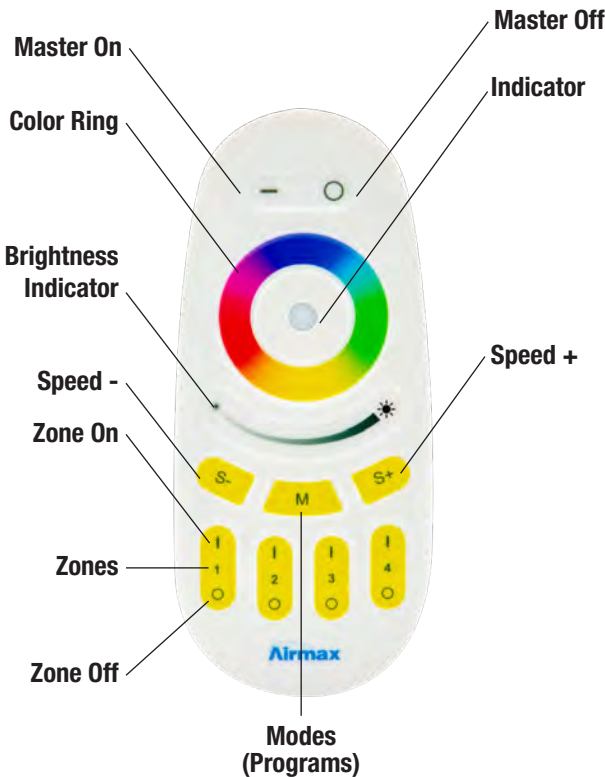

PAIRING YOUR REMOTE & FOUNTAIN

Step 1 Ensure you are within 8 feet from the light set you are trying to pair to.

Step 2 Choose which zone you want to assign the lights (1 to 4).

Step 3 Switch off the main power supply of the lights in the selected zone with the main switch or pull the plug from the socket.

Step 4 Switch the lights on again and within 3 seconds shortly press one of the "Zone On" buttons, one time, on the remote control.

Step 5 When the link operation is successful, the lights will slowly blink on and off 3 times.

BASIC CONTROL FUNCTIONS

- Press and Hold Master ON or ZONE ON for several seconds to turn all lights to white mode.
- Touch the color ring to adjust lights to any color.
- While in white or solid color mode, use the speed buttons to change the tone from cool to warm white or vibrant to pastel colors.
- Change the brightness by using the brightness slide ring.
- Adjust flash speed for any preset program using the speed buttons.

Preset Programs/Modes

Press the "M" Mode button to scroll through the pre-programmed light settings.

Program 1 - RGBW Fade In/Fade Out Fades in and fades out the color red, green, blue and white one after another.

Program 2 - Color Flash Red, green, blue, white, yellow and purple flashes.

Program 3 - Disco Multiple colors strobe and flash.

Program 4 - Red Color Ramp Up and Flash Red color brightens from 0%-100% and shuts down, then flashes three times.

Program 5 - Green Color Ramp Up and Flash Green color brightens from 0%-100% and shuts down, then flashes three times.

Program 6 - Blue Color Ramp Up and Flash Blue color brightens from 0%-100% and shuts down, then flashes three times.

Program 7 - Color Change and Flash Several colors fade into each other and then flash randomly.

Program 8 - Fade In/Fade Out Several colors fade into each other.

Program 9 - Strobe White White color flashes.

MAINTENANCE

- Replace batteries as needed.
- Store indoors during freezing temperatures

WARRANTY

Airmax RGBW LED Light Remotes carry a 1-year warranty. Airmax will repair or replace any remote found to be defective. This limited warranty is extended exclusively to the original purchaser and begins from the date of original shipment. Abuse, misuse or alterations of this product void all warranty. Please contact your local dealer to obtain a Return Merchandise Authorization (RMA) Number prior to returning any product. Failure to request an RMA number may result in delay or dismissal of your warranty claim.

THANK YOU FOR CHOOSING:

Airmax, Inc.
Safe, Simple Solutions™
P.O. Box 38
Romeo, MI 48065
866-424-7629
www.airmaxeco.com

#651138 V2