

- Cautions**
- Never immerse digital camera binocular into any fluid or liquid.
  - Remove dust or stains with a soft cloth dampened with water or gentle detergent. Keep in a dry and cool dust-free environment when it is not used.
  - Avoid dropping the digital camera binocular. Do not disassemble digital camera binocular.

**Usage of the battery**

- Please always use Alkaline Battery(AAA Alkaline Battery)
- Please remove batteries when not using your digital camera binocular for long periods of time.

**About usage**

- To avoid damage do not use the digital camera binocular under the following conditions.
  - 1.Places in temperature higher than 100°F(35°C)
  - 2.Damp or dusty places
  - 3.Places with strong electromagnetic field.
- Please do not disassemble or repair the product to avoid malfunction.

**1. Introduction**

Your Vista Pix is a binocular integrated with a digital camera that is great for sporting events, concerts and wildlife activities such as hunting or bird-watching. Vista Pix lets you record memories and sights at the touch of a button. Use the full-featured binocular for closer views and capture images to take home with you at the same time. Vista Pix makes it possible to share your fun with others by downloading images from the camera right to your computer to e-mail to your friends and family.

**2. Notice to User**



**Never use a digital camera binocular to look at the sun!**  
Looking at or near the sun will cause instant and irreversible damage to your eye. Eye damage is often painless, so there is no warning to the observer that damage has occurred until it is too late. Do not point the binocular at or near the sun.  
Children should always have adult supervision while observing.



**4. Instant images transfer using**

Use the USB cable to connect PC to binocular. The LED light will light up.

- 1.Double click "MY COMPUTER" icon on the PC desktop.
- 2.You will find two removable discs; the first one is the internal 16MB flash memory; the second one is SD card memory.



3.Click \DCIM\100MEDIA\file

 


4.Select images and drag to your PC to complete pictures transfer.


※ Or, you can also refer to transfer images from PhotoExpress.



- 2-1. When no action is performed with your binocular, the digital camera will automatically turn off after 90 seconds. (default setting)
- 2-2. The digital camera binocular has a battery level display in the right lower corner of the LCD. When the battery is low you will hear a long "beep". If no action is taken, digital camera binocular will automatically turn-off after 10 seconds.
- 2-3. Please use alkaline battery for this product.
- 2-4. Digital camera binocular comes with a sd card slot that enables you to expand the memory. To install an optional sd card:  
Open the cover of the sd card slot and install the card (with the gold strips facing up) into the sd card slot (7) until it clicks into the position.

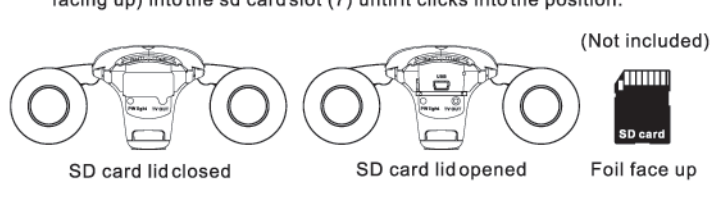

**3. Product Identification**

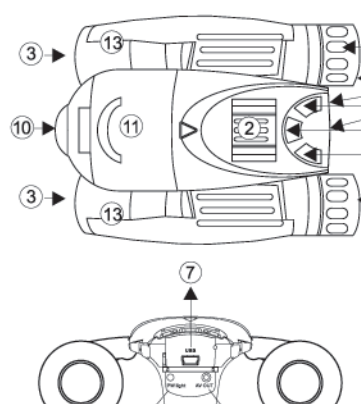 

1. Diopter Knob (on underside)
2. Center Focus Knob
3. Objective Lens
4. Power/Menu Button
5. Shutter/OK Button
6. Movie/Delete Button
7. USB Port/SD card slot
8. TV out port
9. Eyepiece
10. Camera Lens
11. LCD Screen
12. Battery Compartment Lid
13. Barrel
14. Power light

**5. System operation**

**6. Using the Camera**

Use this product under good lighting conditions, avoid facing light source directly. Remember to keep a distance of at least 49 feet (15 meters) away from the target when taking a photo. As you press the "Shutter/Set" button, hold the binocular very steady until you hear a "Beep" sound. If the binocular is unsteady, the camera will not focus well and blurred images will result.

- 6-1 Turn on the power by pressing **Play back** button for 3 seconds and you will hear two beep sounds. The monitor will display picture number and resolution. Press again for three seconds to power off.
- 6-2 Press Up-down button  $\blacktriangle/\blacktriangledown$  to zoom in and out. It can magnify the image up to 32x as seen on the LCD display.
- 6-3 Press the Shutter button  $\square$  to take pictures. Shooting is completed when you hear a beep sound.
- 6-4 Press the Movie button  $\text{Ⓜ}$  and a beep sound will signal that recording has begun. The green power indicator light will blink while recording is in progress. Press the Movie button  $\text{Ⓜ}$  again to stop recording.



Function	Button	ITEMS
1		Power / menu
2		Movie / delete
3		Shutter / OK
4		Zoom in / up
5		Zoom out / down

**Monitor**

NO	INDICATORS	ITEMS
1		Number of Images Remaining
2		Image resolution ☆ 1.3MP ☆☆ 2.0MP ☆☆☆ 3.0MP Interpolated
3		Time stamp
4		Movie mode
5		SD card mode
6		Auto shutter mode
7		Battery level
8		Memory gauge

(Play back mode)  
Press the Menu button  $\text{Ⓜ}$ , select "Play back" and press Shutter button  $\square$ . Use Up-Down button  $\blacktriangle/\blacktriangledown$  to select the pictures, press Shutter button  $\square$  to display the picture in full screen. Press the Shutter button  $\square$  again to return to a menu of nine thumbnail images.



**Erasing Pictures**

Press the delete button  $\text{Ⓧ}$  while the thumbnail menu or full-screen image is displayed. Select "Erase one" and press OK button  $\square$  to erase a single frame. Select "Erase all" and press OK button  $\square$  to erase all frames.



 
**Auto shutter mode(Timer)**

Press the Menu button  $\text{Ⓜ}$  and select "Auto shutter". Press the Shutter button  $\square$  again to take an image automatically after 10 seconds.




**Time stamp on photo**

Time stamp on photo from setting menu, press OK button  $\square$ , select ON to display time on photo. OFF to skip time on photo. Press OK button  $\square$  again to complete the setting.




**Beep Sound**

Select "Beep" from setting menu. Press OK button  $\square$ , select ON to turn on the beep sound. OFF to turn off the beep sound. Press OK button  $\square$  to complete the setting.

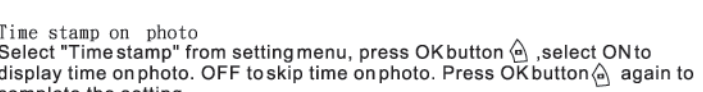


**Auto power off**

 Auto power off allows you to select the duration of time that your digital camera binocular can be inactive before it automatically powers itself down. Select "Auto power OFF" from setting menu, press OK button  $\square$ , select the indicated time of auto power inactivity shutdown. Press OK button  $\square$  again to complete the set-up.




**Formatting**

Select "Format" and press OK button  $\square$ . When you choose "Yes" and press Shutter button  $\square$ , a confirmation screen is displayed. Press Shutter button  $\square$  to start formatting the internal memory or SD card. Warning — all stored image will be erased after formatting is complete.

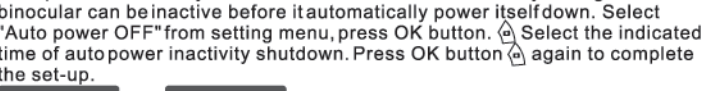

**Reset**

Select "Reset" from setting menu, press OK button  $\square$  to make the selection. Select "Yes" to return the original factory setting. Select "No" to retain the current settings. Press OK button  $\square$ , to complete the set-up.

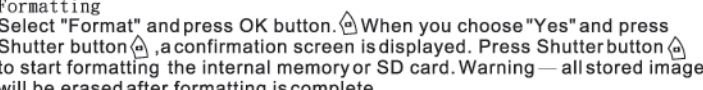

**8. System requirements**

- 8-1.Windows 98SE / 2000/ ME / XP
- 8-2.Pentium 233MHz or higher
- 8-3.128MB SD RAM
- 8-4.Video(VGA) Card with 2MB of RAM for minimum 16-bit(High Color)display.
- 8-5.CD-ROM
- 8-6.USB port
- 8-7.600MB of free hard disk space.

**Installation of driver**

Since digital camera binocular is a Mass Storage Device you can access captured images Just as if it were a hard drive, therefore no software driver is needed (See Mass Storage Mode ).If using digital camera binocular with an older version of Windows 98SE it may be necessary to install the software Driver.



**9. Basic maintenance**


Operating Environment: 41° to 104°F (5° to 40°C). 20%-85% relative humidity, non-condensing.

**Care of your digital camera binocular**


- 9-1.Never immerse digital camera binocular into any fluid or liquid. Remove dust or stains with a soft cloth dampened with water or gentle detergent. Keep in a dry and cool dust-free environment when not in use.
- 9-2.Take the batteries out when digital camera binocular is not to be used over a long period.
- 9-3.Avoid dropping the digital camera binocular. Do not disassemble digital camera binocular.

**Steps to install Photo Express**

1. Insert the CD ROM.
2. Select "Install Photo Express".
3. Choose the language and press "Confirm" button.

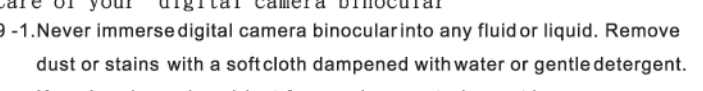

4. Enter installing window.

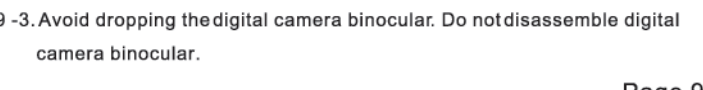

5. After confirming, press "Next" button.



6. Press "Next" button to confirm.




7. The serial number is indicated on the front of the CD cover. Insert the number and press "Next" button.



**Steps to install digital camera binocular driver**

- 1.Before you install the driver, please do not use the USB cable to connect the product to the computer.
- 2.If you have windows ME/ 2000/ XP operation system installed in your computer, you should not need to install the digital camera binocular driver. Simply view and save images through your My Computer icon.
3. Begin "InstallShield Wizard" and your computer will automatically execute the installation of driver program.

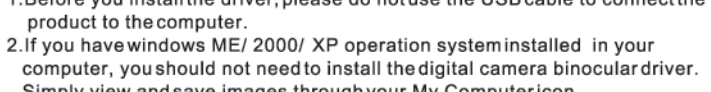

4. Follow the "InstallShield Wizard" steps to guide you through the driver installation. Click on "Next" when complete.



5. Computer will automatically install the driver.



6. If the "Microsoft digital sign" request appear on the screens as you are installing the driver, please press "Yes" button to continue installing.



7. Installation complete. Please press "Finish" button.



※ After installing digital camera binocular driver. Please restart your computer.

**Steps to install Photo Express**

8. Please confirm the file location.
9. Press "Next" button to confirm.



10. After confirming, press "Next" button.



11. Begin installing software.



12. After confirming, press "Next" button.



13. Press "Finish" button when Software installation completed.



**Steps to download image file**

1. Click Upload Photo Express 5 SE. Choose the folder where you want to save the images. Click "Get Photo" and select "digital Camera".
2. Select "digital" to download the images from the built-in memory. Or select "Binocular" click "Get Photo" and select "digital Camera", to download images from SD card. Press "Start" to download images.



3. Double click the photo to start editing.




4. Click "Edit" bar and select the editing feature.



※ If you have further question, please visit Ulead website directly <http://www.ulead.com/>

**Viewing (Video Camera) recorded images on PC**

1. Use the USB cable to connect the USB port from PC to digital camera binocular. After connection "PC" displays on LCD.
2. Double click "MY COMPUTER" on the PC's desktop.
3. Double click "Removable Device".

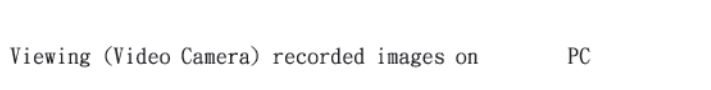

4. Open \DCIM\100scope\



5. Select the video file (\*.AVI) and double click it, the images will play through the "Windows Media Player" software or other software.



In order to use Windows Media Player to view the video AVI file taken with your digital camera binocular, the computer viewing the AVI file needs to be running Microsoft DirectX version 8.0a or later. If you experience problems viewing AVI files from Media Player you can upgrade DirectX to the most current version by going to the Microsoft DirectX Web Page at: [www.microsoft.com/windows/directx/default.aspx](http://www.microsoft.com/windows/directx/default.aspx)

Follow the download instructions given on the web site. The download is free.

**Steps to view TV images**

1. TV and dedicated video cable.
2. Plug the dedicated Video cable into the TV out port of digital camera binocular.



3. Connect the dedicated Video cable to AV terminal of the TV (video side).



4. Press power button. The screen will jump to browsing screen.



5. Press Up-down button to view images on TV.



! If the TV-out mode doesn't function normally, please check and make sure that (1) The battery power is adequate (2) The TV default is appropriate (NTSC or PAL)

  
  
**8x32 Binocular & Digital Camera**  
Model #72214 & #72215  
User Guide