

## Poster Removal Guide

Install the wind strap. Install the anchor bolts. Then install the wind-strap to the anchor bolts on the left and right. Then install the 4 vertical straps to the bottom anchors.



Loosen the cinch strap.



5/19/2008

Using the pole tool, take the cable off the top, middle guide and then the rest of the guides along the top and the two upper guides on the top left and top right.

Remove the clips and take the cable off the rest of the cable guides from the bottom half of the Eco-Poster (all clips within reach on the left side, all along the bottom, and all clips within reach on the right side)

Lower the poster to remove the remaining clips. Do this by disconnecting one end of the cable from the cinch strap and snap it to the wind-strap. Then slide the cable along the wind-strap to lower the poster.

Repeat this on the other end of the cable to drop the poster to a workable height.

Remove all remaining clips (i.e., all clips on the top half of the poster)

The poster will fall down and be caught w/ the wind straps.

Now take and “stuff” the loose poster into a take-up bag.



As you move along the catwalk and stuff the poster, you will need to unclip the 4 vertical wind straps and reconnect them after moving past.

Now the poster is removed.

Now that the old poster has been removed, you will likely do one of the following:

- If you have a new poster, install it now per the Poster Installation Guide.
- If you are going to do a wet-posting, remove the clips and cable prior to doing so in order to preserve these parts and protect from the glue. Remove the wind-strap and anchor bolts.
- If you are going to leave the cable and clips but not install another poster at this time, reinstall the cable over the top cable guides (using the pole) and side guides and tighten the cinch strap. Remove the wind-strap and anchor bolts.