




This assembly manual contains important safety information. Please read and keep for future reference.

Model No.: OS139TKE

Description: 48" Square Conference Knife Edge Top

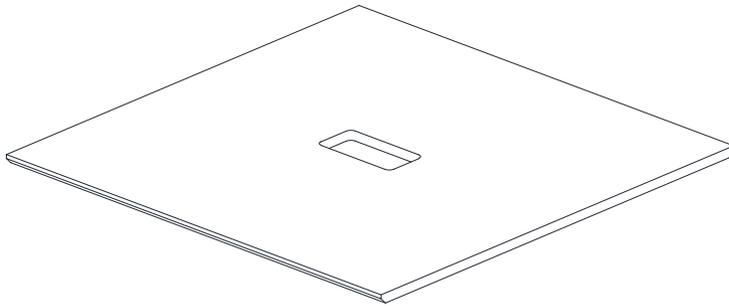

Useful Hints Before You Start

1. Read each step carefully before starting.
2. Before beginning assembly, identify, sort and count the parts before assembly.
3. Using the wrong screw will cause damage.
4. Using incompatible hardware might cause damage to product.
5. It is important that each step is performed in correct order to avoid difficulties.
6. Assemble your furniture on packaging cardboard to prevent scratch or damage.
7. Do not tighten any screws or bolt until the unit is completely assembled.
8. Keep all hardware parts out of reach of children.

Necessary Tools



Phillips
Screwdriver



Flat Head
Screwdriver



Hammer










CAUTION!
Risk of product damage.
Power Drill can be used on
lowest torque setting.





Please read completely through the instructions and verify that all listed parts and hardware are present before beginning assembly.



Parts List

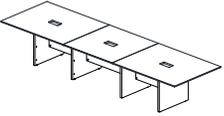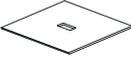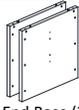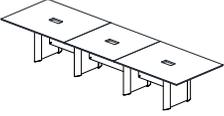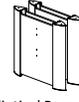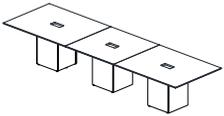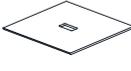 See Page 3	1  Top Panel (1x) OS139TKE	2  Top Panel (2x) (Sold Separately) OS437THALFKE	3  Modesty Panel (1x) (Sold Separately) OS39MOD1	4  Modesty Panel (2x) (Sold Separately) OS39MOD2	5  End Base (2x) (Sold Separately) OS3678EP2	6  Center Base (2x) (Sold Separately) OS389CP1	
	 See Page 4	1  Top Panel (1x) OS139TKE	2  Top Panel (2x) (Sold Separately) OS437THALFKE	7  Modesty Panel (1x) (Sold Separately) OS39ELPMOD	4  Modesty Panel (2x) (Sold Separately) OS39MOD2	8  Elliptical Base (2x) (Sold Separately) OS36ELPBASE2	9  Center Elliptical Base (2x) (Sold Separately) OS389ELPCENTP1
 See Page 5		1  Top Panel (1x) OS139TKE	2  Top Panel (2x) (Sold Separately) OS437THALFKE	10  Cube Base (3x) (Sold Separately) OSCUBED20	 See Page 5		1  Top Panel (1x) OS139TKE

Hardware List

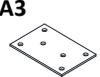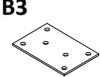Hardware in OS139TKE A1  L-Bracket (5x)			A2  #6 x 5/8" Screw (56x)			A3  Metal Plate (6x)			Hardware in OS437THALFKE B1  L-Bracket (6x)			B2  #6 x 5/8" Screw (36x)			B3  Metal Plate (2x)						
Hardware in OS3678EP2 C1  Cam Bolt (10x)							C2  Cam Lock (10x)		C3  Round Sticker (22x)		C4  Adjustable Glide (4x)		C5  L-Bracket (4x)		C6  #6 x 5/8" Screw (16x)		C7  Allen Key (1x)				
Hardware in OS389CP1 D1  Cam Bolt (6x)							D2  Cam Lock (6x)		D3  Round Sticker (12x)		D4  Adjustable Glide (2x)		D5  L-Bracket (4x)		D6  #6 x 5/8" Screw (16x)		D7  Allen Key (1x)				
Hardware in OS36ELPBASE2 E1  Cam Bolt (6x)								E2  Cam Lock (6x)		E3  Round Sticker (12x)		E4  Adjustable Glide (4x)		E5  L-Bracket (4x)		E6  #6 x 5/8" Screw (16x)		E7  Allen Key (1x)		E8  M4 x 20MM Screw (16x)	
Hardware in OS389ELPCENTP1 F1  Cam Bolt (4x)								F2  Cam Lock (4x)		F3  Round Sticker (4x)		F4  Adjustable Glide (4x)		F5  L-Bracket (4x)		F6  #6 x 5/8" Screw (16x)		F7  Allen Key (1x)		F8  M4 x 20MM Screw (8x)	
Hardware in OSCUBED20 G1  JCBC Screw M6 x 40mm(8x) 1/4 Washer(8x)				G2  Allen Key (1x)																	



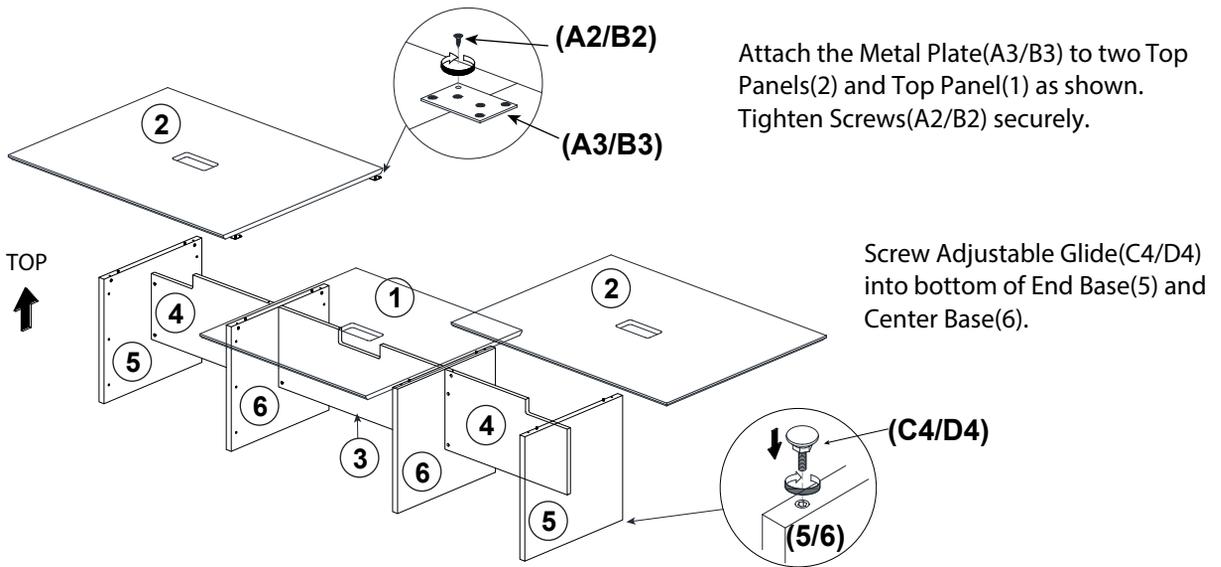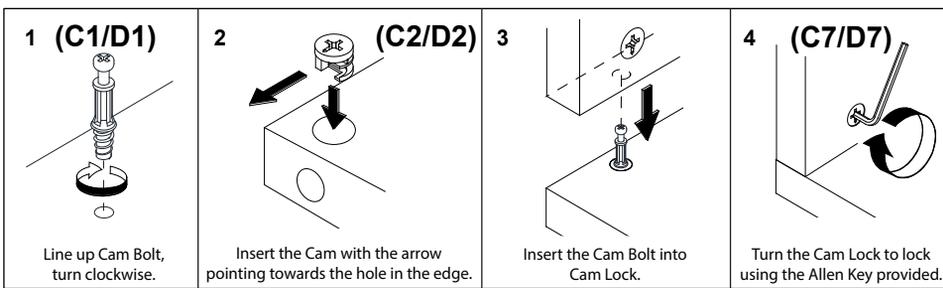


Attach the Metal Plate(A3/B3) to two Top Panels(2) and Top Panel(1) as shown. Tighten Screws(A2/B2) securely.

Screw Adjustable Glide(C4/D4) into bottom of End Base(5) and Center Base(6).

Attach Center Base(6) to Modesty Panel(3) by using Cam Bolt(C1/D1) and Cam Lock(C2/D2). Attach Modesty Panel(4) to Center Base(6) by using Cam Bolt(C1/D1) and Cam Lock(C2/D2).

Attach End Base(5) to Modesty Panel(4) by using Cam Bolt(C1/D1) and Cam Lock(C2/D2).



Attach Top Panel(1) & Top Panel(2) to Center Base(6), End Base(5) & Modesty Panel(3/4) by using Cam Bolt(C1/D1) and Cam Lock(C2/D2).

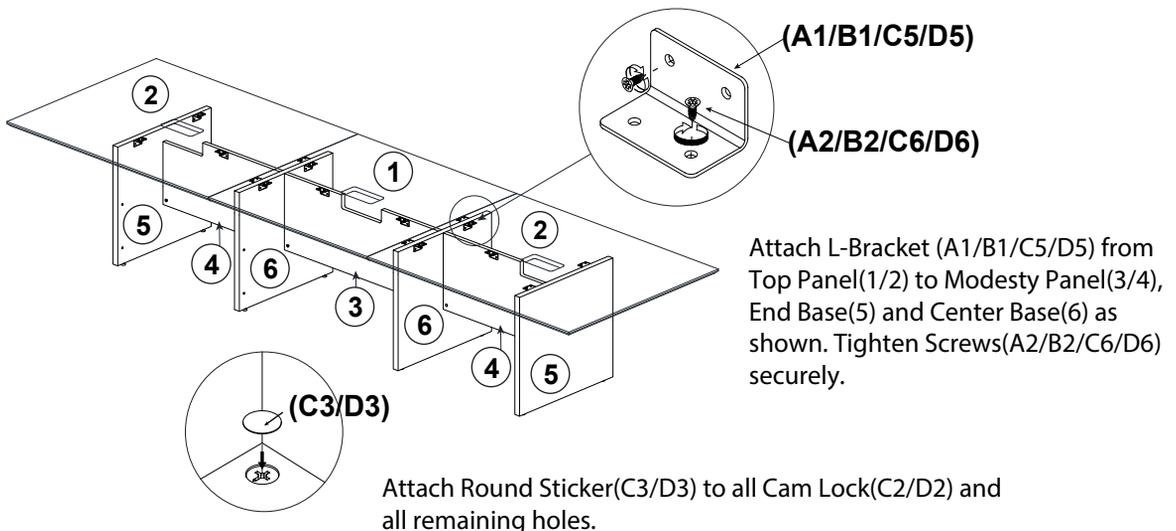


Attach L-Bracket (A1/B1/C5/D5) from Top Panel(1/2) to Modesty Panel(3/4), End Base(5) and Center Base(6) as shown. Tighten Screws(A2/B2/C6/D6) securely.

Attach Round Sticker(C3/D3) to all Cam Lock(C2/D2) and all remaining holes.



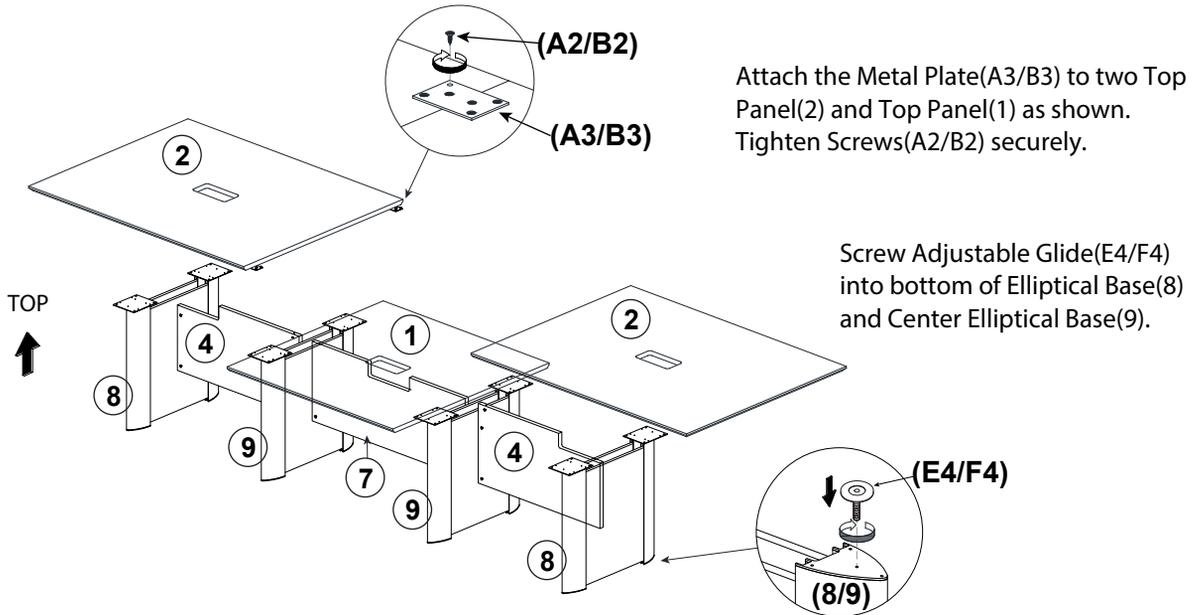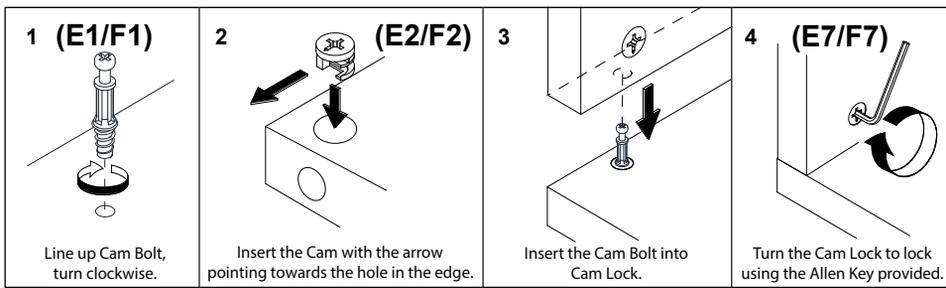

- Attach Center Elliptical Base(9) to Modesty Panel(7) by using Cam Bolt(E1/F1) and Cam Bolt(E2/F2).
- Attach Modesty Panel(4) to Center Base(9) by using Cam Bolt(E1/F1) and Cam Lock (E2/F2).
- Attach Elliptical Base(8) to Modesty Panel(4) by using Cam Bolt(E1/F1) and Cam Lock(E2/F2).
- Attach Top Panel(1) & Top Panel(2) to Center Elliptical Base(9), End Base(8) & Modesty Panel(4/7) by using Screw(E8/F8).

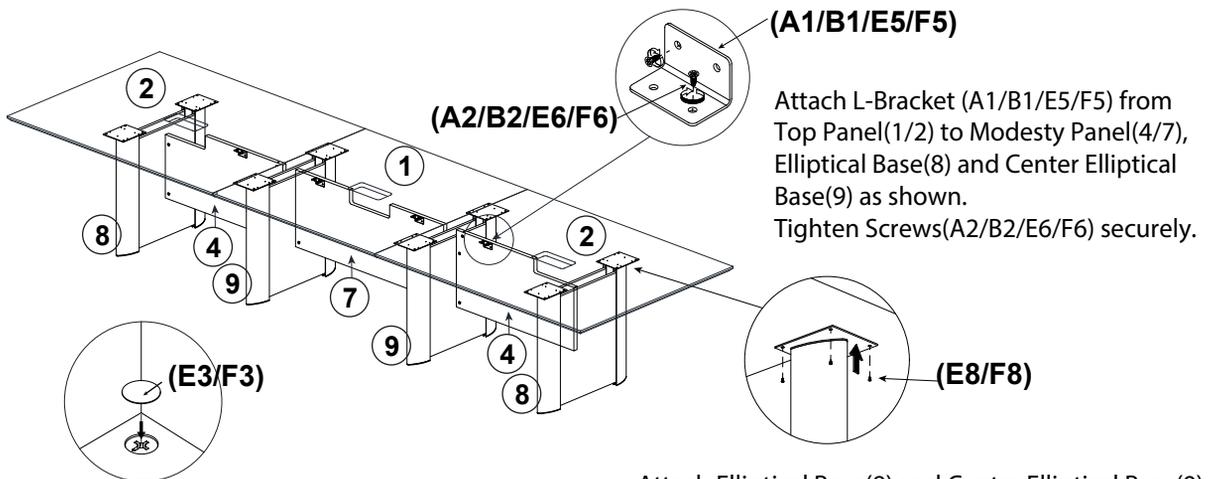


Attach Round Sticker(E3/F3) to all Cam Locks(E2/F2).

Attach Elliptical Base(8) and Center Elliptical Base(9) to Top Panel(1/2) by using Screws(E8/F8).




1

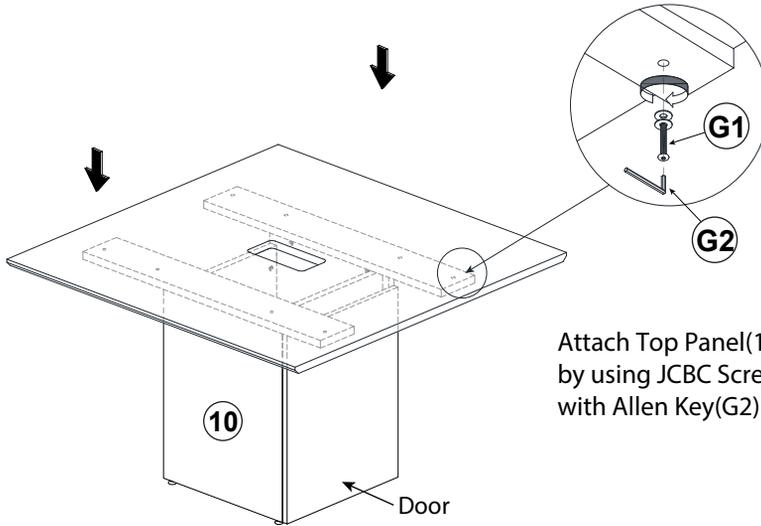


Attach Top Panel(1) to Cube Base(10) by using JCBC Screw(G1) and tighten with Allen Key(G2).

2

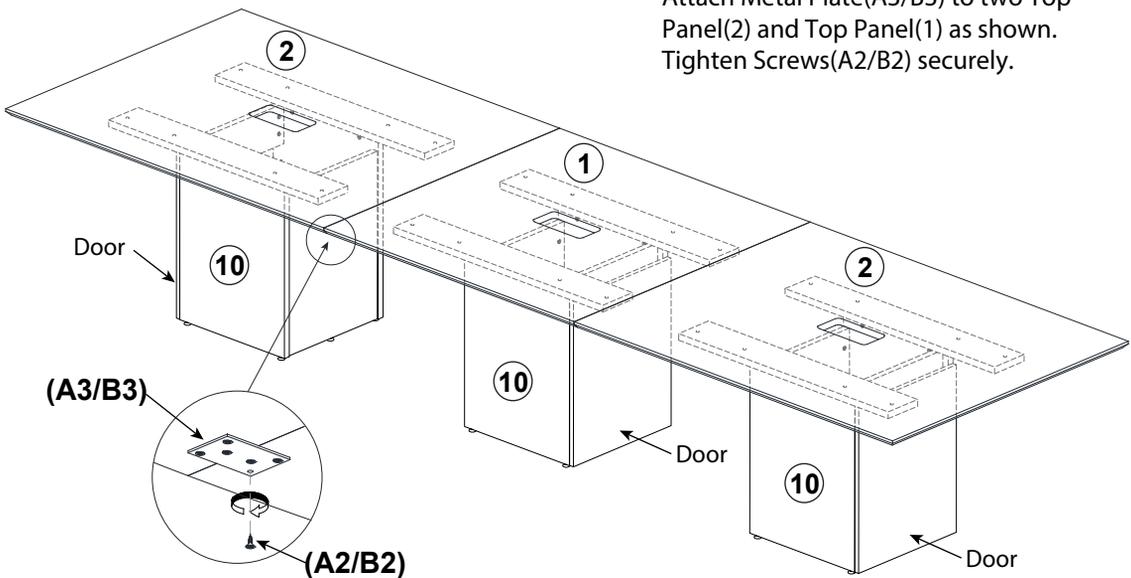

Attach Metal Plate(A3/B3) to two Top Panel(2) and Top Panel(1) as shown. Tighten Screws(A2/B2) securely.



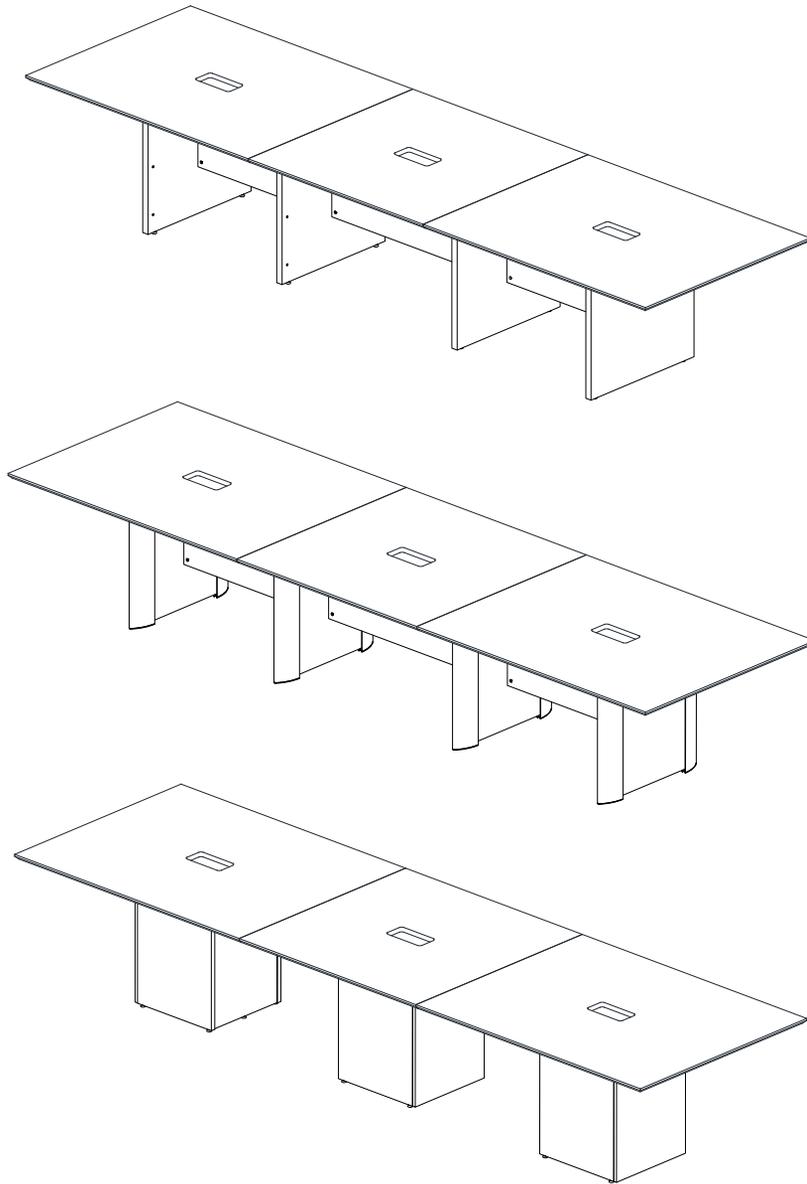

Care & Maintenance

- Check bolts/screws periodically and tighten them if necessary.
- Use a soft, clean cloth that will not scratch the surface when dusting.
- Clean the product with mild cleanser using soft damp cloth. Do not use harsh or abrasive cleanser.
- Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently.
- Heat can cause chemical changes that may create spotting within furniture finish.
- It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.