




This assembly manual contains important safety information. Please read and keep for future reference.

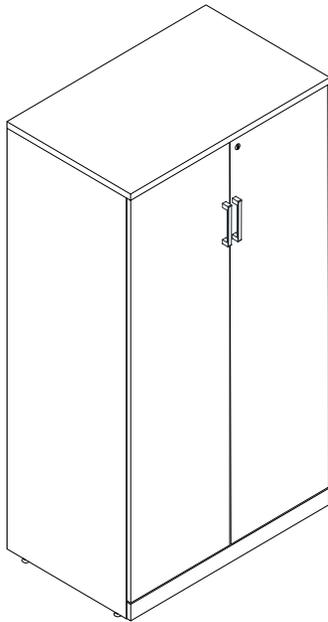

Model No.: OS151A/B

Description: Storage and Wardrobe Cabinets

Useful Hints Before You Start

1. Read each step carefully before starting.
2. Before beginning assembly, identify, sort and count the parts before assembly.
3. Using the wrong screw will cause damage.
4. Using incompatible hardware might cause damage to product.
5. It is important that each step is performed in correct order to avoid difficulties.
6. Assemble your furniture on packaging cardboard to prevent scratch or damage.
7. Do not tighten any screws or bolt until the unit is completely assembled.
8. Keep all hardware parts out of reach of children.

Necessary Tools



Phillips
Screwdriver



Flat Head
Screwdriver



Hammer


 
 
 



CAUTION – Risk of product damage!
Power Drill can be used on lowest torque setting.










Please read completely through the instructions and verify that all listed parts and hardware are present before beginning assembly.






Hardware List
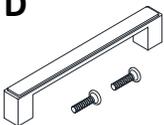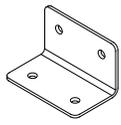
<p>A</p>  <p>Cam Bolt (15x)</p>	<p>B</p>  <p>Cam Lock (15x)</p>	<p>C</p>  <p>Round Sticker (15x)</p>	<p>D</p>  <p>Metal Handle(2x)</p>	<p>E</p>  <p>Door Hinges(6x)</p>	<p>F</p>  <p>Door Lock with L Bracket (1x)</p>	<p>G</p>  <p>Door Stopper (1x)</p>
<p>H</p>  <p>Screw M4 x 16mm (39x)</p>	<p>I</p>  <p>Screw M4 x 20mm (4x)</p>	<p>J</p>  <p>Adjustable Glide (4x)</p>	<p>K</p>  <p>L-Bracket (3x)</p>	<p>L</p>  <p>Shelf Support (16x)</p>	<p>M</p>  <p>Allen Key (1x)</p>	

  
Parts List
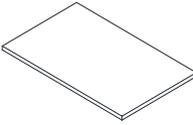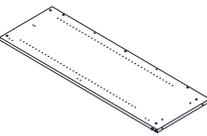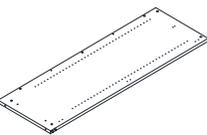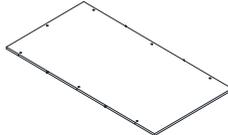
<p>1</p>  <p>Top Panel (1x)</p>	<p>5</p>  <p>Bottom Panel (1x)</p>	<p>9</p>  <p>Right Door Panel (1x)</p>
<p>2</p>  <p>Left Side Panel (1x)</p>	<p>6</p>  <p>Kick Panel (1x)</p>	
<p>3</p>  <p>Right Side Panel (1x)</p>	<p>7</p>  <p>Back Panel (1x)</p>	
<p>4</p>  <p>Shelf Panel (4x)</p>	<p>8</p>  <p>Left Door Panel (1x)</p>	

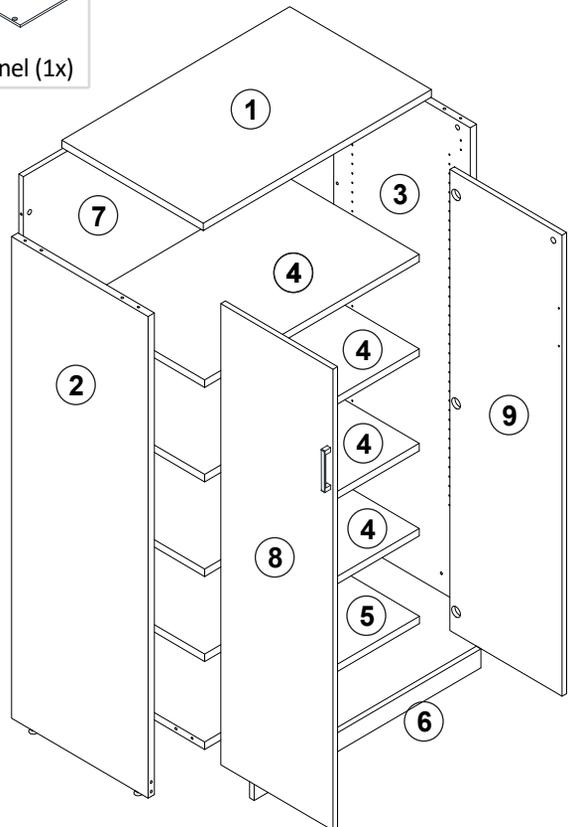

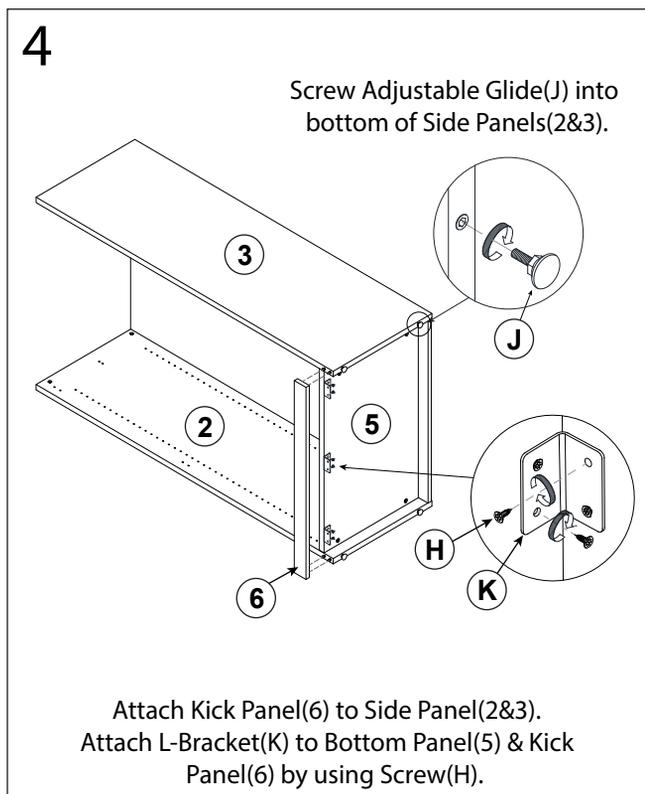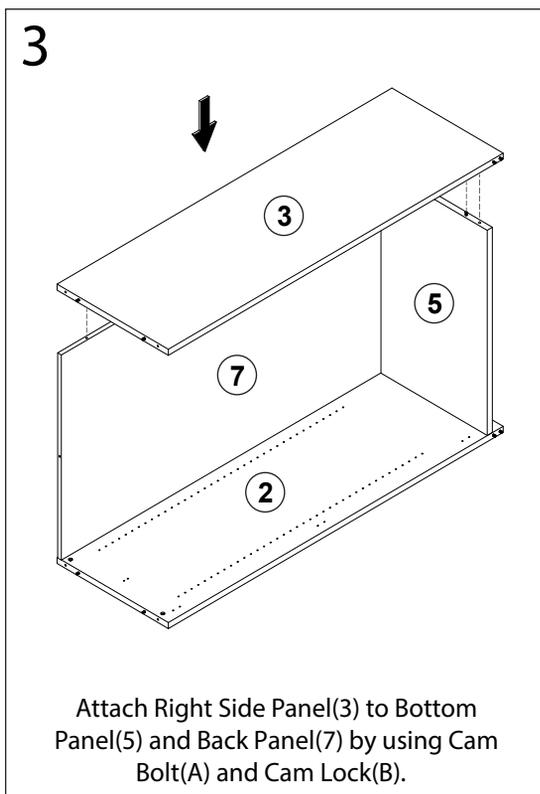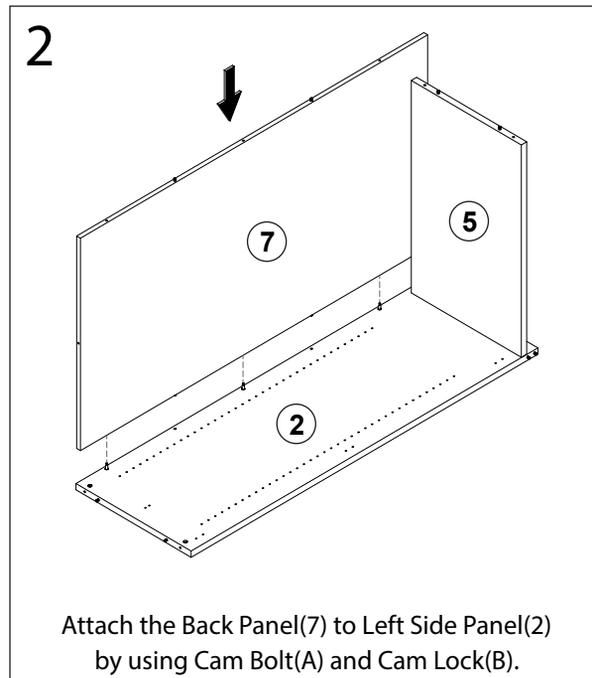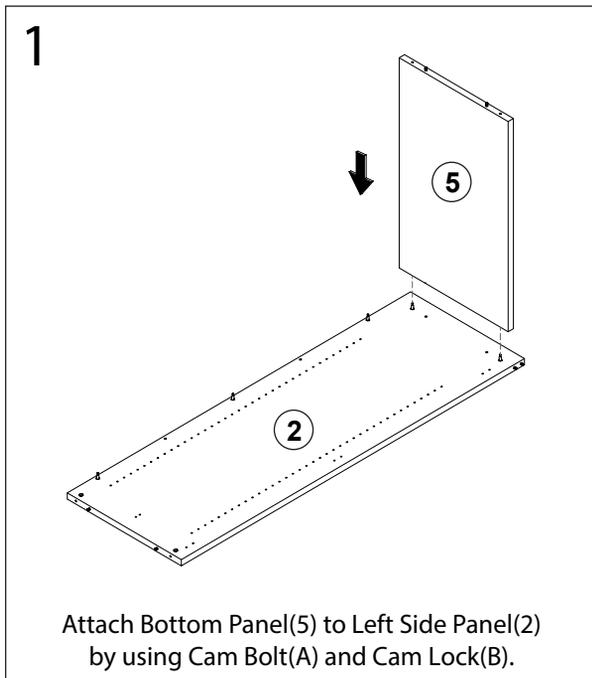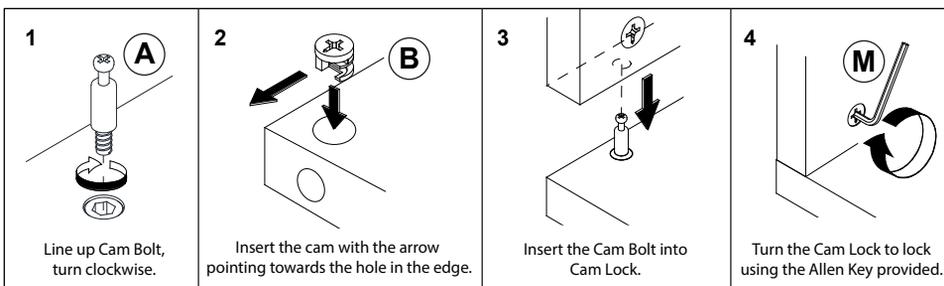


5

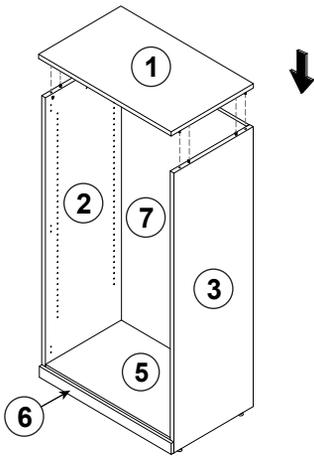


Attach Top Panel(1) to Side Panels(2&3) and Back Panel(7) by using Cam Bolt(A) and Cam Lock(B).

6

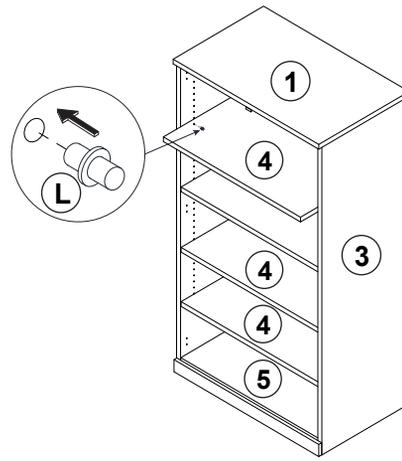

Insert Shelf Support(L) into the predrilled holes and place Shelf Panel(4) at convenient distances.

7

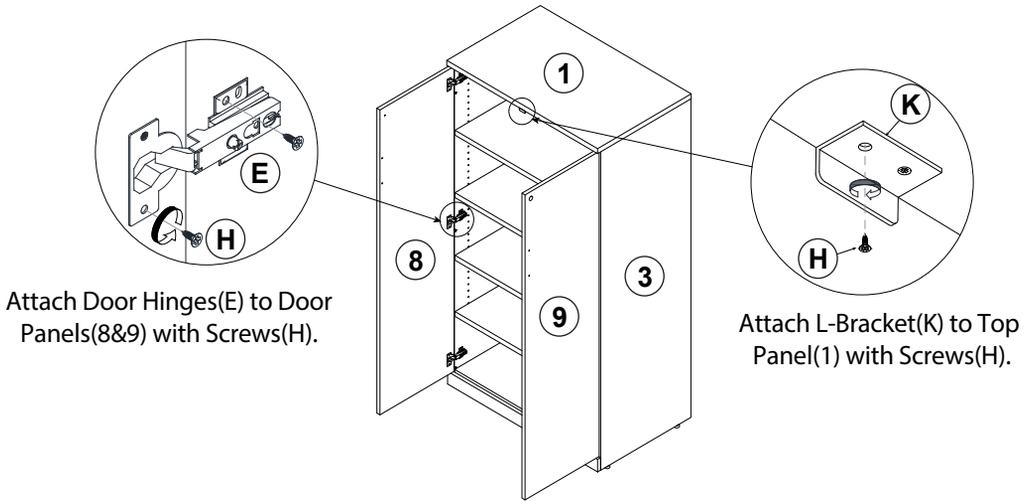


Attach Door Hinges(E) to Door Panels(8&9) with Screws(H).

Attach L-Bracket(K) to Top Panel(1) with Screws(H).

Attach Door Panels(8&9) to Side Panels(2&3) by using Door Hinges(E).

8

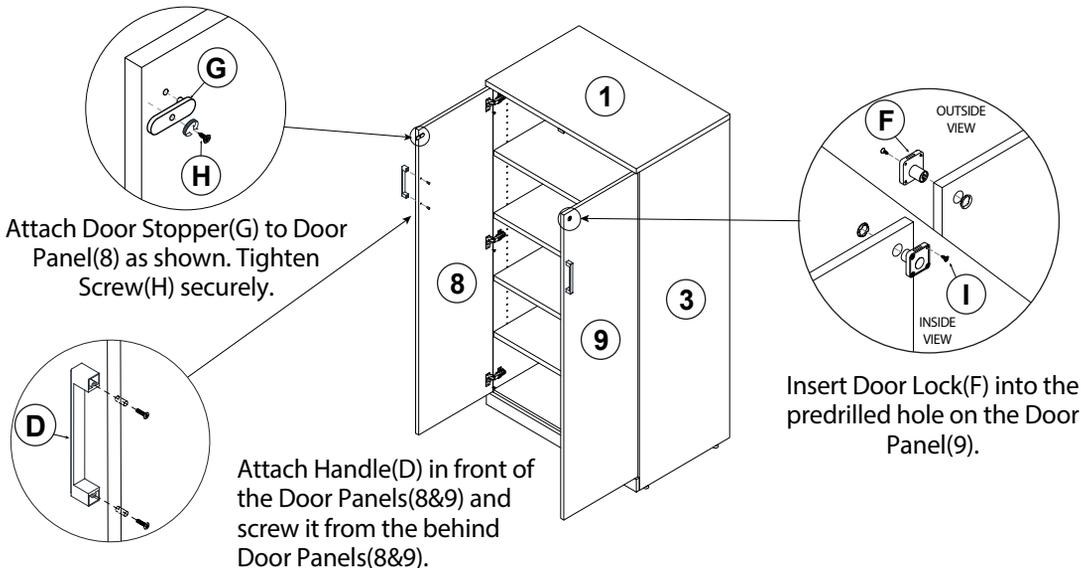


Attach Door Stopper(G) to Door Panel(8) as shown. Tighten Screw(H) securely.

Attach Handle(D) in front of the Door Panels(8&9) and screw it from the behind Door Panels(8&9).

Insert Door Lock(F) into the predrilled hole on the Door Panel(9).



Maximum Recommended Weight Loads

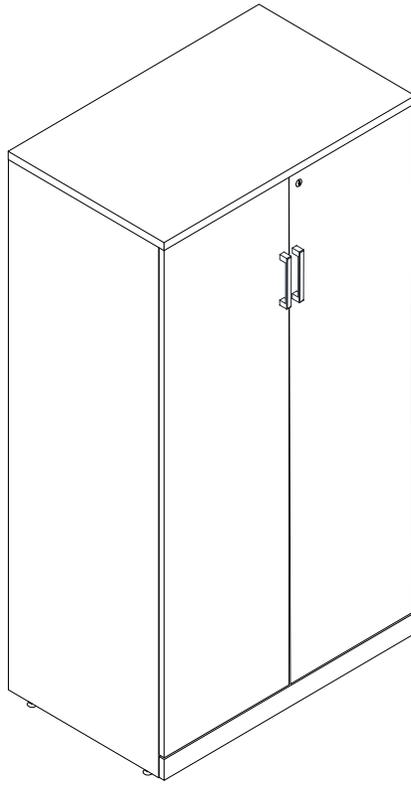

Care & Maintenance

- Check bolts/screws periodically and tighten them if necessary.
- Use a soft, clean cloth that will not scratch the surface when dusting.
- Clean the product with mild cleanser using soft damp cloth. Do not use harsh or abrasive cleanser.
- Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.