


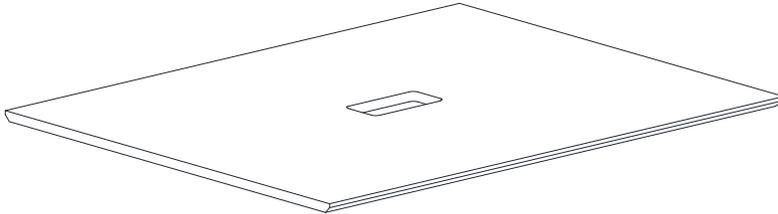

This assembly manual contains important safety information. Please read and keep for future reference.

Model No.: OS437THALFKE
Description: 60" Half Rectangular Conference
Knife Edge Top



Useful Hints Before You Start

1. Read each step carefully before starting.
2. Before beginning assembly, identify, sort and count the parts before assembly.
3. Using the wrong screw will cause damage.
4. Using incompatible hardware might cause damage to product.
5. It is important that each step is performed in correct order to avoid difficulties.
6. Assemble your furniture on packaging cardboard to prevent scratch or damage.
7. Do not tighten any screws or bolt until the unit is completely assembled.
8. Keep all hardware parts out of reach of children.

Necessary Tools



Phillips
Screwdriver



Flat Head
Screwdriver



Hammer



 



 



CAUTION!
Risk of product damage.
Power Drill can be used on
lowest torque setting.









Please read completely through the instructions and verify that all listed parts and hardware are present before beginning assembly.








Parts List

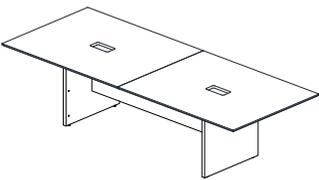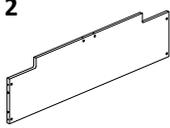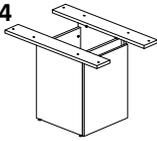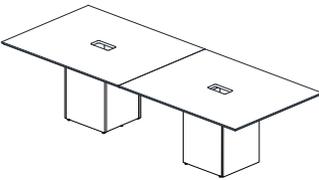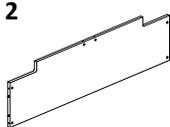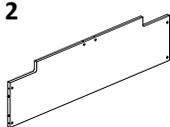 See Page 3	1  Top Panel (2x) OS437THALFKE	2  Modesty Panel (1x) (Sold Separately) OS37MOD1	3  End Base (2x) (Sold Separately) OS3678EP2
	1  Top Panel (2x) OS437THALFKE	4  Cube Base (2x) (Sold Separately) OSCUBED20	
 See Page 4	1  Top Panel (2x) OS437THALFKE	2  Modesty Panel (1x) (Sold Separately) OS37MOD1	5  Elliptical Base (2x) (Sold Separately) OS36ELPBASE2
	1  Top Panel (2x) OS437THALFKE	2  Modesty Panel (1x) (Sold Separately) OS37MOD1	

    Hardware List

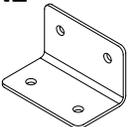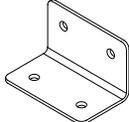

Hardware in OS437THALFKE				Hardware in OSCUBED20			
A1  L-Bracket (6x)	A2  #6 x 5/8" Screw (36x)	A3  Metal Plate (2x)	B1  JCBC Screw M6 x 40mm(8x) 1/4 Washer(8x)	B2  Allen Key (1x)			
Hardware in OS3678EP2							
C1  Cam Bolt (10x)	C2  Cam Lock (10x)	C3  Round Sticker (22x)	C4  Adjustable Glide (4x)	C5  L-Bracket (4x)	C6  #6 x 5/8" Screw (16x)	C7  Allen Key (1x)	
Hardware in OS36ELPBASE2							
D1  Cam Bolt (6x)	D2  Cam Lock (6x)	D3  Round Sticker (6x)	D4  Adjustable Glide (4x)	D5  L-Bracket (4x)	D6  #6 x 5/8" Screw (16x)	D7  Allen Key (1x)	D8  M4 x 20MM Screw (16x)



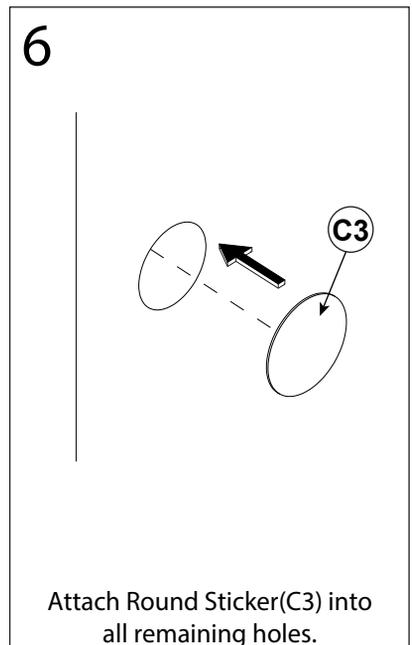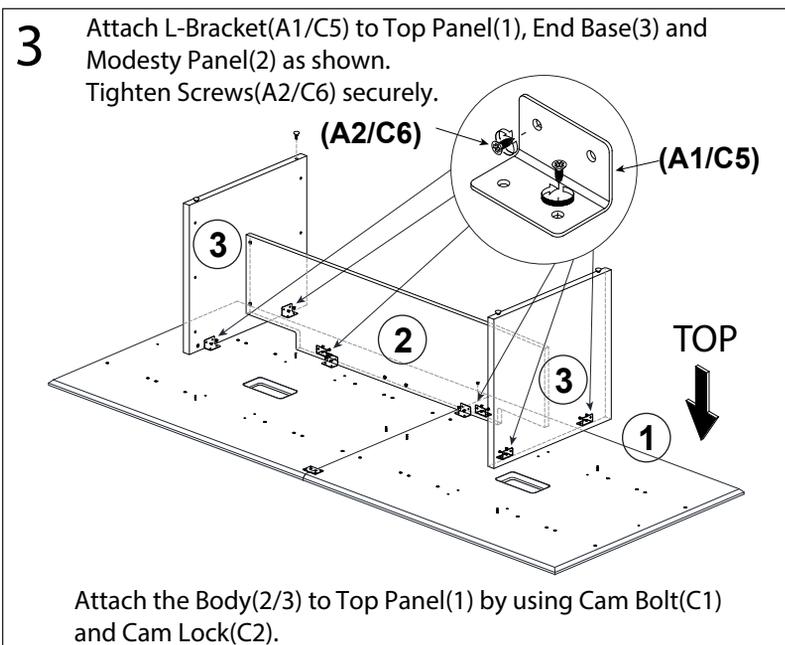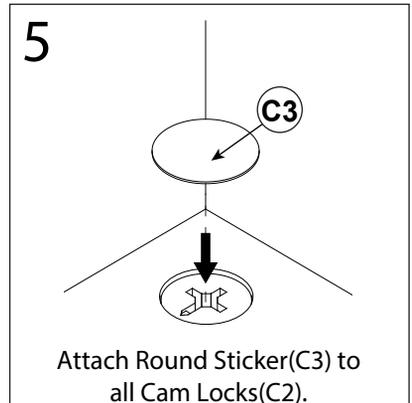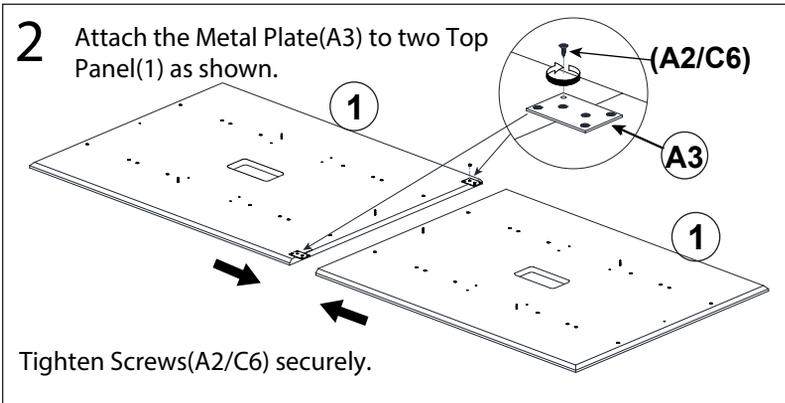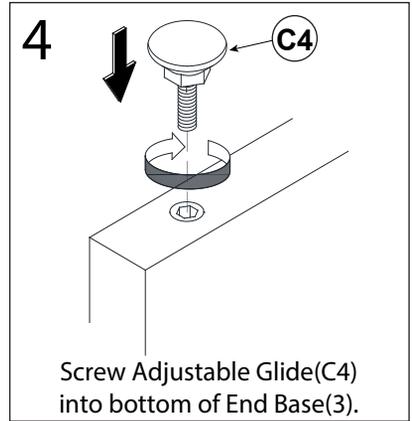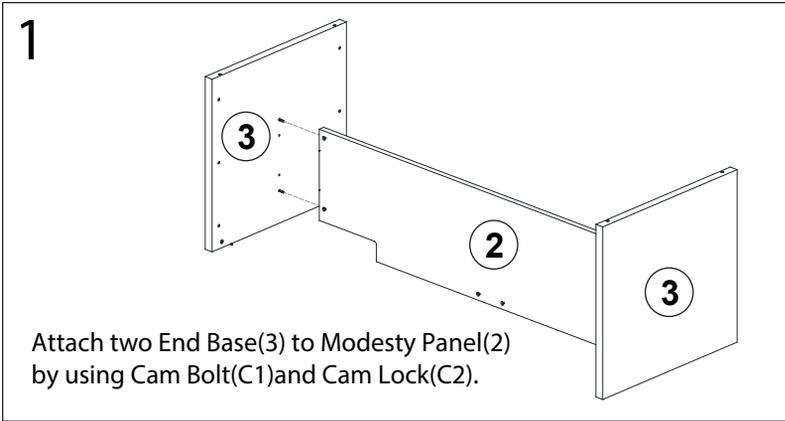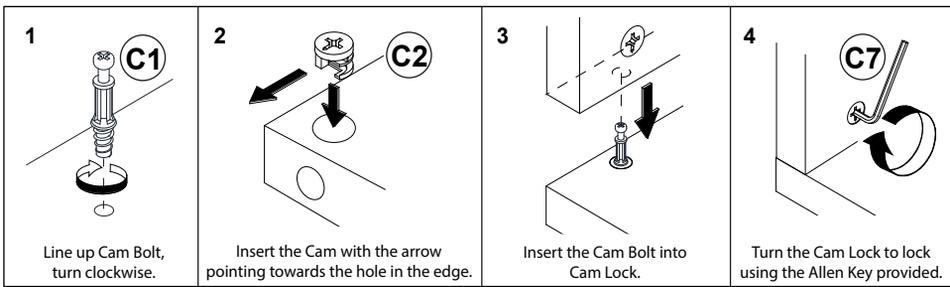

1


Door Panel

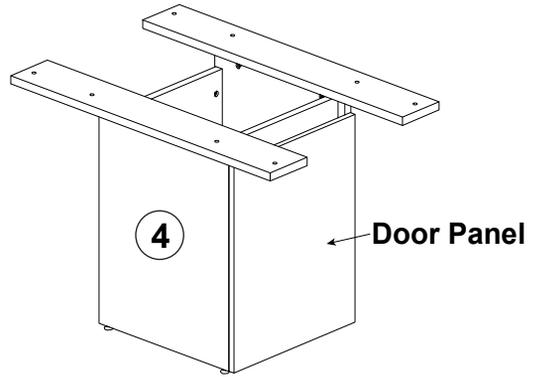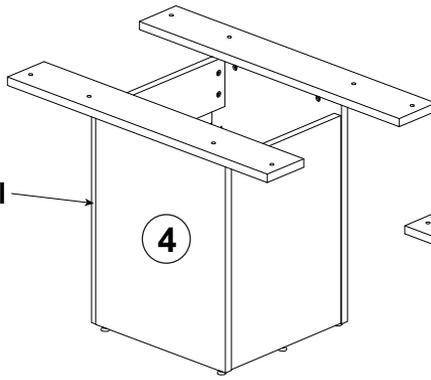







Attach two Cube Base(4) back to back as shown.


2

Attach the Metal Plate(A3) to two Top Panel(1) as shown.
Tighten Screws(A2) securely.

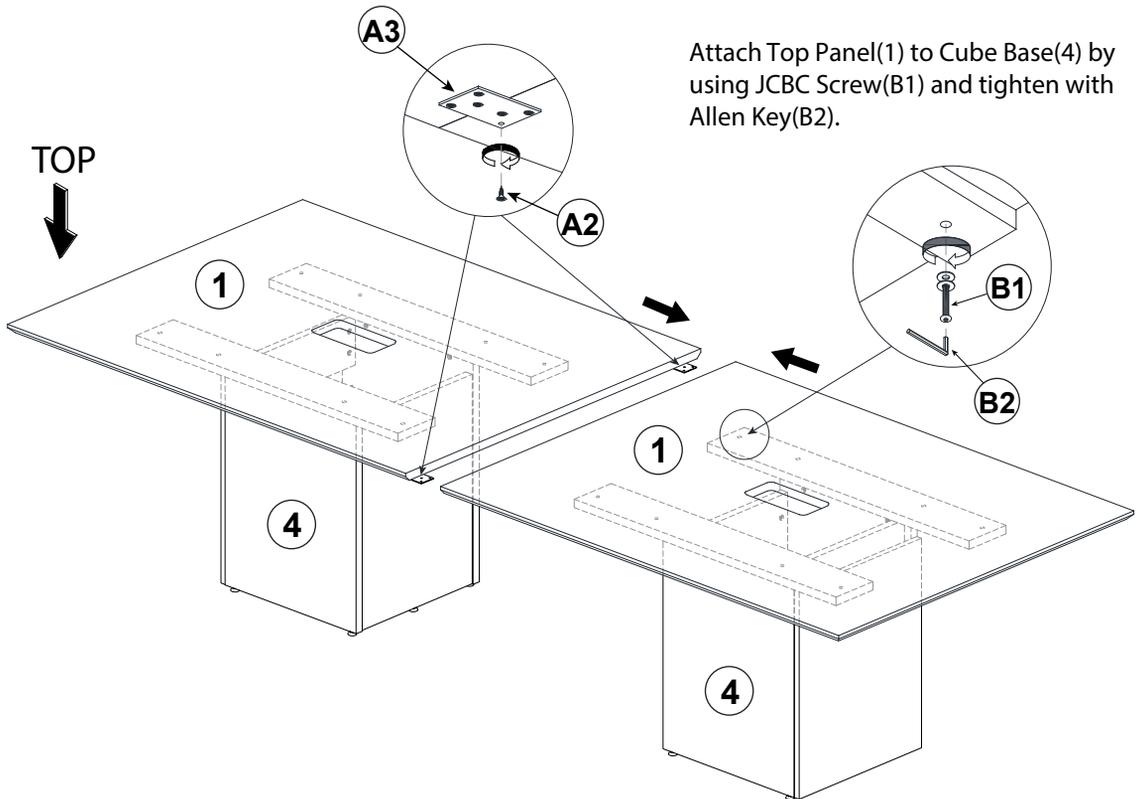

Attach Top Panel(1) to Cube Base(4) by using JCBC Screw(B1) and tighten with Allen Key(B2).

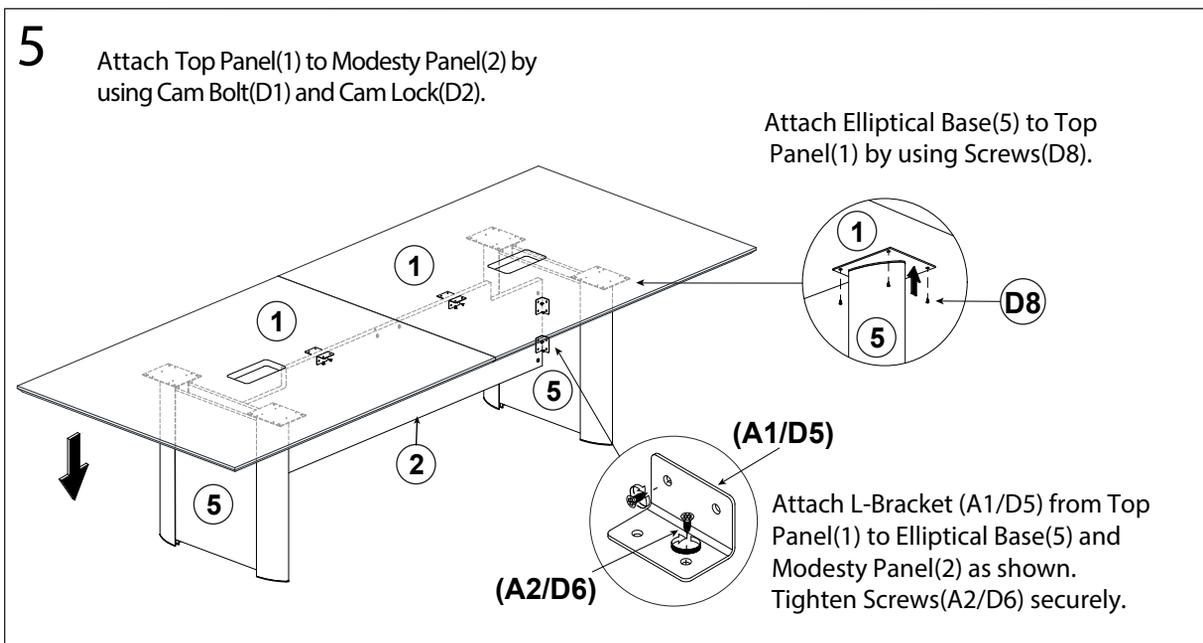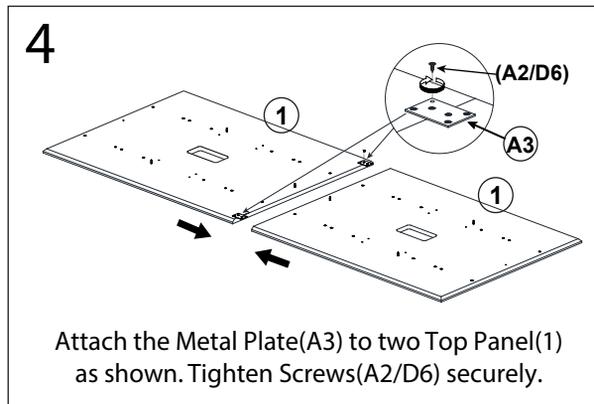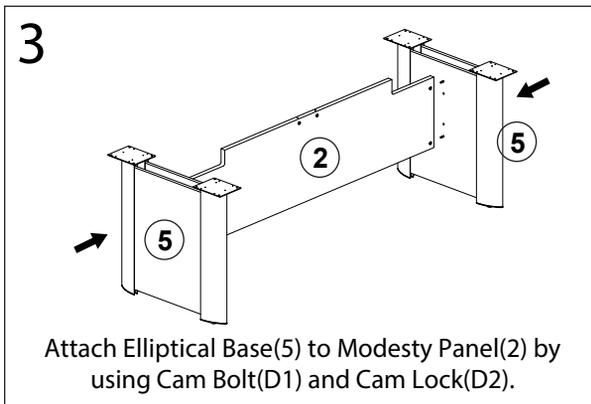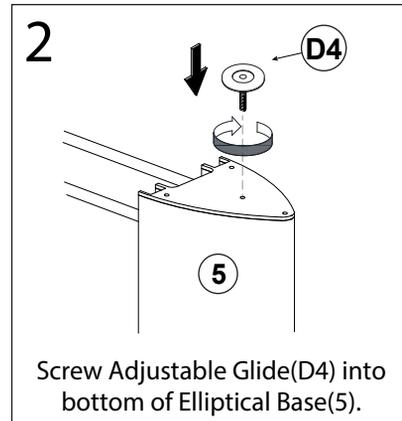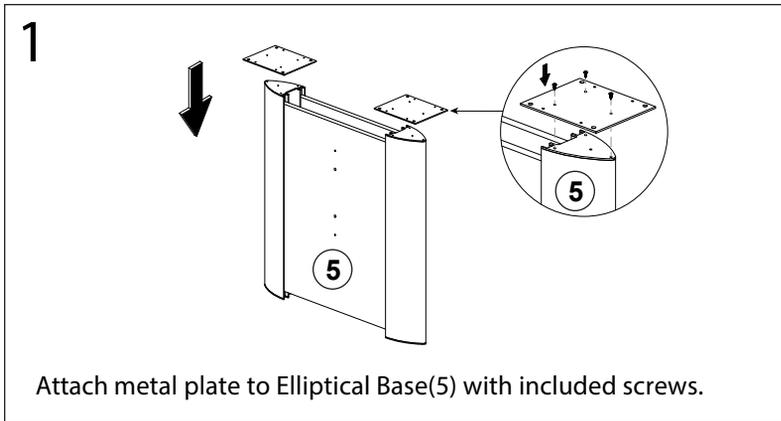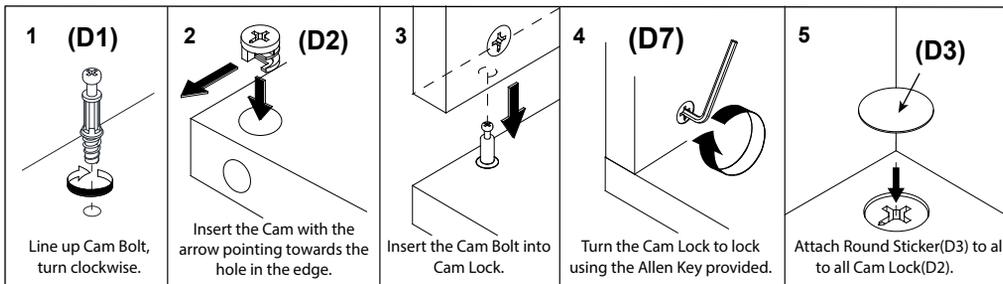

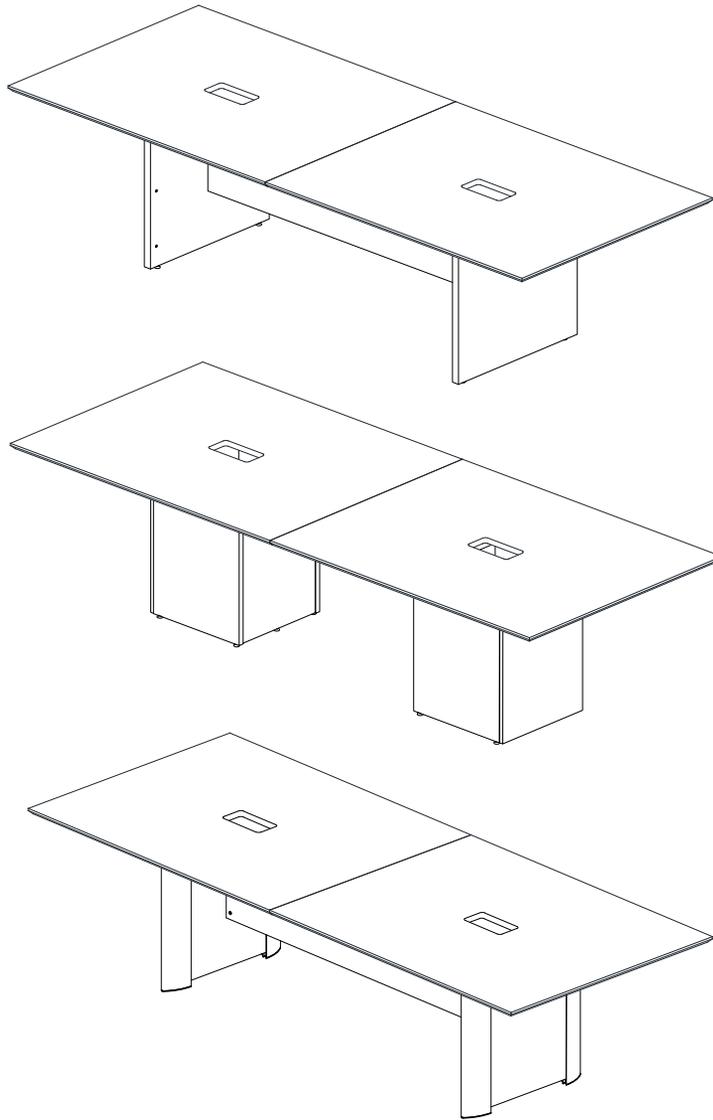

Care & Maintenance

- Check bolts/screws periodically and tighten them if necessary.
- Use a soft, clean cloth that will not scratch the surface when dusting.
- Clean the product with mild cleanser using soft damp cloth. Do not use harsh or abrasive cleanser.
- Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently.
- Heat can cause chemical changes that may create spotting within furniture finish.
- It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.