












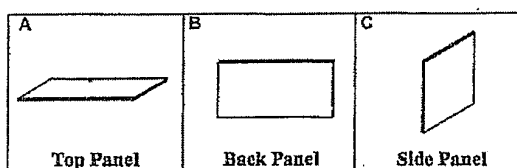
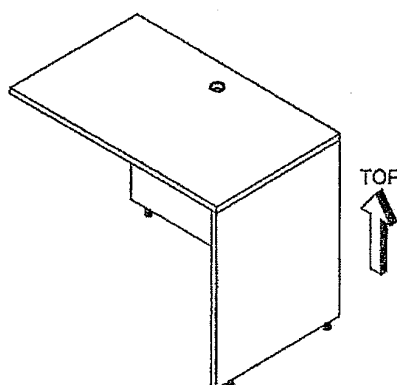
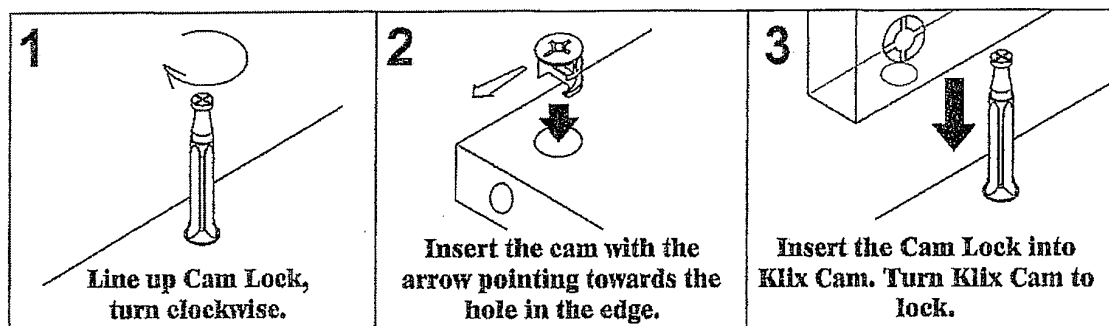


1  <b>Cam Lock</b> 8 Pcs	2  <b>Klix Cam</b> 8 Pcs	3  <b>Housing Cap</b> 8 Pcs	4  <b>Adjustable Glide</b> 4 Pcs	5  <b>6 Hole L-Bracket</b> 3 Pcs	6  <b>Screw #8 x 5/8"</b> 48 Pcs	7  <b>L-Bracket</b> 3 Pcs
--	--	---	--	---	--	---

8  <b>3" L-Bracket With 6 Hole</b> 2 Pcs	9  <b>Ø15mm Hole Plug</b> 3 Pcs	10  <b>Ø8mm Hole Plug</b> 7 Pcs	11  <b>Ø5mm Hole Plug</b> 3 Pcs	12  <b>M8 x 30 Wood Dowel</b> 2 Pcs	13  <b>M4 x 65 Allen-Key</b> 1 Pc
---	---	---	---	---	---



### KLIX CAM INSTRUCTIONS




### IMPORTANT !

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten any screws or bolts until the unit is completely assembled.
- Keep all hardware parts out of reach of children.




1

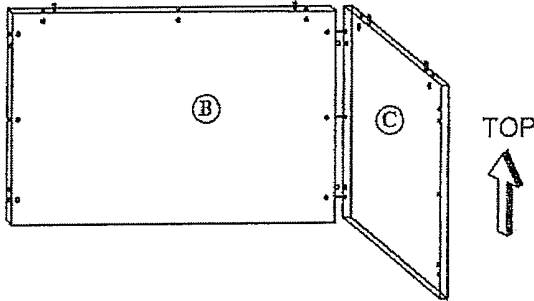

Attach Back Panel(B) to Side Panel(C) by using Wood Dowel(12), Cam Lock(1) and Klix Cam(2).


2

Attach the L-Bracket(8) to Back Panel(B) and Side Panel(C) as shown. Tighten Screws(6) securely.

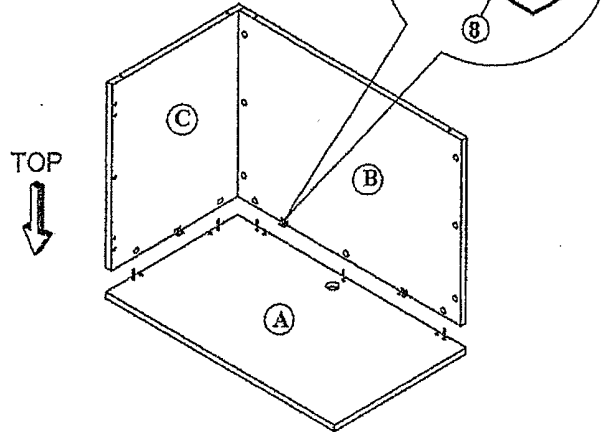


Attach the Back Panel(B) and Side Panel(C) to Top Panel(A) by using Cam Lock(1) and Klix Cam(2).

3

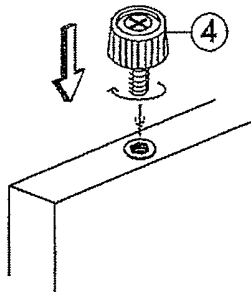

Screw Adjustable Glide(4) into bottom of Back Panel(B) and Side Panel (C).

4

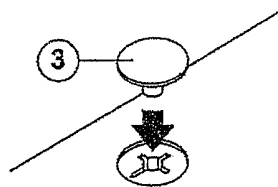

Attach Housing Cap (3) to all Klix Cam(2) by pushing neck through center of cam.

5



Insert Hole Plugs into remaining holes on Side Panel(C).

**Additional Hardware.**

Please note that Performance Office Furnishings has enclosed additional hardware to allow you to attach this return to other pieces.