



Before assembly, please remove all parts from carton, verifying that you have the correct quantities, and read all the instructions.


IN THE CARTON:

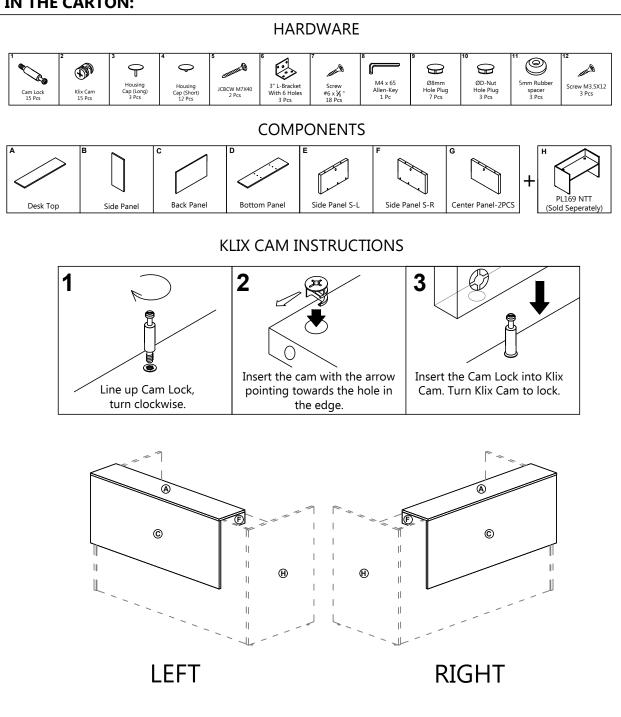


 
1 of 3




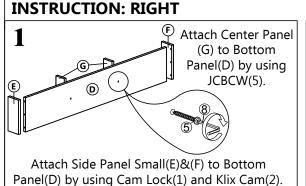


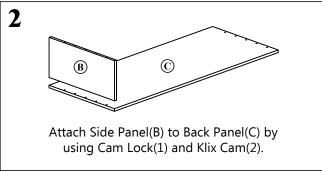

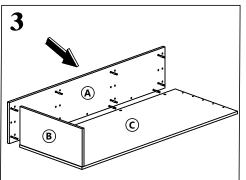




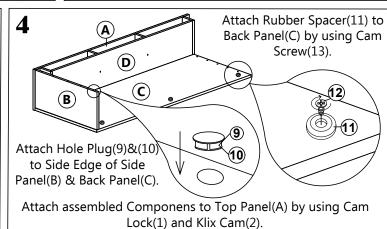

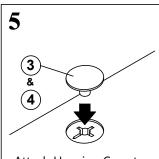

Attach Housing Caps to all Klix Cams by pushing neck of cap through center of cam.

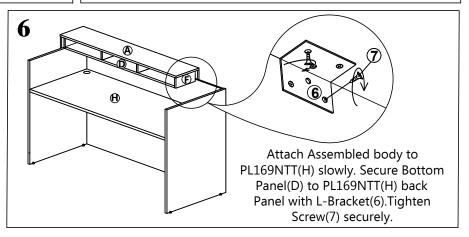


2 of 3





OFFICE FURNITURE

INSTRUCTION: LEFT

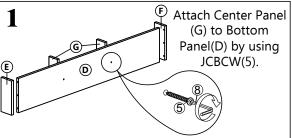


Attach Side Panel Small(E)&(F) to Bottom Panel(D) by using Cam Lock(1) and Klix Cam(2).

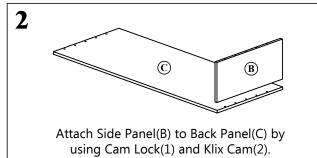


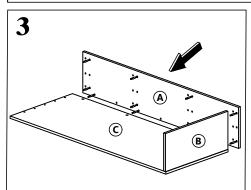


Attach Side Panel(B) to Back Panel(C) by using Cam Lock(1) and Klix Cam(2).

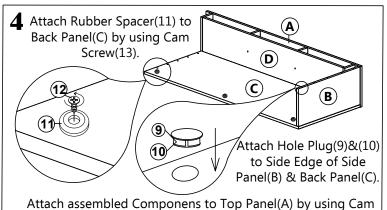

Lock(1) and Klix Cam(2).

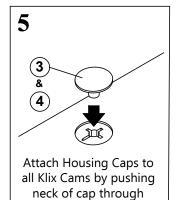

center of cam.

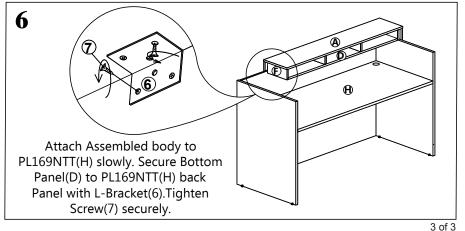

A ATTENTION A

Place all wooden parts on a clean, smooth surface to prevent them from being scratched.

Check to be sure that you have all parts and hardware. Remove all wrapping materials, including staples and packing straps before you start to assemble. Do not tighten all screws/bolts until all completely assembled. Keep all hardware parts out of reach of children. If any parts are missing, broken, damaged or worn, stop use of product until repairs have been made using factory authorized parts. Failure to follow these warnings may result in injury.

Last Updated: 6/2022 OFFICESOURCE.COM