




 











 



 
 
 

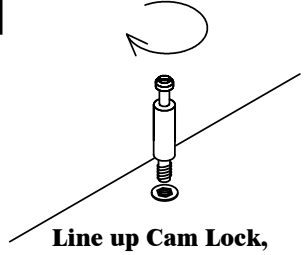 
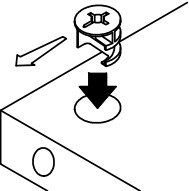 
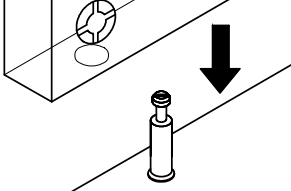 



Please follow these instructions for easy assembly.

<div>1</div> <div></div> <div>Cam Lock 15 Pcs</div>	<div>2</div> <div></div> <div>Klix Cam 15 Pcs</div>	<div>3</div> <div></div> <div>Housing Cap (Long) 8 Pcs</div>	<div>4</div> <div></div> <div>Housing Cap (Short) 7 Pcs</div>	<div>5</div> <div></div> <div>Shelf Support Pin 16 Pcs</div>	<div>6</div> <div></div> <div>0° Compo Door Hingers 3 Pairs</div>	<div>7</div> <div></div> <div>Metal Scallop Shape Handle 2 Pcs</div>	<div>8</div> <div></div> <div>833 L-Bracket 1 Pc</div>
<div>9</div> <div></div> <div>Screw M3.5 x 12mm 2 Pcs</div>	<div>10</div> <div></div> <div>Door Stopper 1 Pc</div>	<div>11</div> <div></div> <div>Screw M3.5 x 16mm 1 Pcs</div>	<div>12</div> <div></div> <div>Drawer Lock 1 Pc</div>	<div>13</div> <div></div> <div>Screw M3.5 x 20mm 4 Pcs</div>	<div>14</div> <div></div> <div>6 Hole L-Bracket 3 Pcs</div>		
		<div>15</div> <div></div> <div>Screw #6 x 3/8" 18 Pcs</div>	<div>16</div> <div></div> <div>Adjustable Glide 4 Pcs</div>	<div>17</div> <div></div> <div>M4 x 65 Allen-Key 1 Pc</div>			

A  Back Panel	B  Left Gable	C  Right Gable	D  Kick Plate	E  Top Panel	F  Bottom Panel	G  Adj. Shelf x 4	H  Door Panel x 2
--	--	---	--	---	---	--	--

KLIX CAM INSTRUCTIONS


1  Line up Cam Lock, turn clockwise.	2  Insert the cam with the arrow pointing towards the hole in the edge.	3  Insert the Cam Lock into Klix Cam. Turn Klix Cam to lock.
---	---	--

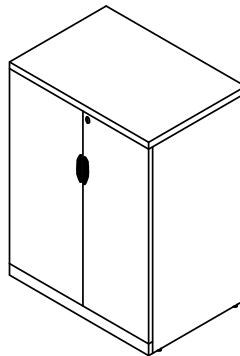 

IMPORTANT !!


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten any screws or bolts until the unit is completely assembled.
- Keep all hardware parts out of reach of children.

 1

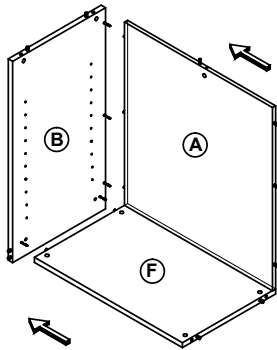

Attach Bottom Panel(F) and Back Panel(A) to Left Gable(B) by using Cam Lock(1) and Klix Cam(2).

 
2

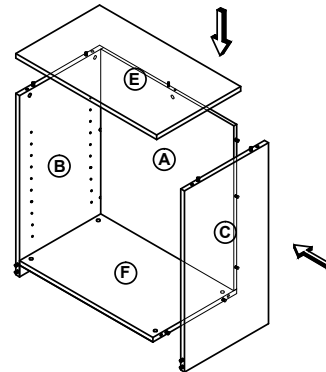

Attach Right Gable(C) and Top Panel(E) by using Cam Lock(1) and Klix Cam(2).

3

 
Lie Cabinet on its Back. Attach L-Bracket(14) to Bottom Panel(F) and Kick Plate(D) and Left/Right Gable (B/C) as shown. Tighten Screws(15) securely.

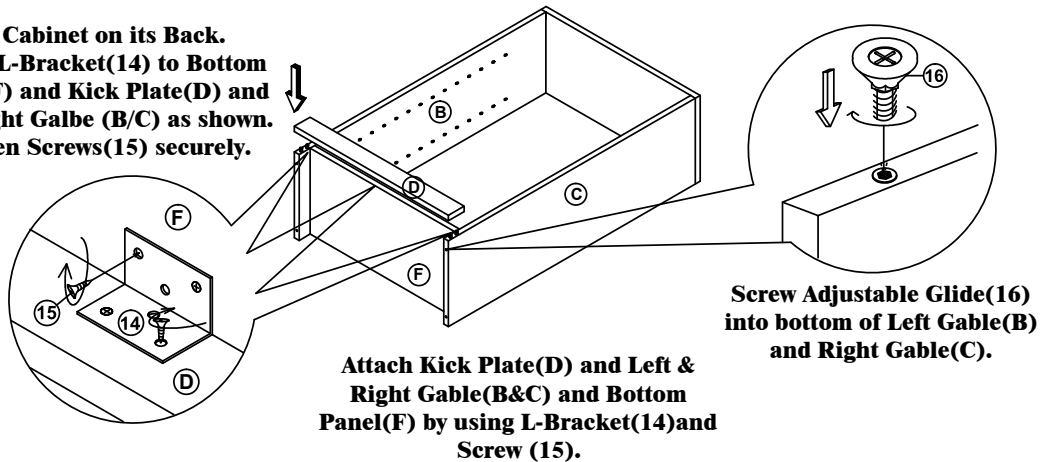


Attach Kick Plate(D) and Left & Right Gable(B&C) and Bottom Panel(F) by using L-Bracket(14) and Screw (15).

Screw Adjustable Glide(16) into bottom of Left Gable(B) and Right Gable(C).

 
4

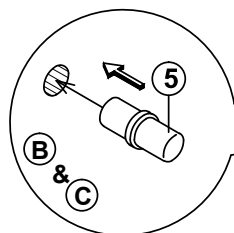

 Insert Shelf Support Pins(5) into the pre drilled holes and place Adjustable Shelves(G) at convenient distances.

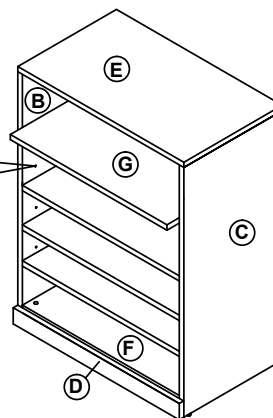

5

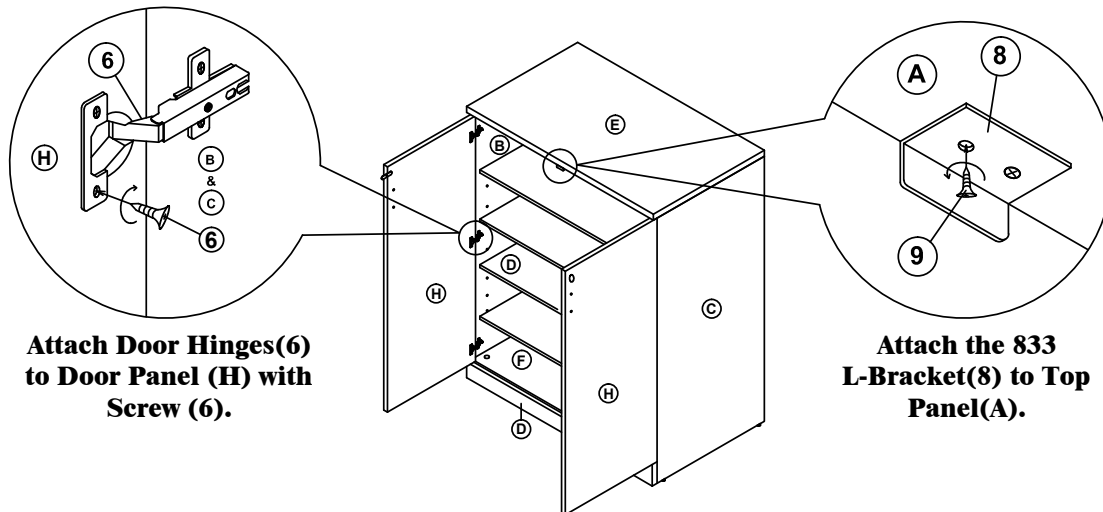 


**Attach Door Hinges(6)
to Door Panel (H) with
Screw (6).**

**Attach the 833
L-Bracket(8) to Top
Panel(A).**

**Attach the Doors Panel (H) to the Left
Gable (B) and Right Gable (C) by using the
Door Hinges(6).**

 6

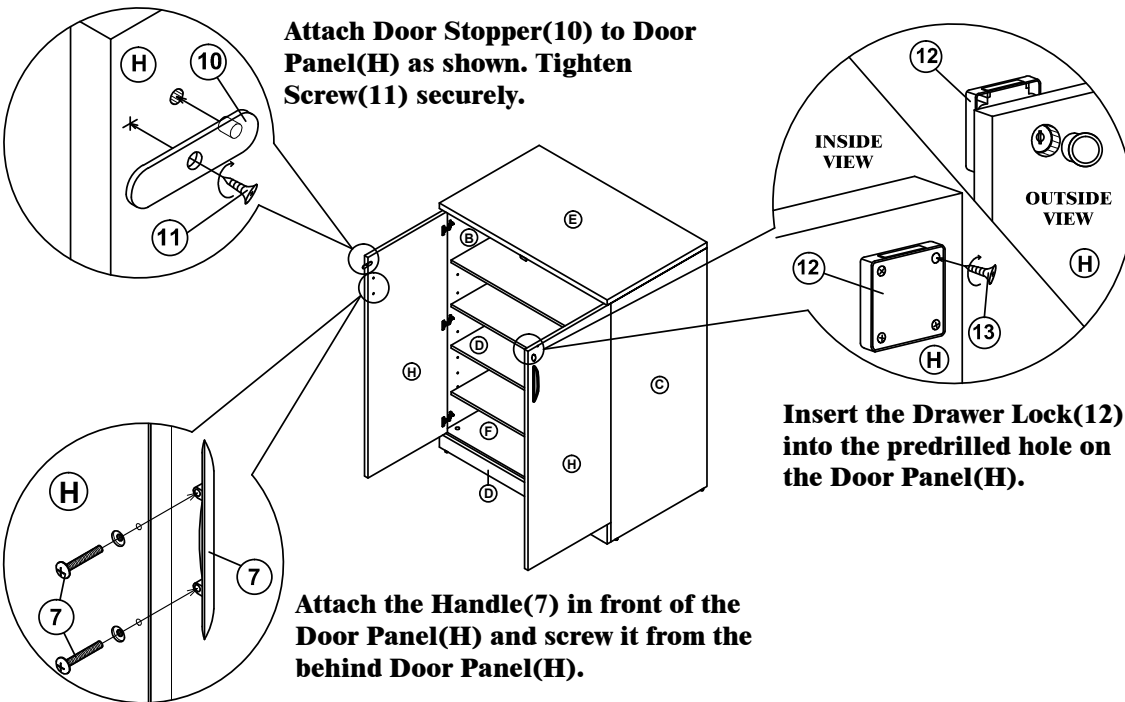

**Attach Door Stopper(10) to Door
Panel(H) as shown. Tighten
Screw(11) securely.**

**Insert the Drawer Lock(12)
into the predrilled hole on
the Door Panel(H).**

**Attach the Handle(7) in front of the
Door Panel(H) and screw it from the
behind Door Panel(H).**