



EVD861GG EVD863GG EVD865GG

60x30 72x30 66x30 Top and Modesty

 
P.1



1 Allen Wrench M4 1 Pc	2 T Rectangle Support Part 1 Pc	3 Cam Post 1 Pc	4 Cam Lock 1 Pc	5 Cam Sticker 1 Pc	6 Screw M6*15mm 2 Pcs
7 Screw Ø4*14mm 8 Pcs	8 L-Bracket 32*30*30mm 4 Pcs	A Top Panel 1 Pc			
		B Modesty Panel 1 Pc			

CAM INSTRUCTIONS

1 Line up Cam Post turn clockwise	2 Insert the Cam Lock with the arrow pointing toward the hole in the edge	3 Insert the Cam Post into Cam Lock. Turn Cam Lock
---	--	--

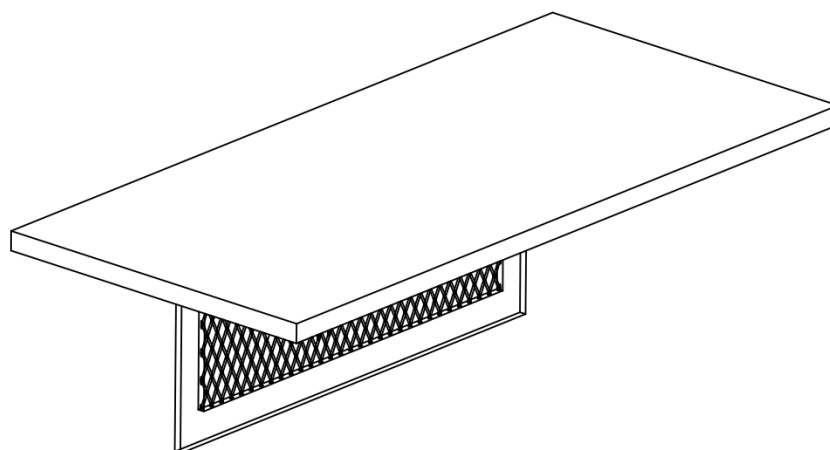


IMPORTANT NOTE:


Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched
Check that you have all parts and hardware.
Remove all wrapping materials, including staples & packing straps before you start assemble.
Do not tighten all screws or bolts untill all completely assembled.
Keep all hardware parts out of reach of children.



 - ① Use the Screw (7) and the Bracket (8) to connect the Pedestal (EVP100GG,EVP110GG) and the Modesty Panel (B).

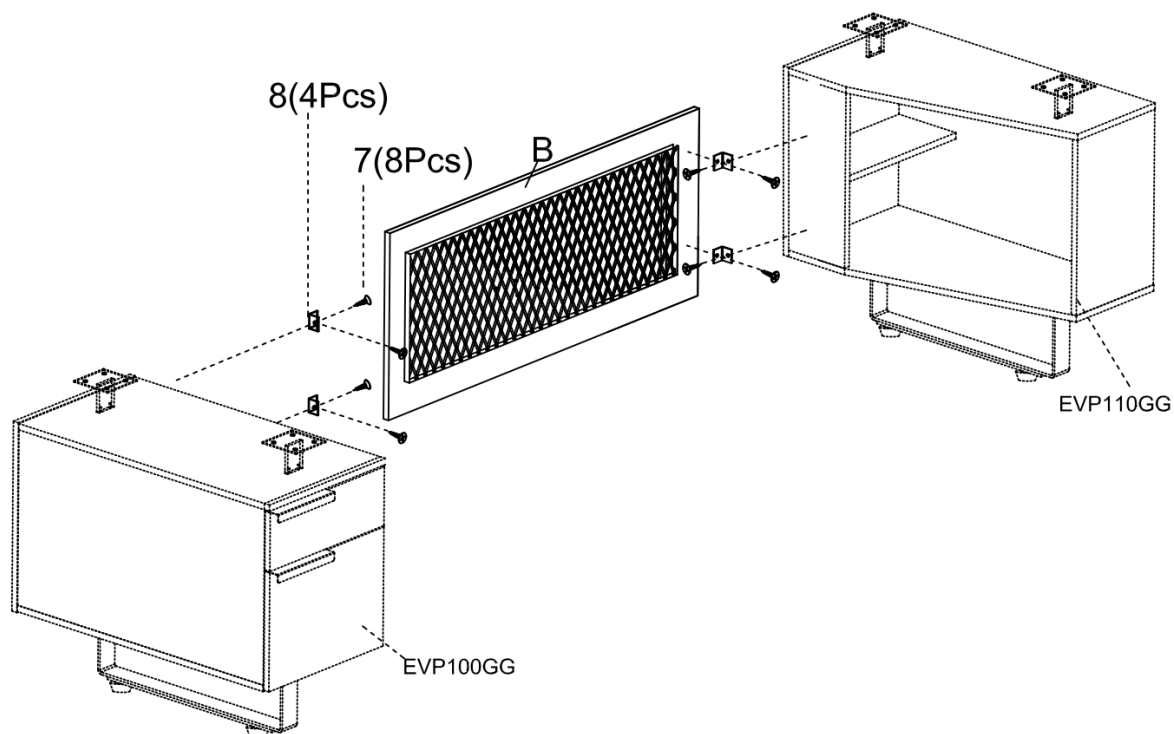


 - ② Insert the Cam Post (3) to the T Rectangle Support Part (2), Use the Screw (6) to install the T Rectangle Support Part (2) to the middle edge of the Top Panel (A):

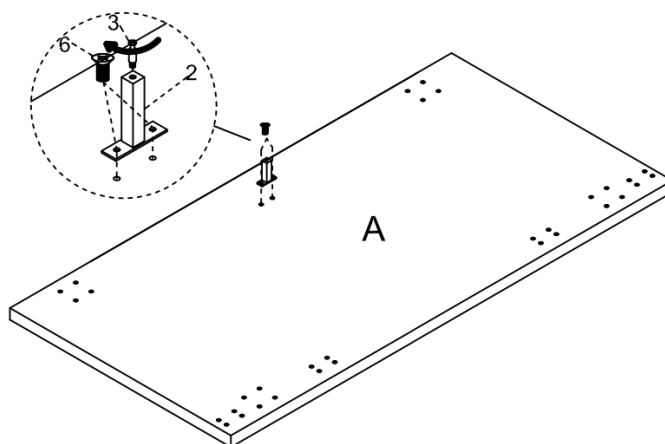




 - ③ Put the Top Panel (A) on the Pedestal (EVP100GG,EVP110GG) use the Screw (6) to lock the Top (A).

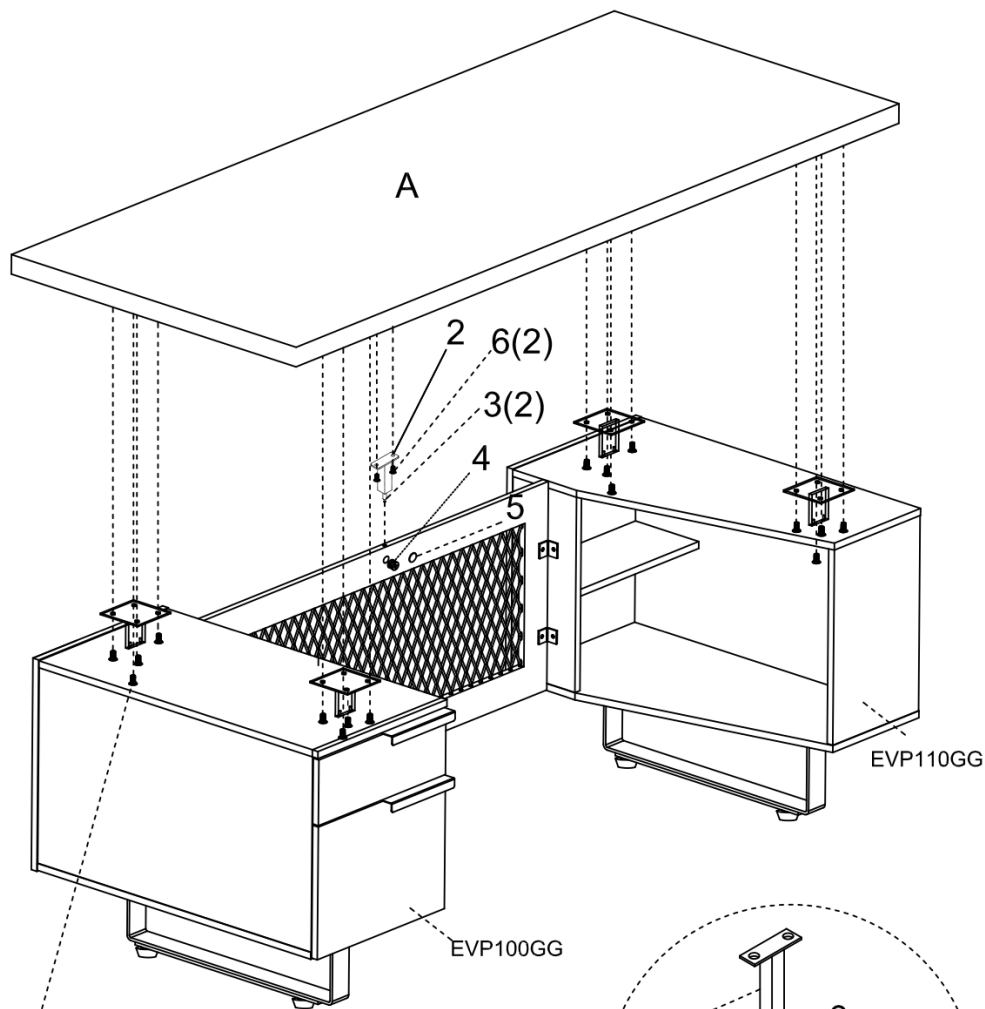


 Notes: These screw are packed with the carton for the Pedestal (EVP100GG,EVP110GG)

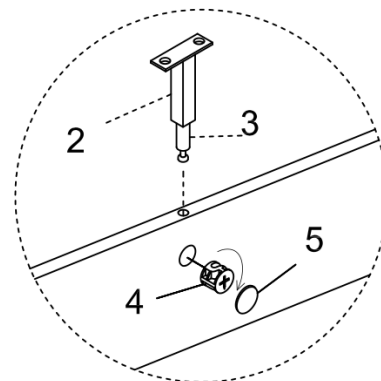



4 Completely assembly

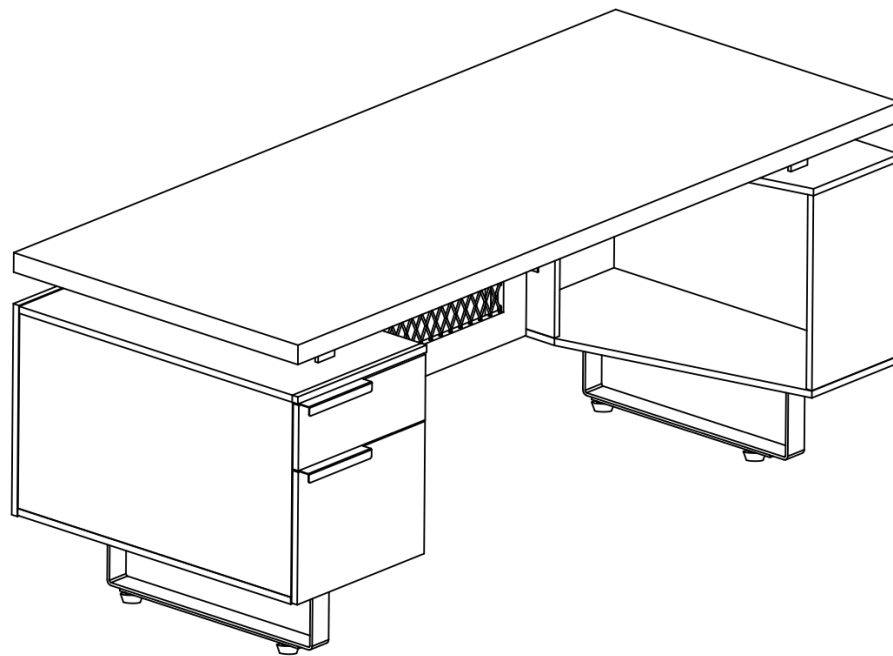 


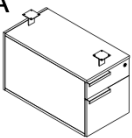 



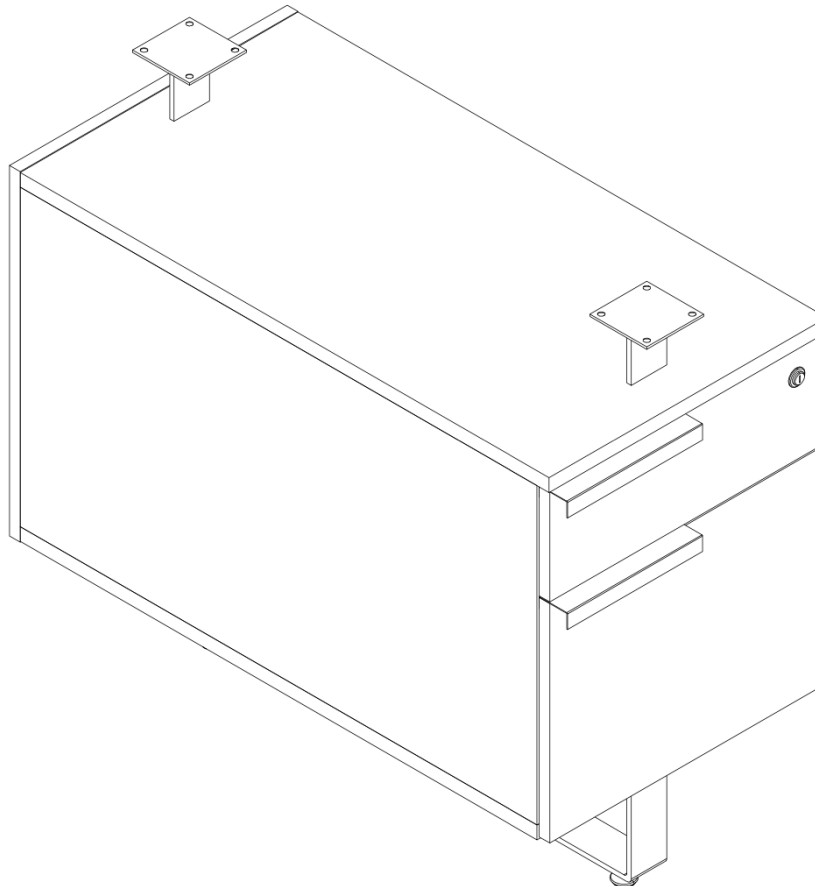 


**30" Deep Main Desk Pedestal BF
24" Deep Cedenza-Return Pedestal**

P.1



1  Keys 2 Pcs	2  Screw M6*15 15 Pcs	3  M4 Allen Wrench 1 Pc	A  Pedestal 1 Pc	B  Metal Leg 1 Pc
--	--	--	--	--



IMPORTANT NOTE:

Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched
Check that you have all parts and hardware.
Remove all wrapping materials, including staples & packing straps before you start assemble.
Do not tighten all screws or bolts until all completely assembled.
Keep all hardware parts out of reach of children.

 


24" Deep Credenza-Return Pedestal


P.2

- 1 Use the screws (2) to attach the metal leg (B) under the Pedestal (A)


Notes: This Assembly Instruction applies to all Pedestals of Main Desk, Credenza and Return.

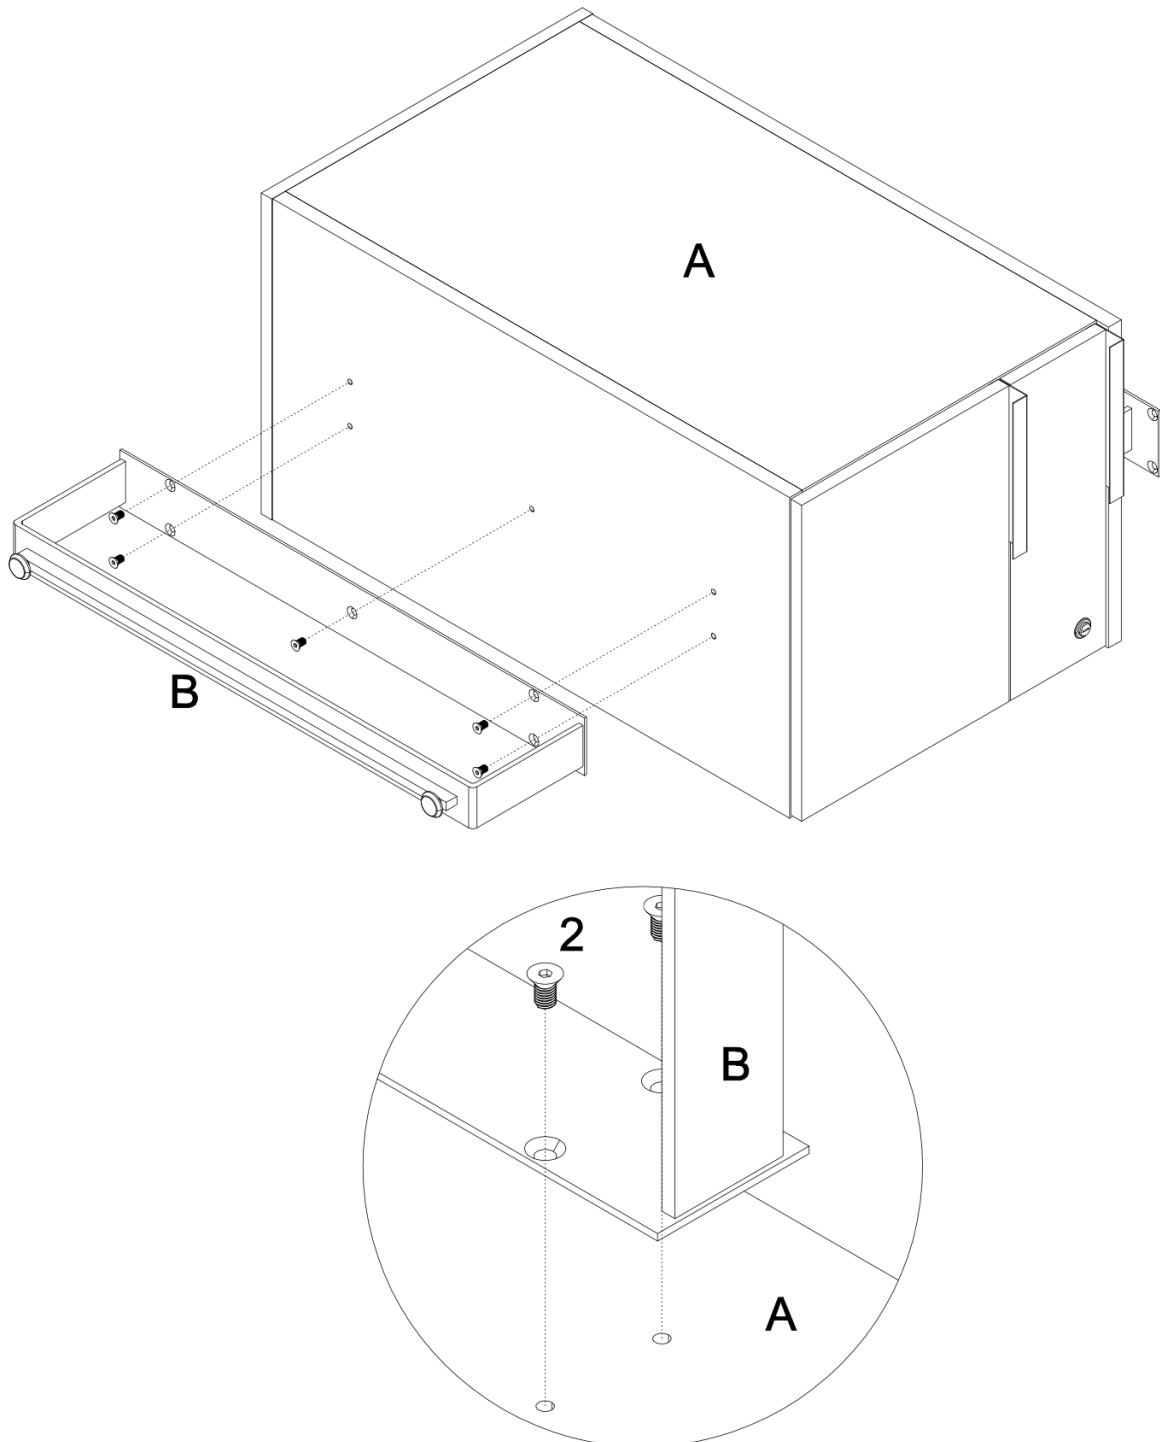

 30" Deep Main Desk False Pedestal
24"Deep Cedenza-Return False Pedestal P.1

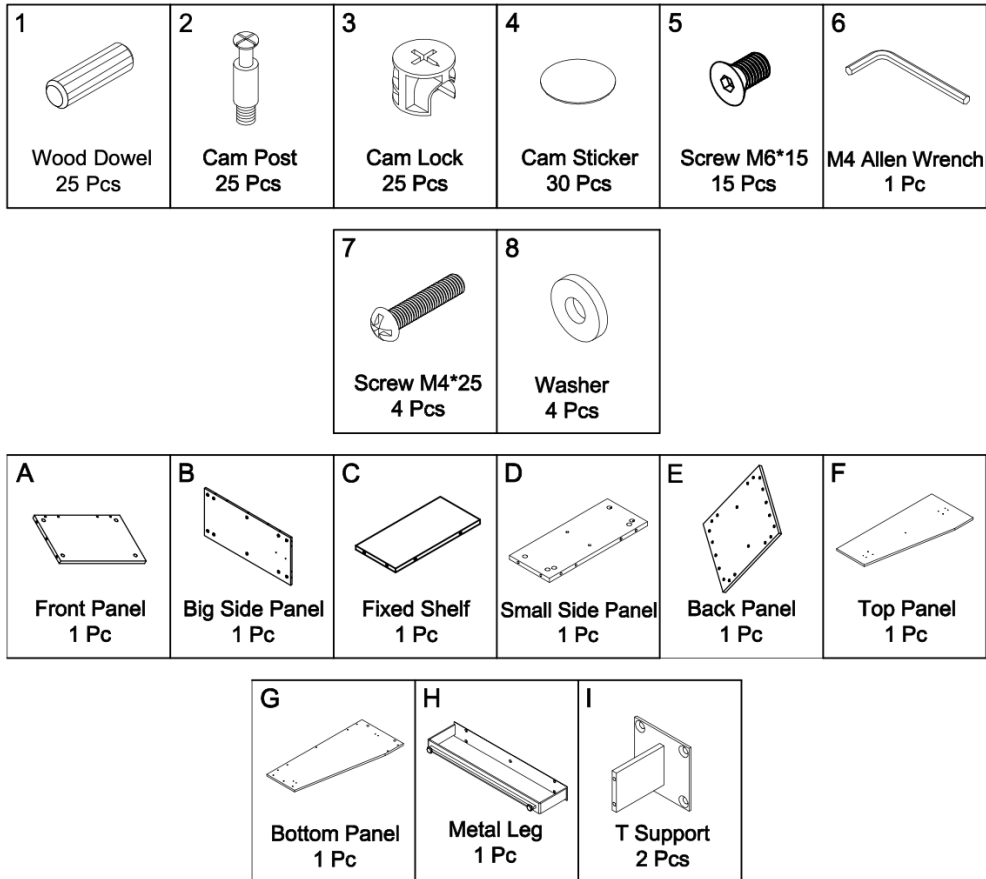

CAM INSTRUCTIONS

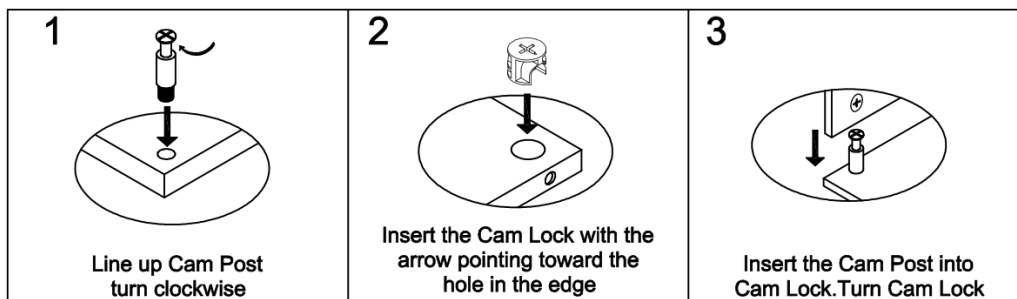 

IMPORTANT NOTE:

Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched

Check that you have all parts and hardware.

Remove all wrapping materials, including staples & packing straps before you start assemble.

 
Do not tighten all screws or bolts until all completely assembled.

Keep all hardware parts out of reach of children.




24"Deep Cedenza-Return False Pedestal P.2

Notes: This Assembly Instruction applies to all false pedestal.

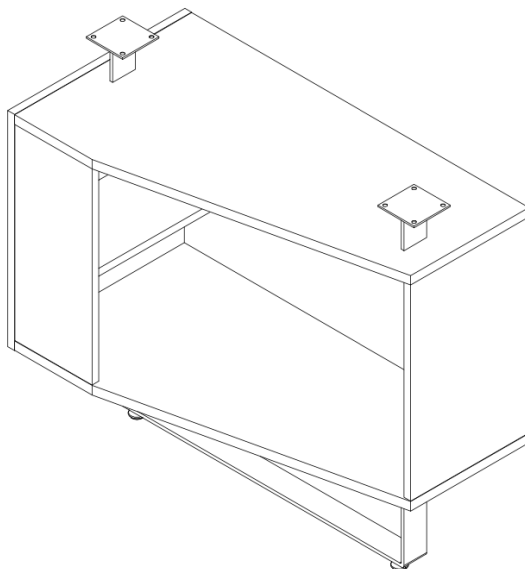

 
- ① Insert Wood Dowel (1) & Cam Lock (3) to all panels, Install Cam Post (2) to Panel (A&B). Fasten Front Panel (A) to Big Side Panel (B);

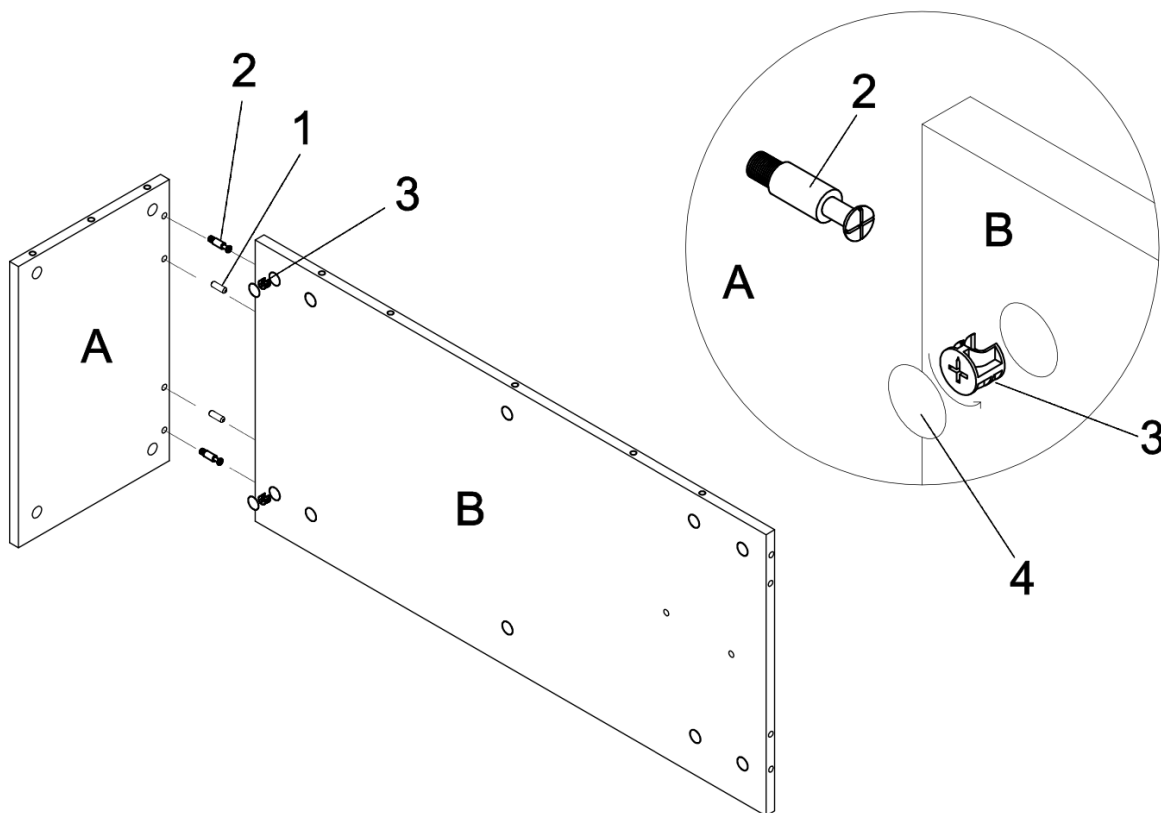





24" Deep Cedenza-Return False Pedestal P.3

 - ② Connect Big Side Panel (B) & Small Side Panel (D) with Fixed Shelf (C) together;

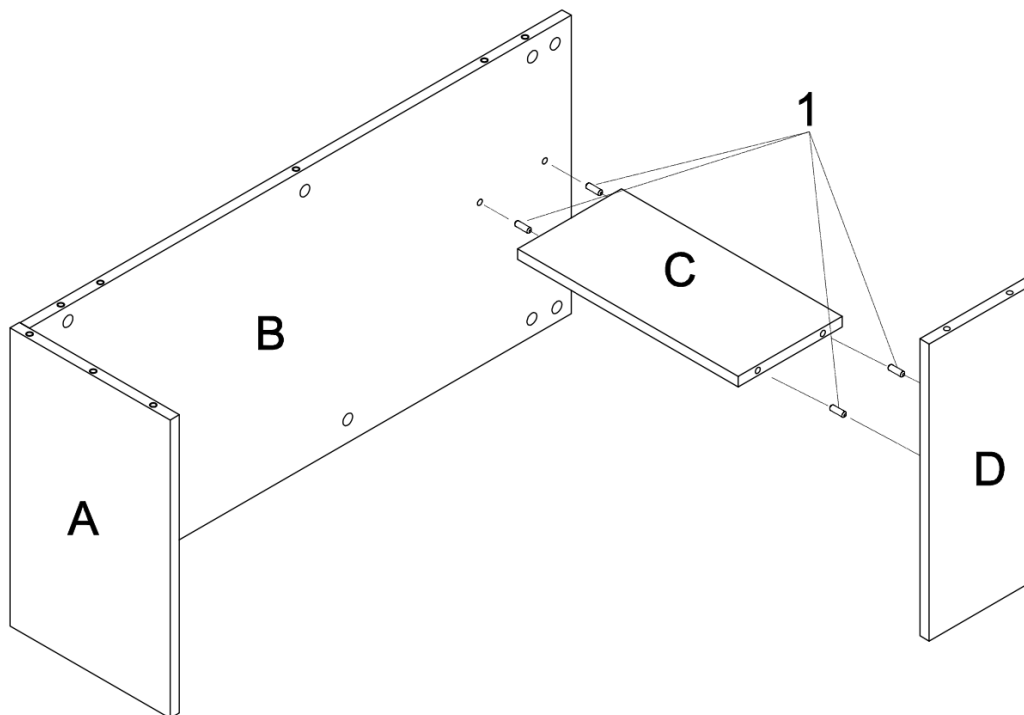

  
- ③ Install Top&Bottom Panels (F&G) to Panels (A&B&D) and fasten them together;

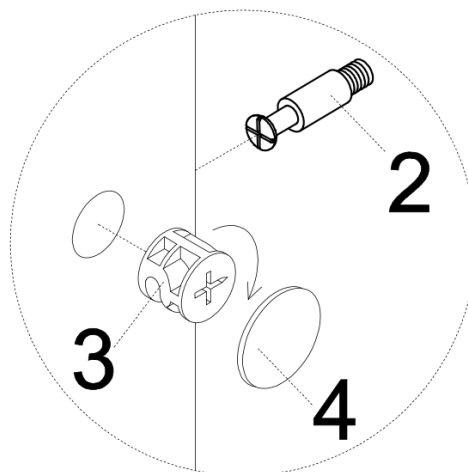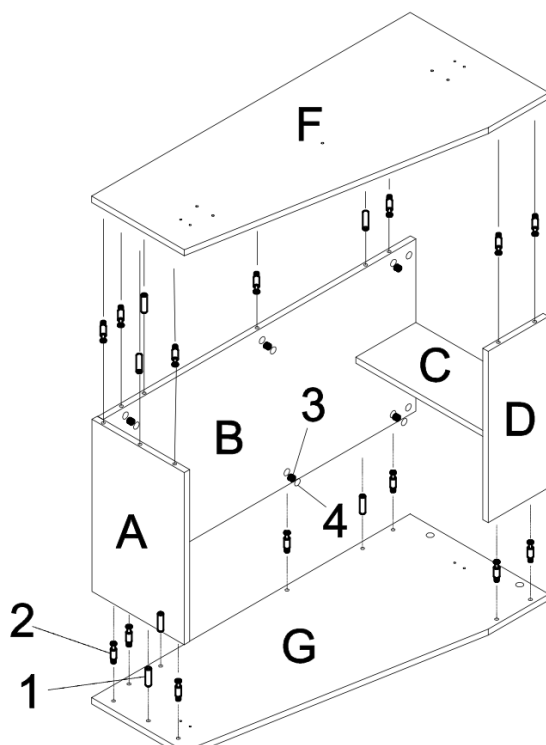




24"Deep Cedenza-Return False Pedestal P.4

 - ④ Install Back Panel (E) to Panels (B&C&D&F&G) and fasten them together, Attach Cam Stickers (4) to Cams (3);

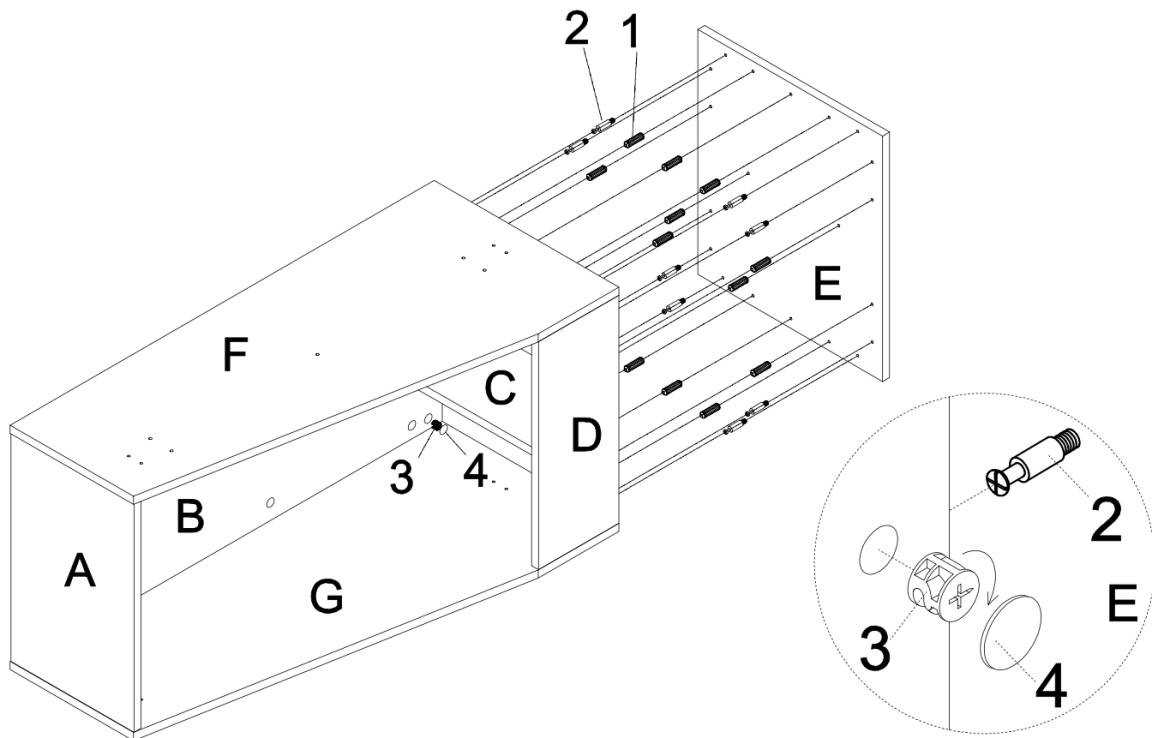

- ⑤ Use the screw (7) and washer (8) to attach T support (I) on the Top panel (F), then use the Screw (5) to attach the Metal leg (H) on the Bottom panel (G).

 Notes: The top panel and the bottom panel can be interchangeable, so the false pedestal can be interchangeable to allow the ped to be positioned on the left or right side.

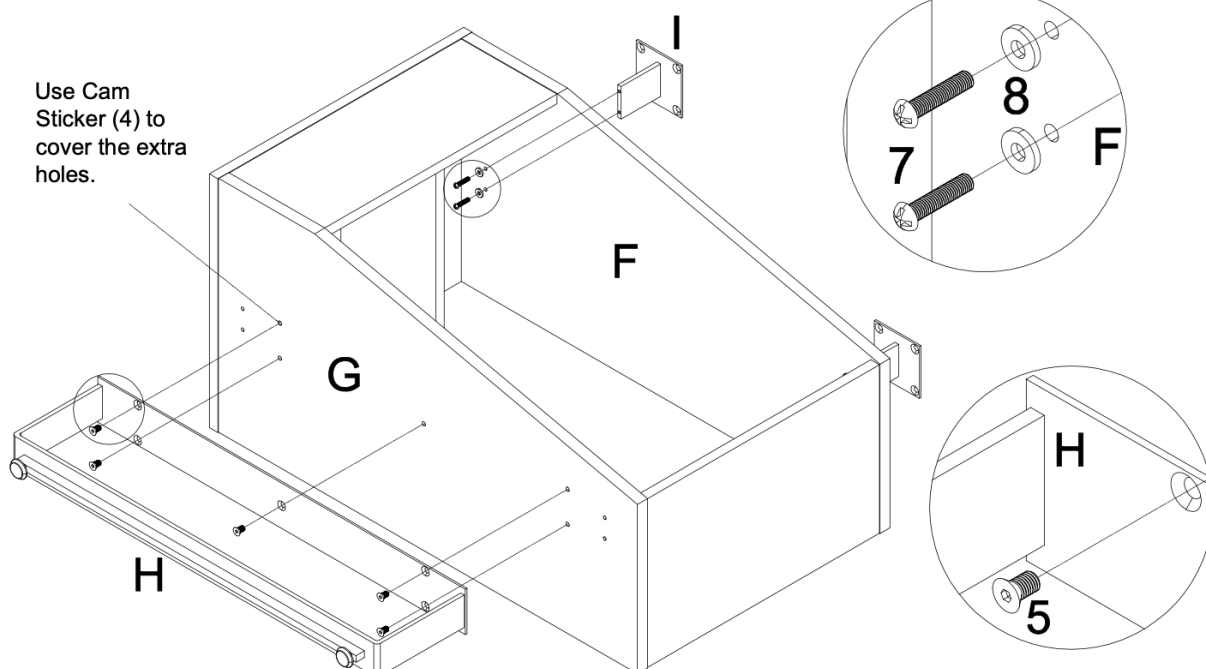



48x24 Return Top and Modesty


P.1



1 Allen Wrench M4 1 Pc	2 T Rectangle Support Part 1 Pc	3 Cam Post 1 Pc	4 Cam Lock 1 Pc	5 Cam Sticker 1 Pc	6 Screw M6*15mm 14 Pcs
7 Screw Ø4*14mm 8 Pcs	8 L-Bracket 32*30*30mm 4 Pcs	9 Bracket 150*90*3mm 2 Pcs	A Top Panel 1 Pc	B Modesty Panel 1 Pc	

CAM INSTRUCTIONS

1 Line up Cam Post turn clockwise	2 Insert the Cam Lock with the arrow pointing toward the hole in the edge	3 Insert the Cam Post into Cam Lock. Turn Cam Lock
---	--	--

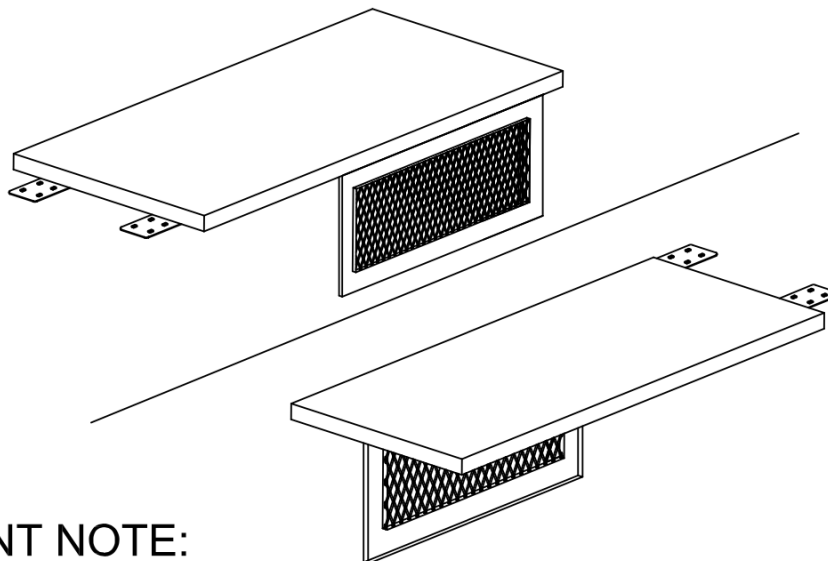 


IMPORTANT NOTE:

Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
Check that you have all parts and hardware.
Remove all wrapping materials, including staples & packing straps before you start assemble.
Do not tighten all screws or bolts until all completely assembled.
Keep all hardware parts out of reach of children.




48x24 Return Top and Modesty P.2

 - 1 Use the Screw (7) and the Bracket (8) to connect the Pedestal (EVP200GG) and the Modesty Panel (B);

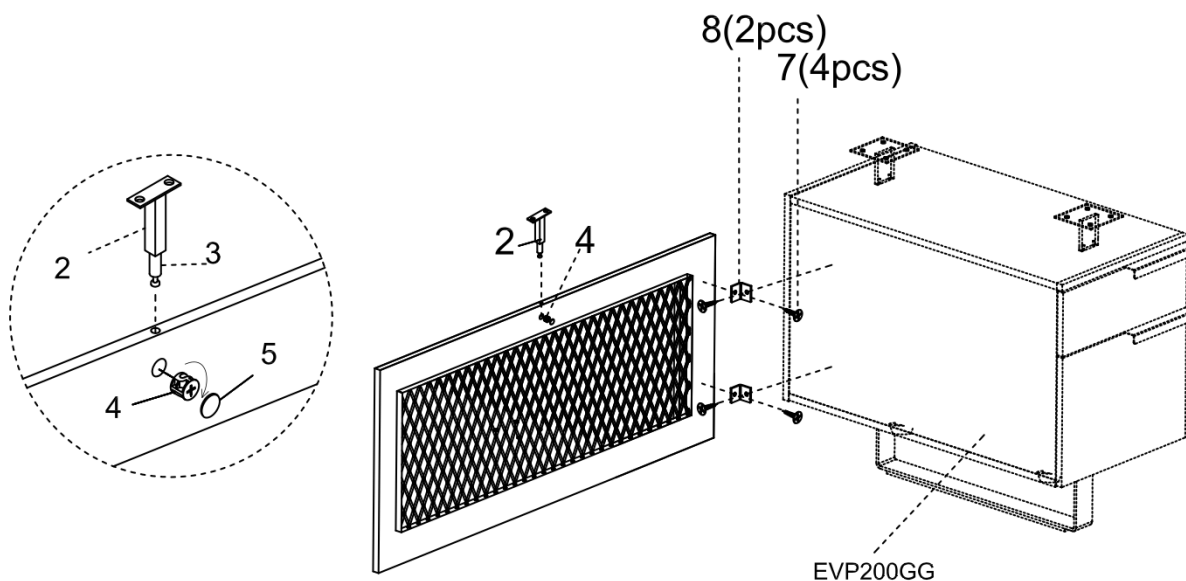

 
- 2 Use the Screw (7) and the Bracket (8) to connect the Pedestal (EVP110GG) and the Modesty Panel (B);

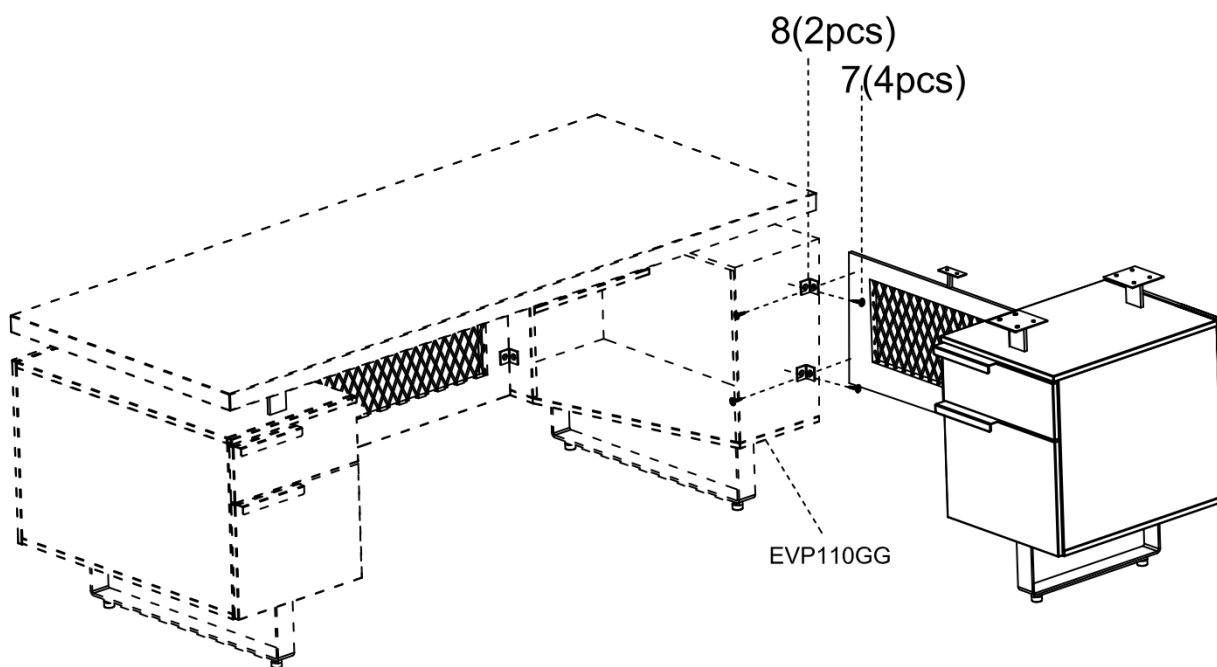



48x24 Return Top and Modesty P.3

 - ③ Put the Top Panel (A) on the Pedestal use the Screw (6) to lock the Top (A).

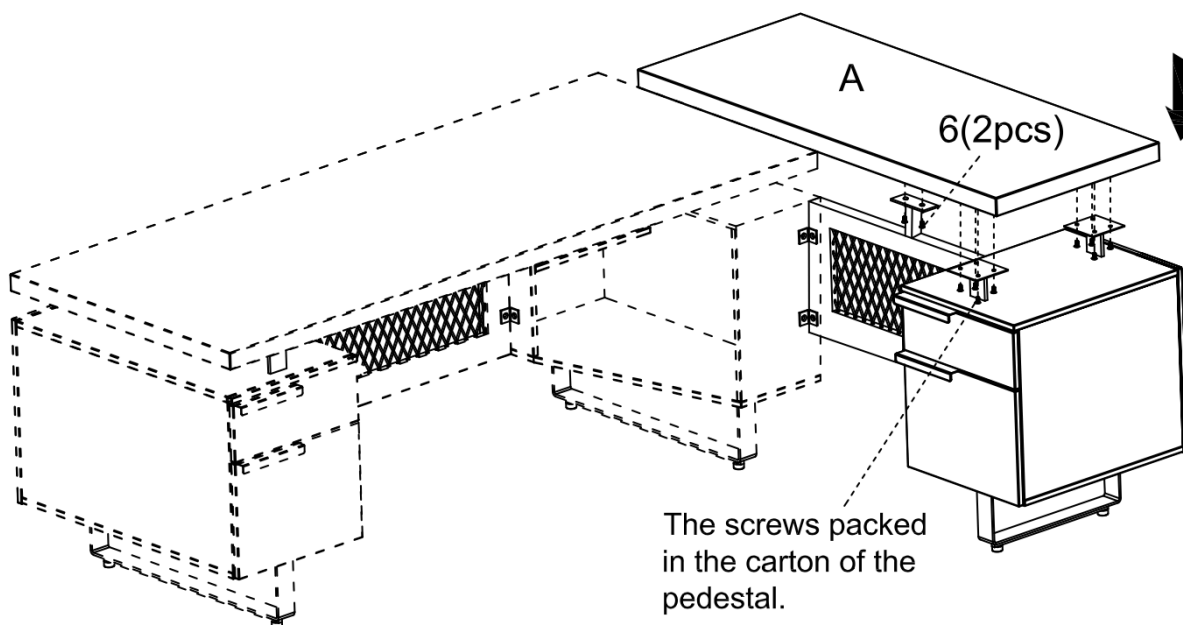

- ④ Use the Screw (6) to attach the Bracket (9) to connect the bottom of the Main Desk and Return.

