




Model #: OSRL3027

Name: Parker

Description: Club Chair w/ Power Station

Power Station Includes:

- 1 AC Outlet
- 2 USB-A Outlets
- 1 USB-C Outlet

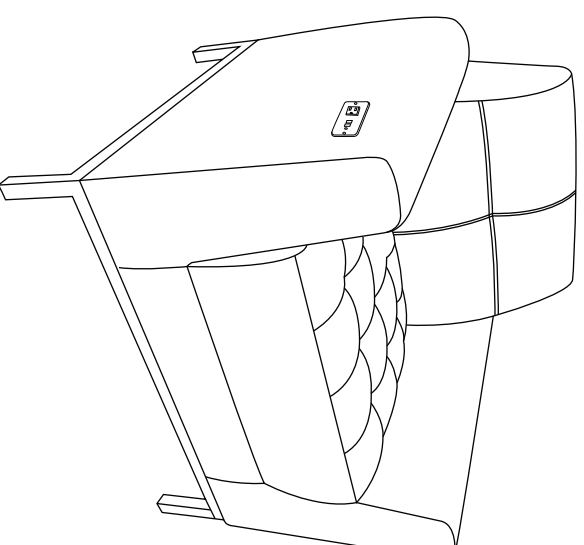

Assembly & Operating Instructions

Please read the instruction sheet(s) completely before assembly.

Maximum Weight Load: 325 lbs



OfficeSource
FURNITURE

officesourcefurniture.com

Customer Service


Tel: 800-388-8202 (Mon-Fri | 9am-5pm EST.)

Assembly Notes

1. After opening the carton, please check for missing parts and transportation damage. If needed, contact dealer immediately.

Usage Notes

1. Intended for indoor use.
2. Do not sit on back of chair to avoid accidental tipping, injury and product damage.
3. Do not step or stand on the chair - intended for sitting only.
4. Do not lean against the chair - intended for sitting only.
5. Avoid contact with sharp objects, heavy tools and hot surfaces.
6. To clean, wipe with a soft, dry cloth. For fabric stains, use a mild detergent mixed with water. Test the solution on a small area first.

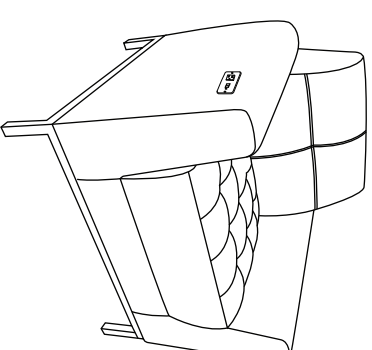

WARNING:

- This product is intended for indoor use only.
- Liquids exposed to electricity pose an immediate risk of electric shock. Do not use this unit if the power control is damaged, wet, or in contact with or near spilled water or any liquid. Do not use the unit if it has been exposed to water or any liquid. Do not handle the plug or remote control with wet hands.
- Unplug the power cord immediately if you detect strange odors or fumes coming from the unit.
- Plug directly into a wall outlet. Do not use an extension cord, adapter, surge protector, or power strip.
- Do not attempt to disconnect the power plug by pulling the power cord. Always hold the power plug and pull it out.
- Disconnect the power plug from the outlet before cleaning, moving, servicing, or when not in use for an extended period.
- Do not place the cord under carpet or in a location where it could become worn.
- Do not allow the electrical cord to be pinched anywhere.
- Keep the electrical cord away from heat sources.
- Do not use this product where the cord may be a trip hazard.
- Never operate the unit with a damaged power supply, electrical cord, plug, or connector.
- Check the condition of the power supplies, electrical cords, plugs, and connectors often.