




Model #: OSRL3028

Name: Parker

Description: Sofa w/ Power Stations (1 per Arm)

Each Power Station Includes:

- 1 AC Outlet
- 2 USB-A Outlets
- 1 USB-C Outlet

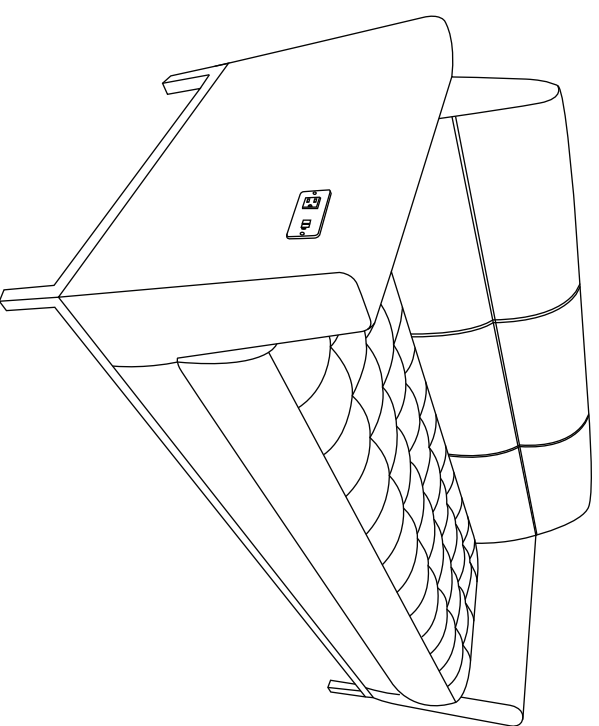

officesourcefurniture.com

Customer Service

Tel: 800-388-8202 (Mon-Fri | 9am-5pm EST.)

Assembly & Operating Instructions

Please read the instruction sheet(s) completely before assembly.

Maximum Weight Load: 750 lbs



OfficeSource®
FURNITURE

Customer Service
Tel: 800-388-8202 (Mon-Fri | 9am-5pm EST.)
officesourcefurniture.com




OfficeSource®
FURNITURE

Assembly Notes

1. After opening the carton, please carefully check for missing parts and transportation damage and if needed, contact dealer immediately.
2. Once installed, the gas lift will be difficult to remove. It is not recommended to remove the gas lift to avoid damage to other parts of the chair.
3. Contact dealer if disassembly assistance is needed.

Usage Notes

1. Intended for use indoors.
2. Intended for single person use.
3. Do not sit on end of chair to avoid accidental tipping and injury.
4. Do not step or stand on the chair – chair is intended for sitting only.
5. Use caution when reclining, especially as tension is reduced by user.
6. Do not lean against product – chair is intended for sitting only.
7. Avoid contact with sharp objects, heavy tools and hot surfaces.
8. As assembly may loosen overtime, for best user safety, conduct regular check of nuts and bolts to insure they are always tight and secure.
9. To clean, wipe with a soft and dry cleaning cloth. If there are stains on fabric, use a mild detergent to wipe clean.

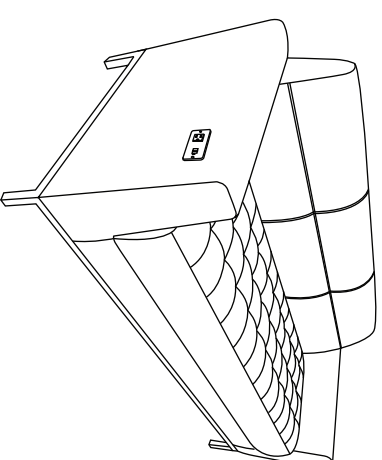

WARNING:

- This product is intended for indoor use only.
- Liquids exposed to electricity pose an immediate risk of electric shock. Do not use this unit if the power control is damaged, wet, or in contact with or near spilled water or any liquid. Do not use the unit if it has been exposed to water or any liquid. Do not handle the plug or remote control with wet hands.
- Unplug the power cord immediately if you detect strange odors or fumes coming from the unit.
- Plug directly into a wall outlet. Do not use an extension cord, adapter, surge protector, or power strip.
- Do not attempt to disconnect the power plug by pulling the power cord. Always hold the power plug and pull it out.
- Disconnect the power plug from the outlet before cleaning, moving, servicing, or when not in use for an extended period.
- Do not place the cord under carpet or in a location where it could become worn.
- Do not allow the electrical cord to be pinched anywhere.
- Keep the electrical cord away from heat sources.
- Do not use this product where the cord may be a trip hazard.
- Do not use this product if it is damaged.
- Never operate the unit with a damaged power supply, electrical cord, plug, or connector.
- Check the condition of the power supplies, electrical cords, plugs, and connectors often.

Distributed exclusively by COE Distributing!



Distributed exclusively by COE Distributing!

