







 
 
 









HARDWARE


1  Cam Lock 12 Pcs	2  Klix Cam 12Pcs	3  Cam cap 12 Pcs	4  Shelf Pin 4 Pcs	5  Adjustable Glide 4 Pcs	6  Bolt M6X35MM 4 Pcs	7  L-KEY 1 Pcs	8  Hole Plug 15mm 4 Pcs
--	---	---	--	--	--	--	---

COMPONENTS

A  TOP PANEL	B  SIDE PANEL-L	C  SIDE PANEL-R	D  BOTTOM PANEL	E  BACK PANEL	F  ADJUST SHELF PANEL	G  WOODEN LEG X 4PCS
---	--	--	--	---	--	---

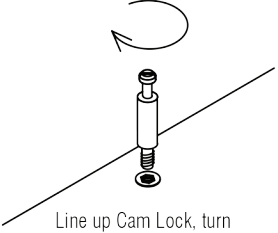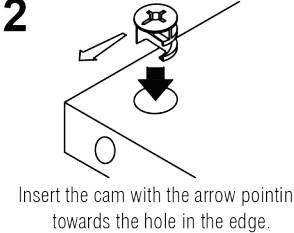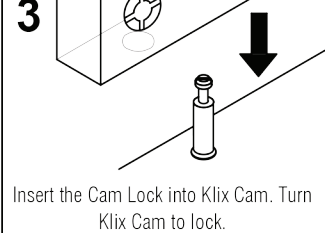   KLIX CAM INSTRUCTIONS


1  Line up Cam Lock, turn clockwise.	2  Insert the cam with the arrow pointing towards the hole in the edge.	3  Insert the Cam Lock into Klix Cam. Turn Klix Cam to lock.
---	--	--

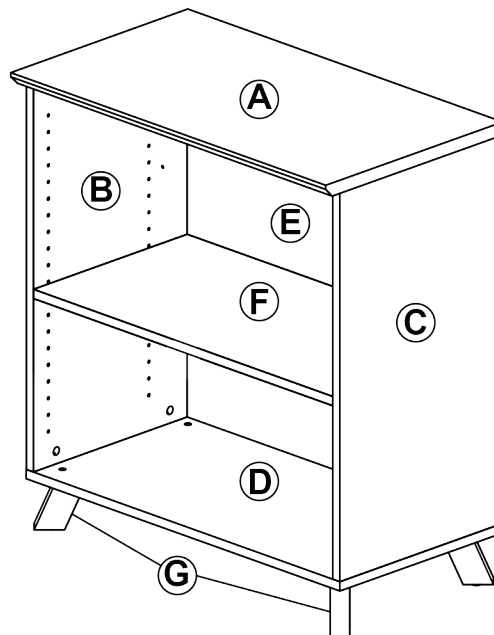 **IMPORTANT NOTE :**


- Place all wooden parts on a clean, smooth surface to prevent the parts from being scratched.
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten any screws or bolts until the unit is completely assembled.
- Keep all hardware parts out of reach of children.

1

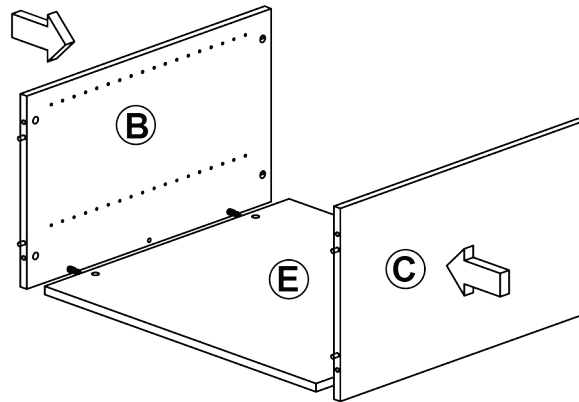 Attach Side Panel-L(B) & Side Panel-R(C) to Back Panel(E) using Cam Lock(1) and Klix Cam(2).




2

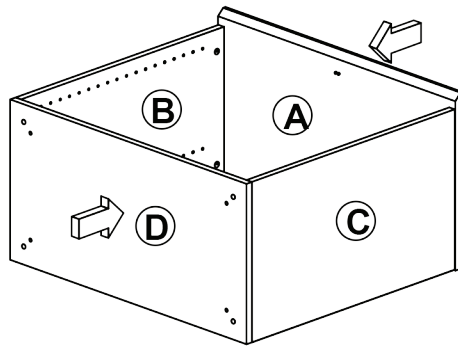 

Attach Top Panel(A) & Bottom Panel(D) to Side Panel L(B) & Side Panel R(C) using Cam Lock(1) and Klix Cam(2).

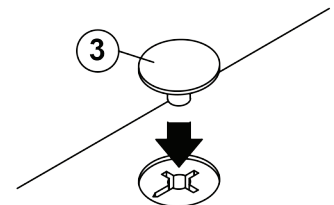 
3



Attach Cam Cap (3) to all Klix Cam(2) by pushing neck through center of cam.

4

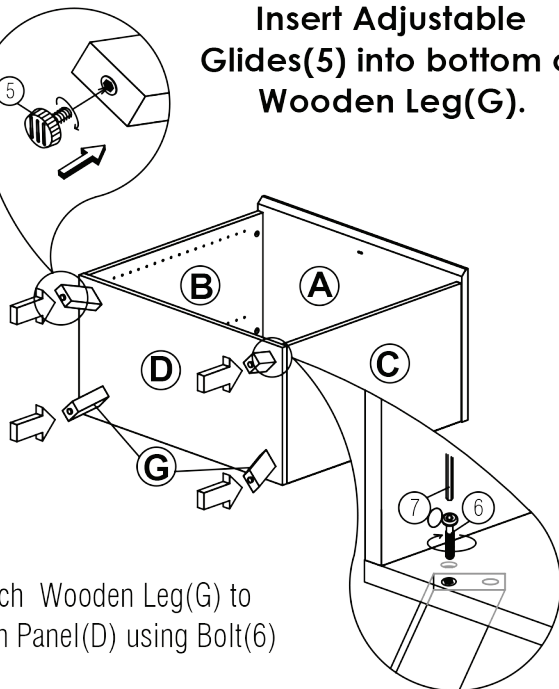 
Insert Adjustable Glides(5) into bottom of Wooden Leg(G).



Attach Wooden Leg(G) to Bottom Panel(D) using Bolt(6)

5

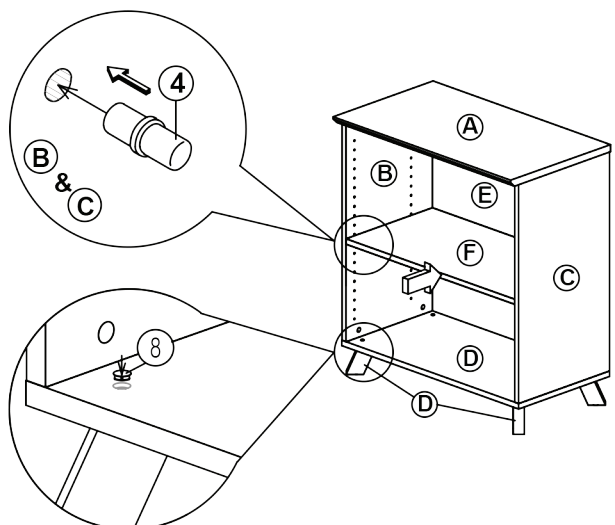 Insert Shelf Pins(4) and place Shelf(F) in desired location.



Insert the Hole Plug (8) into Bottom Panel(D).