


 




Before assembly, please remove all parts from carton, verifying that you have the correct quantities, and read all the instructions.






## IN THE CARTON:

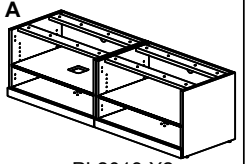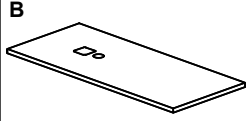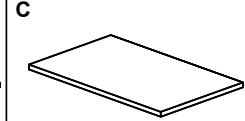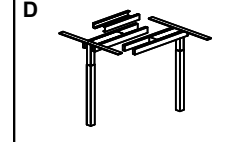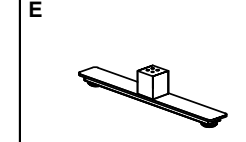
### HARDWARE

1  JCBC Screw M6 x 40mm = 4pcs ¼ Washer = 8pcs	2  M4 x 65 Allen-Key 1 Pc	3  ALLEN CAP Screw M10 x 70MM 4 Pcs	4  SQUARE PLATE 2 Pcs	5  M10 Allen-Key 1 Pc	6  Screw 3.5X16MM 8 Pcs
---	--	---	---	--	--

HARDWARE PACK WITH PL2013

### COMPONENTS


A  PL2013 X2	B  PL110HAT	C  PLT TOP	D  METAL LEG	E  PLDAPTHATFOOT30
---	--	---	--	---

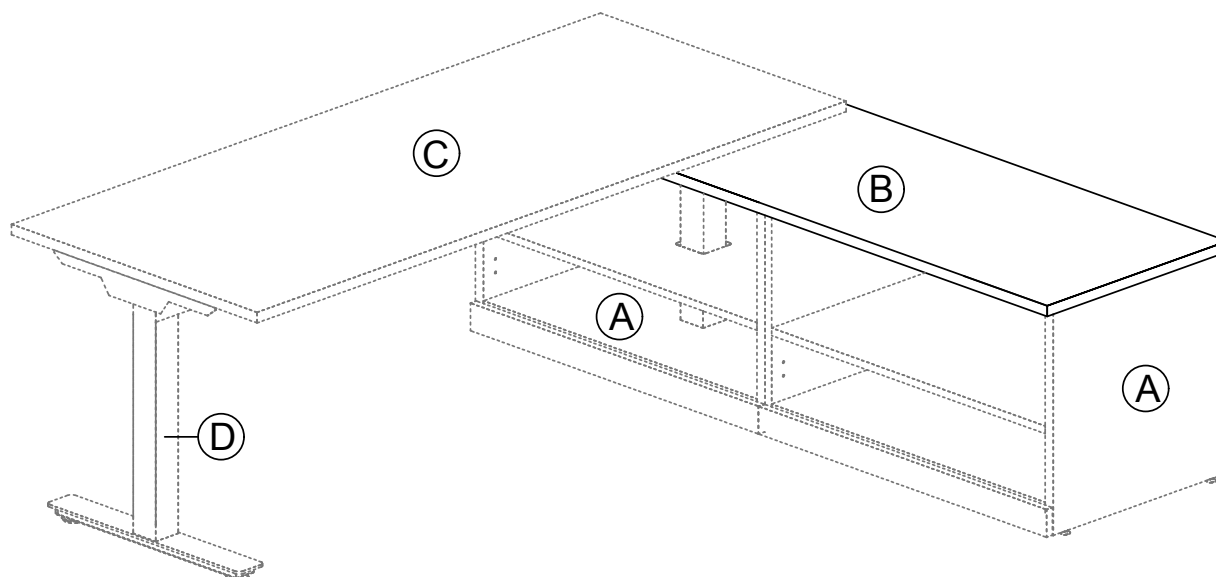



Before assembly, please remove all parts from carton, verifying that you have the correct quantities, and read all the instructions.

**INSTRUCTION:**

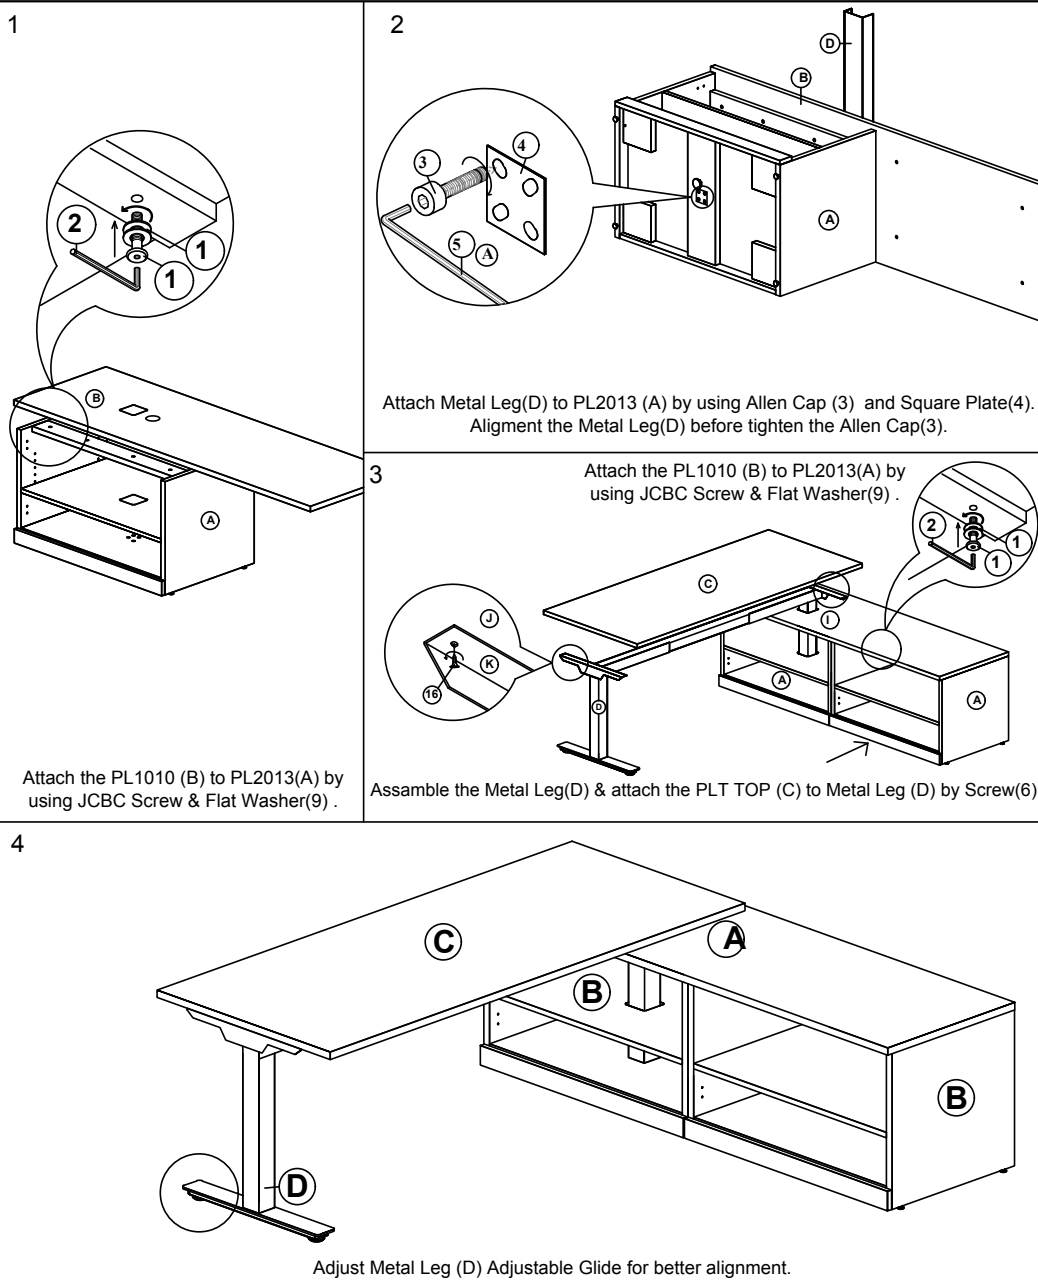

**2 OF 2**

**⚠ ATTENTION ⚠**

Place all wooden parts on a clean, smooth surface to prevent them from being scratched. Check to be sure that you have all parts and hardware. Remove all wrapping materials, including staples and packing straps before you start to assemble. Do not tighten all screws/bolts until all completely assembled. Keep all hardware parts out of reach of children. If any parts are missing, broken, damaged or worn, stop use of product until repairs have been made using factory authorized parts. Failure to follow these warnings may result in injury.