




This assembly manual contains important safety information. Please read and keep for future reference.

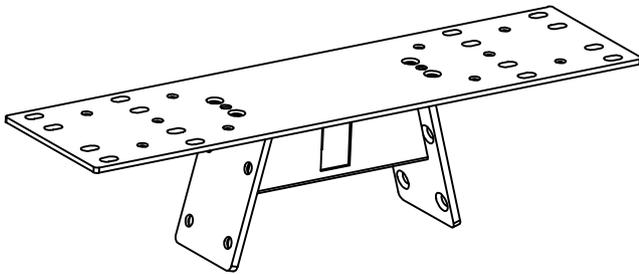

Model No.: OSTVALEGM2430

Description: Oblique Leg Mount for 24"
and 30"D Tops

Useful Hints Before You Start

1. Read each step carefully before starting.
2. Before beginning assembly, identify, sort and count the parts.
3. Using the wrong screws will cause damage.
4. Using incompatible hardware might cause damage to product.
5. It is important that each step is performed in correct order to avoid difficulties.
6. Assemble your furniture on packaging cardboard to prevent scratching or damage.
7. Do not tighten any screws or bolts until the unit is completely assembled.
8. Keep all hardware parts out of reach of children.

Necessary Tools



Phillips
Screwdriver



Flat Head
Screwdriver



Hammer

 


CAUTION - Risk of product damage!
Power Drill can be used on lowest
torque setting.





Please read completely through the instructions and verify that all listed parts and hardware are present before beginning assembly.



Parts List

<p>A</p>  <p>OSTVALEGM2430(1x)</p>	<p>B</p>  <p>OSTVAMETLEG(2x) (Sold Separately)</p>	<p>C</p>  <p>OSTVA243041CBA2(2x) (Sold Separately)</p>	<p>D</p>  <p>OSTADJMDB(2x) (Sold Separately)</p>	<p>E</p>  <p>OST Top(1x) (Sold Separately)</p>
---	--	--	---	--

  Hardware List

<p>1</p>  <p>Bolts -1/2"(2x)</p>	<p>2</p>  <p>Allen Key(1x)</p>	<p>3</p>  <p>Jam Screw(4x)</p>	<p>4</p>  <p>Spacer(3x)</p>	<p>5</p>  <p>Wood Screw x20mm(10x)</p>
<p>6</p>  <p>CSK Bolt M6*20(12x)</p>	<p>11</p>  <p>17MM Flat Washer(2x)</p>			

  Main Desk Beam Parts List




<p>7</p>  <p>Wood Screw x20mm(4x)</p>	<p>8</p>  <p>CSK Bolt M6*16(1x)</p>	<p>9</p>  <p>Bolts M6x12mm(12x)</p>
---	---	---

Cross Brace Parts List

<p>10</p>  <p>CSK Bolt M6*16(4x)</p>
--



1

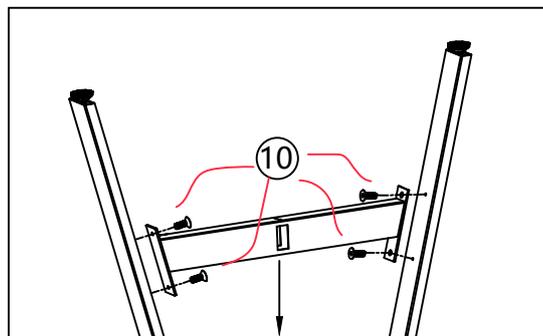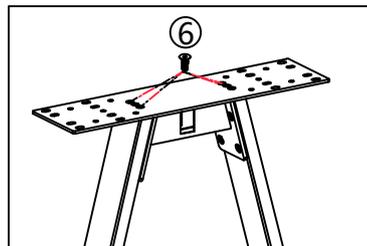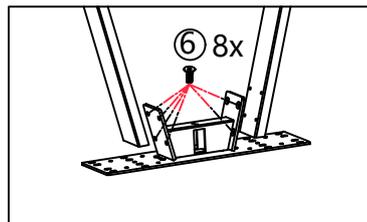


Place the OSTVAMETLEG(B) on the top of OSTVALEGM2430(A) and use Bolts(6) to lightly tighten the leg to the top mount plate. When everything is in position, then screw all Bolts(6) tightly.

Place the OSTVA243041CBA2(C) in the middle of the legs and attach with Bolts(10).

2

Place OST Top(E) upside down on a clean surface.


OST Tops are used for several applications - only two of these inserts are used for the OSTVALEGM2430. These are the "A2" inserts, noted in the image and instructions.

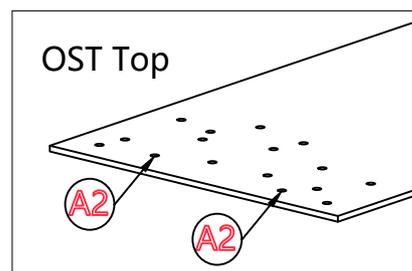

Slide the OSTADJMDB(D) slightly through the rectangle opening found at the OSTVALEGM2430(A).

Fasten the second leg to the OST Top(E).


Centre the OSTADJMDB(D) so that it is placed evenly through the square opening on OSTVA243041CBA2(C).

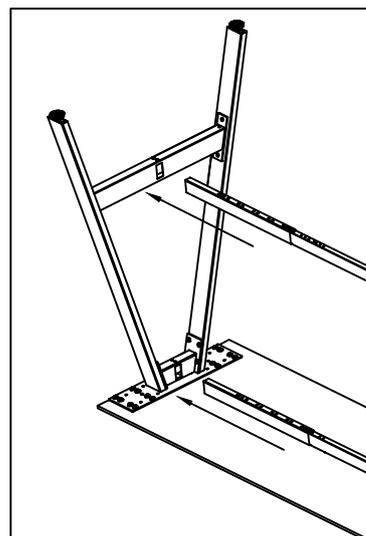


Tighten the OSTADJMDB(D) to each leg by using two of the Jam Screws(3) with the Allen Key(2).

Use the Wood Screws(5) to attach the OSTVALEGM2430(A) to the top.

Note: The Wood Screw pack is inside the OSTADJMDB(D).

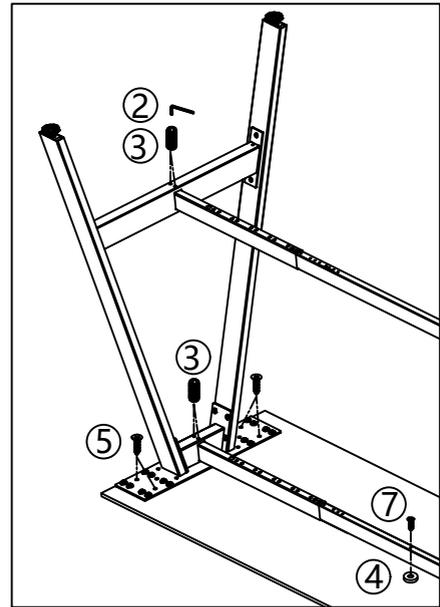

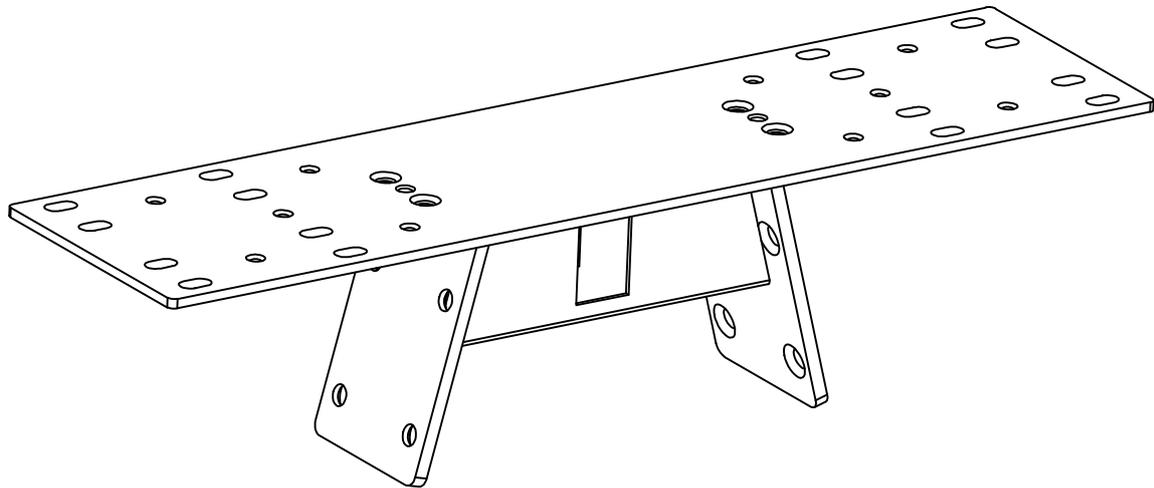

Care & Maintenance

- Check bolts/screws periodically and tighten them if necessary.
- Use a soft, clean cloth that will not scratch the surface when dusting.
- Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
- Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within furniture finish.
- It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.