

Before assembly, please remove all parts from carton, verifying that you have the correct quantities, and read all the instructions.

IN THE CARTON:

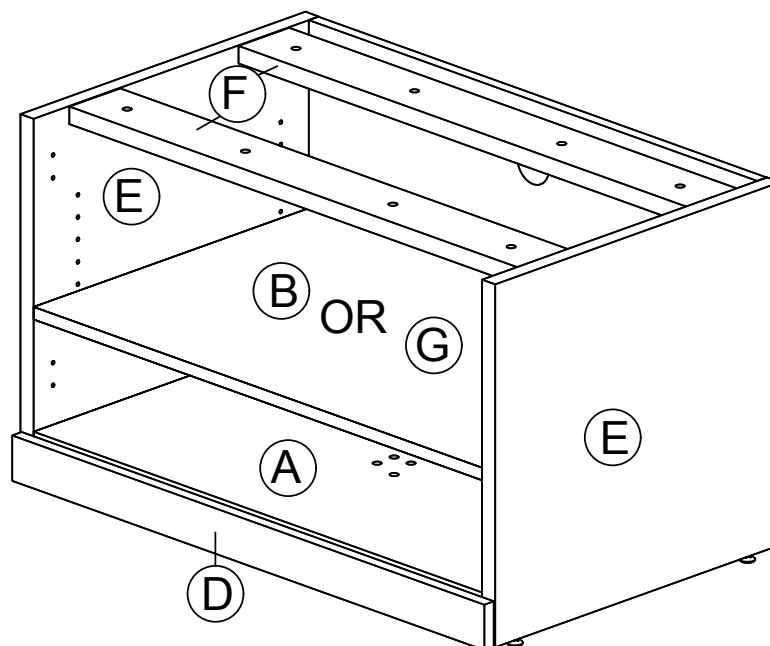
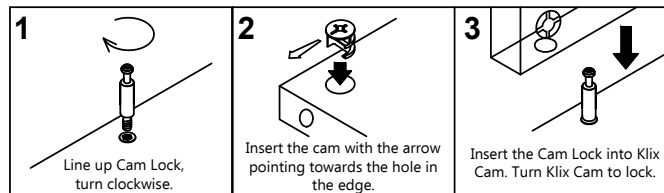
HARDWARE

1 Cam Lock 10 Pcs	2 Klix Cam 10 Pcs	3 Housing Cap (Long) 8 Pcs	4 Housing Cap (Short) 2 Pcs	5 Adjustable Glide 4 Pcs	6 Iron Shelf Support 4 Pcs	7 Screw #6 x 5/8" 18 Pcs	8 6 Hole L-Bracket 3 Pcs
9 JCBC Screw M6 x 40mm = 4pcs 1/4 Washer = 8pcs	10 M4 x 65 Allen-Key 1 Pc	11 Wire Cap 1 Pc	12 ALLEN CAP Screw M10 x 70MM 4 Pcs	13 SQUARE PLATE 2 Pcs	14 Adjustable Glide BIG 1 Pc	15 M10 Allen-Key 1 Pc	16 Screw 3.5X16MM 8 Pcs

COMPONENTS

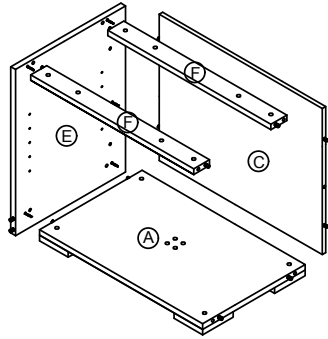
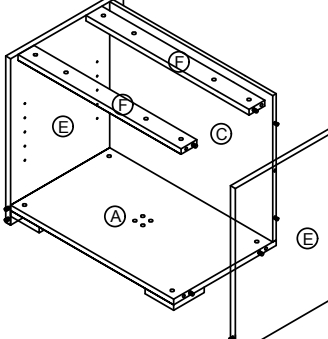
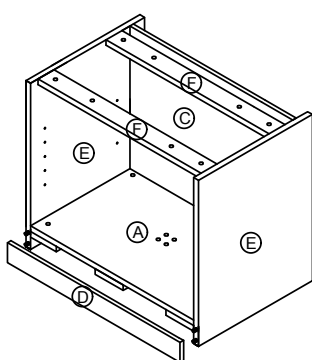
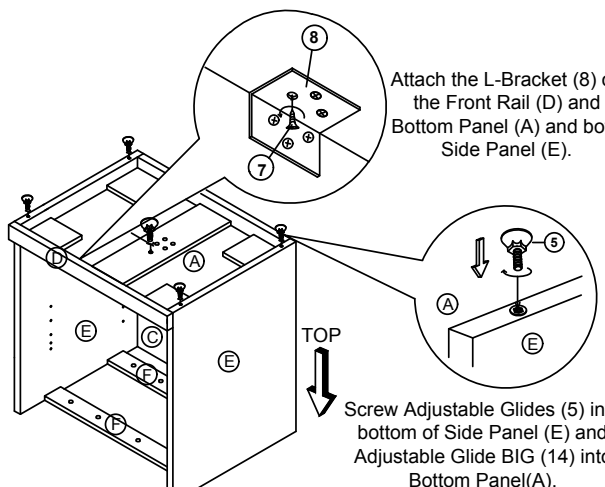
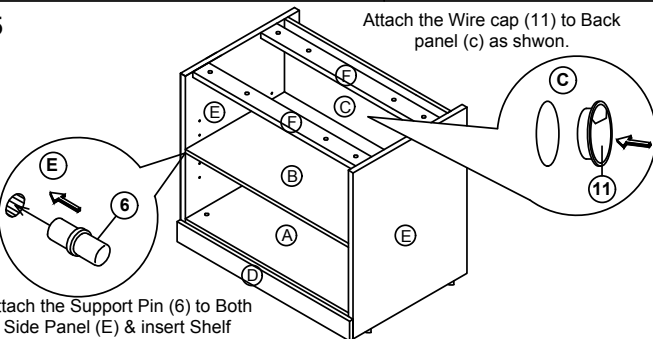
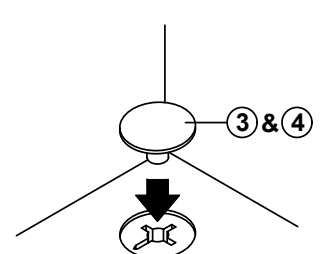
A Bottom Panel	B Adjustable Shelf-1	C Back Panel	D Front Rail	E Side Panel x 2	F Hanging Panel x 2	G Adjustable Shelf-2
-----------------------	-----------------------------	---------------------	---------------------	-------------------------	----------------------------	-----------------------------

KLIX CAM INSTRUCTIONS



Before assembly, please remove all parts from carton, verifying that you have the correct quantities, and read all the instructions.

INSTRUCTION:

1  Attach the Bottom Panel (A) and Hanging Panel (F) and Back Panel (C) to Side Panel (E) by using Cam Lock (1) and Klix Cam (2).	2  Attach the another Side Panel (E) to Hanging Panel (F) and Back Panel (C) and Bottom Panel (A) by using Cam Lock (1) and Klix Cam (2).
3  Attach the Front Rail (D) to Both Side Panel (E) by wood dowel.	4  Attach the L-Bracket (8) on the Front Rail (D) and Bottom Panel (A) and both Side Panel (E). Screw Adjustable Glides (5) into bottom of Side Panel (E) and Adjustable Glide BIG (14) into Bottom Panel (A).
5  Attach the Support Pin (6) to Both Side Panel (E) & insert Shelf Panel (B) or (G) as shown. Attach the Wire cap (11) to Back panel (C) as shown.	6  Attach Housing Cap (3/4) to all Klix Cams (2) by pushing neck through center of cam.

Last Updated: 02/2021

2 OF 2

⚠ ATTENTION ⚠

Place all wooden parts on a clean, smooth surface to prevent them from being scratched.

Check to be sure that you have all parts and hardware. Remove all wrapping materials, including staples and packing straps before you start to assemble. Do not tighten all screws/bolts until all completely assembled. Keep all hardware parts out of reach of children. If any parts are missing, broken, damaged or worn, stop use of product until repairs have been made using factory authorized parts. Failure to follow these warnings may result in injury.