

Release Notes for Unified DMP Intrusion Integration v3.00.1209.0

Document Revision A0
October 2016

This document provides important information about the integration software for the victor DMP Intrusion Integration. Read this document before you install the product.

Product: Unified DMP Intrusion Integration

- Integration software version: 3.00.1209.0
- Release version: 4.9

Note: This version is also compatible with victor Unified Client versions: 4.6, 4.7, 4.7.1, 4.8, 4.8SP1 and 4.8.1.

1. Overview

The victor platform provides seamless integration with the DMP Intrusion Security System, allowing customers to monitor their important intrusion system devices from victor. The software also monitors: the Intrusion Panel status, Arming or Disarming Partitions, Activating or De-activating Outputs and Bypass or Reset Zones.

2. What's New in this Release

This version of DMP Intrusion Integration driver supports XR150N, XR550N and XR550E along with previous DMP panels.

3. Qualified Hardware and Firmware

The victor DMP Intrusion Integration supports the following hardware:

Table 1 DMP Intrusion Firmware

DMP Panel Model	DMP Panel Firmware
XR500N	V206, V208, V212
Canadian Version XR500N	V208, V206, V212
XR500E	V212, V208
XR100N	V206,V208, V212
XR150N	V110
XR550N	V111
XR550E	V111

4. Software Requirements

The DMP Intrusion Integration requires the following software:

- victor Unified client: v4.9

5. Contents of the Installation Package

The following table lists the contents of the DMP Intrusion Integration installation package:

File	Description
Unified_DMP-Integration.exe	DMP Unified Integration software setup file
8200-1147-1017_A0_v4.8.1_victor_DMP_IntrusionIntegration_UM.pdf	Unified victor Integration Software for DMP Intrusion User Guide
8200-1147-99 A0_v4.9_DMP_Intrusion_Integration_RN.pdf	Unified victor v4.9 Integration Software for DMP Intrusion Release Notes

6. Supported Installation Types

The victor DMP Intrusion Integration supports the following installation types:

- Unified Standalone
- victor Standalone
- Unified Enterprise
- victor Enterprise

7. Pre-Installation

Prerequisites to install DMP Intrusion Integration on the victor Application Server:

- You must be a member of the local Administrators group or have equivalent privileges.
- You must install and license the victor Application Server with the DMP Integration

Prerequisites to install DMP Intrusion Integration on the clients:

- You must be a member of the local Administrators group or have equivalent privileges.
- You must install victor client.

8. Installation

Note: Ensure that you stop all applications to avoid problems during installation.

Run the **Unified_DMP-Integration.exe** to install the DMP Integration on the victor Application Server or remote client.

For detailed instructions about installing the DMP Intrusion Integration, see the *victor unified client DMP Integration User Manual*.

Note: You cannot install the DMP Integration server components on a victor Application Server MAS.

9. Post Installation

Follow the steps after installation:

1. Launch the **Server Configuration Application**:
 - a. On the taskbar, click the **Start** button and then click **All Programs**.
 - b. Click **Tyco**, right-click the **Server Configuration** and then click **Run as Administrator**. The **Server Configuration Application** page opens.
2. Start the **DMP Services**:
 - a. On the **Server Configuration Application** page, click the **Services** tab.
 - b. Ensure that both the Crossfire Framework Service and the Crossfire Server Component Framework Service are **running**.
 - c. In the **Extension Services** area, locate the **DMP Driver Service**. Select the **Enabled** check box and then click the **Start** button. The status of the DMP Driver Service changes to **Running**.
3. Launch the victor client:
 - a. On the taskbar, click the **Start** button and then click **All Programs**.
 - b. Click **victor**.

10. Upgrading the DMP Integration

Caution:

If you have made any changes in the configuration file - `DMPDriverService.exe`, ensure that you back up the file before upgrading. The configuration file is located at `Tyco\CrossFire\ServerComponents`.

Follow the steps to upgrade the DMP Integration:

- Upgrade victor v4.8SP1 to victor v4.9, and then install the DMP Integration.
- Upgrade victor v4.8.1 to victor v4.9, and then install the DMP Integration.

11. Known Issues and Limitations

This section lists all the known issues and limitations in this release:

- Due to panel limitations, when the DMP partition is disarmed, the DMP zones that were previously in a bypassed state display the victor supervision status as **Bypass** instead of **Open**.
- DMP panel comes online irrespective of Panel Type selected in the DMP Panel Configuration window.
- DMP output status is not reported by the panel to victor. Output status is only updated during the synchronization operation.
- Messages for the activities that were performed during the offline state of the panel are reported with the current timestamp.
- DMP Hardware with the Canadian version does not support remote Arm.
- Occasionally, multiple device activity messages are logged in the victor Activity Viewer.
- First time configuration of 'Blank' type zone shows status as 'Unknown' for the Hardware, Supervision and Active states.
- After disarming an armed Partition from victor, the associated bad state zones status is still displayed as 'Bypassed' in victor.
- Partition schedule status is only updated after Synchronization. Partition schedule status changes are not reported in the victor Activity Viewer, because the panel does not notify the schedule status changes through the Alarm Channel.
- This integration does not support Key Fob zones.
- This integration does not support the migration of a standalone machine with a DMP Driver to SAS.
- This integration does not support journaling of system activity messages.
- When victor unified client is upgraded from 4.7.1 to 4.8 SP1 or from 4.8 to 4.8 SP1, the integration service will be missing from the Server Configuration application. To view the integration service, resynchronize the DMP integration driver from **Programs and Features** or from the integration installer.
- If you install the DMP Intrusion Integration driver on remote clients, the **Integration Setup** dialogue box appears and you may be prompted to select an **Installation Option** for Redundancy sever. Ignore this message and click **Next** to continue with installation.
If you select the **Redundancy sever installation using supported third party redundancy** check box, provide the virtual server location, and then click **Next**; this selection is ignored and there is no functional impact.

12. End of Release Notes

The trademarks, logos, and service marks displayed on this document are registered in the United States [or other countries]. Any misuse of the trademarks is strictly prohibited and Tyco Security Products will aggressively enforce its intellectual property rights to the fullest extent of the law, including pursuit of criminal prosecution wherever necessary. All trademarks not owned by Tyco Security Products are the property of their respective owners, and are used with permission or allowed under applicable laws.

Product offerings and specifications are subject to change without notice. Actual products may vary from photos. Not all products include all features. Availability varies by region; contact your sales representative.

© 2016 Tyco Security Products.
All rights reserved.