

Release Notes for Unified DMP Intrusion Integration v4.8.1

Document Version A0 July 2016

This document provides important information about the integration software for the victor DMP Intrusion Integration. Read this document before installing the product.

Product: Unified DMP Intrusion Integration

- Integration Software Version: 3.00.1209.0
- Release Version: 4.8.1

Note: This version is also compatible with victor Unified Client versions: 4.6, 4.7, 4.7.1, 4.8, and 4.8SP1.

1. Overview

The victor platform provides seamless integration with the DMP Intrusion Security System, allowing customers to monitor their important intrusion system devices from victor. The software also monitors: the Intrusion Panel status, Arming or Disarming Partitions, Activating or De-activating Outputs and Bypass or Reset Zones.

2. What's New in this Release

This version of DMP Intrusion Integration driver supports XR150N, XR550N and XR550E along with previous DMP panels.

3. Qualified Hardware and Firmware

The victor DMP Intrusion Integration supports the following hardware:

DMP Panel Model DMP Panel Firmware V206, V208, V212 XR500N Canadian Version XR500N V208, V206, V212 XR500E V212, V208 XR100N V206, V208, V212 XR150N V110 XR550N V111 XR550E V111

Table 1 DMP Intrusion Firmware

4. Software Requirements

The DMP Intrusion Integration requires the following software versions:

• victor Unified Client: 4.8.1

5. Contents of the Installation Package

The following table lists the contents of the DMP Intrusion Integration installation package:

File	Description
Unified_DMP-Integration.exe	DMP Unified Integration software setup file
8200-1147-	Unified victor v4.8.1 Integration Software for
21_A0_v4.6_victor_DMP_IntrusionIntegration_UM.pdf	DMP Intrusion User Guide
8200-1147- 1018	Unified victor v4.8.1 Integration Software for
A0_v4.8.1_DMP_Intrusion_Integration_RN.pdf	DMP Intrusion Release Notes

8200-1147- 1018 A0 1

6. Supported Installation Types

Following installation types are supported for victor DMP Intrusion Integration:

- Unified Standalone
- victor Standalone
- Unified Enterprise
- victor Enterprise

7. Pre-Installation

Prerequisites to install DMP Intrusion Integration on the victor Application Server:

- You must be a member of the local Administrators group or have equivalent privileges.
- victor Application Server must be installed and licensed with the DMP Integration

Prerequisites to install DMP Intrusion Integration on the clients:

- You must be a member of the local Administrators group or have equivalent privileges.
- victor client must be installed.

8. Installation

Note: Ensure you stop all applications to avoid problems during installation.

Run the **Unified_DMP-Integration.exe** to install the DMP Integration on the victor Application Server or remote client.

For detailed instructions about installing the DMP Intrusion Integration, see the *victor unified client DMP Integration User Manual*.

Note: You cannot install the DMP Integration server components on a victor Application Server MAS.

9. Post Installation

Follow the steps after installation:

- 1. Launch the **Server Configuration Application**:
 - a. On the taskbar, click the **Start** button and then click **All Programs**.
 - b. Click **Tyco**, right-click the **Server Configuration** and then click **Run as Administrator**.

Server Configuration Application page opens.

2. Start **DMP Services**:

- a. On the **Server Configuration Application** page, click the **Services** tab.
- b. Ensure that both Crossfire Framework Service and Crossfire Server Component Framework Service are **running**.
- c. In the **Extension Services** area, locate the **DMP Driver Service**. Select the **Enabled** check box and then click the Start button. The status of the DMP Driver Service changes to **Running**.
- 3. Launch the victor client:
 - a. On the taskbar, click the **Start** button and then click **All Programs**.
 - b. Click **victor**.

8200-1147- 1018 A0

10. Upgrading the DMP Integration

Caution:

Before you upgrade from a previous version of the driver to the current version, you must back up the configuration file - DMPDriverService.exe located at $\frac{1}{2}$

C:\Program Files (x86)\Tyco\CrossFire\ServerComponents.

Follow the steps to upgrade the DMP Intrusion Integration:

- Upgrade victor v4.8 to victor v4.8SP1, and then install the DMP Integration.
- Upgrade victor v4.8SP1 to victor v4.8.1, and then install the DMP Integration.

11. Known Issues and Limitations

- When the DMP Partition is disarmed, the DMP Zones that were previously in a bypassed state display the victor supervision status as **Bypass** instead of **Open**, due to panel limitations.
- DMP panel comes online irrespective of Panel Type selected in the DMP Panel Configuration window.
- DMP output status is not reported by the panel to victor. Output status is only updated during the synchronization operation.
- Messages for the activities performed during the offline state of the panel are reported with the current timestamp.
- DMP Hardware with the Canadian version does not support remote Arm.
- Occasionally, multiple device activity messages are logged in the victor Activity Viewer.
- First time configuration of 'Blank' type zone shows status as 'Unknown' for Hardware, Supervision and Active state.
- After disarming armed Partition from victor, associated bad state zones status is still displayed as 'Bypassed' in victor.
- Partition schedule status is only updated after Synchronization. Partition schedule status changes are not reported in the Victor Activity Viewer, because the panel does not notify the schedule status changes through the Alarm Channel.
- Key Fob zones are not supported in this integration.
- Migration of a standalone machine with a DMP Driver to SAS is not supported.
- Journaling of system activity messages is not supported in this integration.
- When victor unified client is upgraded from 4.7.1 to 4.8 SP1 or from 4.8 to 4.8 SP1, the integration service will be missing from the Server Configuration application. To view the integration service, resynchronize the DMP integration driver from **Programs and Features** or the integration installer.

12. End of Release Notes

The trademarks, logos, and service marks displayed on this document are registered in the United States [or other countries]. Any misuse of the trademarks is strictly prohibited and Tyco Security Products will aggressively enforce its intellectual property rights to the fullest extent of the law, including pursuit of criminal prosecution wherever necessary. All trademarks not owned by Tyco Security Products are the property of their respective owners, and are used with permission or allowed under applicable laws.

Product offerings and specifications are subject to change without notice. Actual products may vary from photos. Not all products include all features. Availability varies by region; contact your sales representative.

© 2016 Tyco Security Products. All rights reserved.

8200-1147- 1018 A0 3