

Tip opening chart for modern and vintage alto saxophone mouthpieces. Please note that tip openings vary greatly even among the same size for most manufacturers.

Alto Model	55	57	58	59	60	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	92	95	100	105		
Bari - Rubber																72					77					82														
Bari - Metal															70				75						80				85							90		95		
Barone									5						5*				6						6*				7							7*	8	8*		
Beechler									3						4				5						6				7							8		9		
Berg Larsen	60				65				70						75				80						85				90						95		100	105	110	
Brilhart						Spl						2			3			4			5				6			7												
Brilhart Tonalin															4							5*																		
Dukoff									4						5				6						7				8							9		10		
MC Gregory								3			4					5			6																					
Jody Jazz																5						6						7								8		9	9*	
Keilworth														4		4*			5		5*				6		6*		7					7*		8	8*			
Lawton	4*				5				5*						6				6*						7			7*							8		8*	9	9*	
Lebayle															6				6*						7			7*							8		8*	9	9*	
Meyer										4					5				6					7					8						9					
Meyer NYUSA										4					5				6						7				8						9					
Meyer Bros.		2							4							5						6																		
Morgan		1		2		3			4						5				6						7					8										
Otto Link					4*				5						5*				6						6*				7							7*		8	8*	9
Otto Link Florida															5				6		6							6*								7				
Runyon										4					5			6				7					8								9			10		
Selmer			B*				C				C*				C**		D					E																		
Theo Wanne															<b>5</b>				<b>6</b>						<b>7</b>				<b>8</b>						<b>9</b>	<b>10</b>				
Vandoren													A15				A20		A25						A35					A45							A55	A75		
Yanagisawa - Rubber											4					5				6								7							8					
Yanagisawa - metal															3											5									7			9		