



*Place the jumper in the EXT position to be powered by an external power supply. Place the jumper in the BUS position to be powered through the I²C connection.