

New Epson Printers

What's Happening?

In 2022, we added new printers for our PhotoCake and Conversion systems. They are:

- Epson WF2830U
- Epson WF2850U
- Epson XP2100U
- Epson XP4100U
- Epson XP4105U
- Epson WF2830E
- Epson WF2850E
- Epson XP2100E
- EpsonXP4100E

Which is the Best?

For PhotoCake uses, they perform the same. They may look a little different, but they have identical:

- Print resolution
- Print speed
- Power consumption
- Decibel level

How are they Different?

Some have buttons in different locations, some can do voice activated printing, some have an extra few buttons...but none of these are used with PhotoCake. For your uses, they all produce the same amazing images that you expect from PhotoCake.



Installing Printer Ink*

Epson 4100/4105

- Press the right arrow until the “Maintenance” icon, then press OK
- Press the down arrow until the “Ink Cartridge Replacement” icon, then press OK
- Press OK at the warning
- Lift the top of the printer and wait for the printhead to stop moving
- Remove cartridge from its packaging, then remove the yellow tab
- Each slot is clearly marked with which color belongs there
- Insert the cartridge with the label facing left, then gently press down until it clicks
- When finished, shut the top and press ok
- The printer will initialize the cartridges, which may take a few minutes

Epson 2830/2850

- Press the right arrow until the “Settings” icon, then press OK
- Press the right arrow until the “Maintenance” icon, then press OK
- Press the right arrow until the “Ink Cartridge Replacement” icon, then press OK
- When the screen says, “Replace ink cartridges”, lift the top of the printer, then press the diamond shaped button
- Wait for the printhead to stop moving
- Remove cartridge from its packaging, then remove the yellow tab
- Each slot is clearly marked with which color belongs there
- Insert the cartridge with the label facing left, then gently press down until it clicks
- When finished, shut the top and press ok
- The printer will initialize the cartridges, which may take a few minutes

*These instructions will work with both the E and U models for these Epson printers. A sticker will be on your printer to remind you if you have the E or U model. The color of the sticker will match the color on the appropriate ink cartridge packaging.