

Cleaning Your Printer

Periodically cleaning will prolong the life of your printer and ensure greater print quality.

Cleaning Rollers and Inside of Printer

With the printer OFF

• Use clean cloth

Clean ink from white rollers.

Clean ink from black plate. Remove any debris.





Cleaning Print Head Carriage*

With the printer ON and the print head and inks removed

• Use clean cloth

Clean any visible ink stains on the printhead carriage





*Contact Customer Support on proper Print Head Cleaning process, previous communication received from Bakery Crafts no longer applies.



PhotoCake® is a registered trademark of DecoPac

1-800-644-1228

