



EPSON INK PAD REPLACEMENT KIT INSTALLATION INSTRUCTIONS

▶ VISIT DECOPAC.COM FOR PHOTOCAKE PRINTER MAINTENANCE VIDEOS

Available to specific Epson printers:

XP-410 XP-420 XP-430 XP-340 XP-352 XP-452 XP-440 XP-446 XP-2100

BEFORE YOU START:

- Instructions shown are for **PhotoCake IV 8.XX** version
- Specific instructions for **PhotoCake Online** and **PhotoCake IV 9.XX** versions can be found on our website.
- Must be on **Update 42** or newer




5 Set printer display side down



6 Remove screw and slide ink pad tray to right



8 Insert new ink pad and replace screw

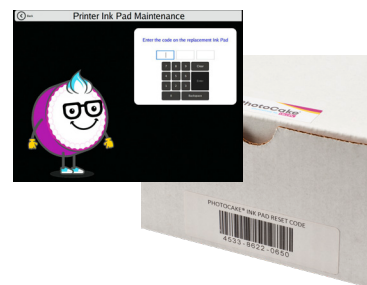

11 Enter Reset Code (located on front of box and on bottom of ink pad)

DIRECTIONS

1. From the printer menu, navigate to "Setup"; select "Maintenance".
2. Select "Ink Cartridge Replacement" and remove ink cartridges.
3. Power off the printer. Disconnect Power and USB cables from printer.
4. Remove extended output tray. Push in Paper Feed and connected Output trays.
5. Set Printer display side down so rear of printer is facing up.
6. Using the #2 screwdriver (included in kit), remove screw and set aside.
7. Slide Ink Pad tray to right and remove.
8. Install new Ink Pad, replace screw.
9. Set printer right side up, reconnect trays and cables.
10. Power printer on and install ink cartridges.
11. On PhotoCake System Screen, enter in the 12-digit Reset Code. Select 'Enter'.
12. Follow PhotoCake System Screen prompt to power off printer, select 'Ok' and then power printer back on.



**PHOTOCAKE EPSON
INK PAD REPLACEMENT KIT**

#27221 – Each – \$72.80

NEED MORE HELP? 1-800-644-1228 | PhotoCakeTechTeam@DecoPac.com
Monday – Friday 7:00 AM to 7:00 PM CST | Saturday 7:00 AM – 2:00 PM

DECOPAC



3500 THURSTON AVENUE • ANOKA, MINNESOTA 55303
1-800-DECOPAC (1-800-332-6722)
ESPAÑOL: 1-800-898-3063 FAX: 763-502-0534
PHOTOCAKE® TECHNICAL ASSISTANCE: 1-800-644-1228



Printed in USA
©2022 DecoPac