





## EPSON INK PAD REPLACEMENT KIT INSTALLATION INSTRUCTIONS

▶ VISIT [DECOPAC.COM](http://DECOPAC.COM) FOR PHOTOCAKE PRINTER MAINTENANCE VIDEOS


### DIRECTIONS

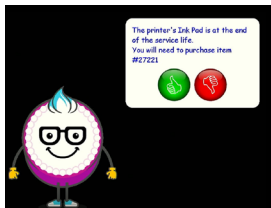

**1.** Select the Green Thumbs Up button.

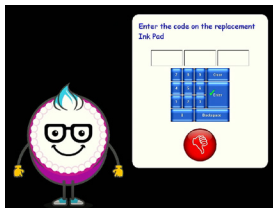

**2.** Enter the Reset Code located on the Ink Pad Replacement Kit.

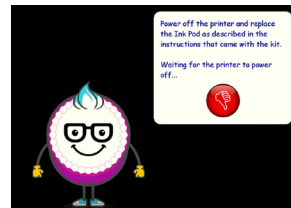


**3.** Power off printer.

**4.** Replace Ink Pad following instructions that came with the kit.


- a. From the printer menu, navigate to "Setup"; select "Maintenance".
- b. Select "Ink Cartridge Replacement" and remove ink cartridges.
- c. Power off the printer. Disconnect Power and USB cables from printer.
- d. Remove extended output tray. Push in Paper Feed and connected Output trays.
- e. Set Printer display side down so rear of printer is facing up.
- f. Using the #2 screwdriver (included in kit), remove screw and set aside.
- g. Slide Ink Pad tray to right and remove.
- h. Install new Ink Pad, replace screw.
- i. Set printer right side up, reconnect trays and cables.
- j. Power printer on and install ink cartridges.



**5.** Reconnect printer and power ON printer.

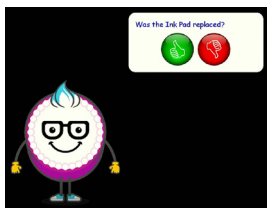

**6.** Select Green Thumbs Up to confirm the Ink Pad was replaced.

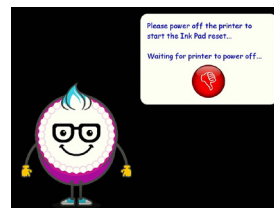


**7.** Power OFF printer.



**8.** Power ON printer.



**9.** Power OFF printer.

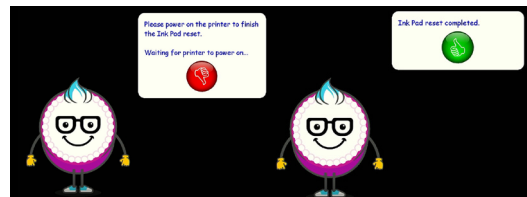

**10.** Power ON printer & select Green Thumbs Up to complete the process.

NEED MORE HELP? 1-800-644-1228 | [PhotoCakeTechTeam@DecoPac.com](mailto:PhotoCakeTechTeam@DecoPac.com)  
Monday – Friday 7:00 AM to 7:00 PM CST | Saturday 7:00 AM – 2:00 PM

**DECOPAC**



3500 THURSTON AVENUE • ANOKA, MINNESOTA 55303  
1-800-DECOPAC (1-800-332-6722)  
ESPAÑOL: 1-800-898-3063 FAX: 763-502-0534  
PHOTOCAKE® TECHNICAL ASSISTANCE: 1-800-644-1228