

PRODUCT UPGRADE WI-FI WITH SERVICE CODE

WELCOME TO PHOTOCAKE® LIVE-CONNECTED!

YOU WILL SOON BE ENJOYING REAL-TIME ACCESS TO OUR ENTIRE LIBRARY OF DESIGNS. DOWNLOAD UPDATES TO ACCESS NEW FUNCTIONALITY - NO MORE WAITING FOR A DVD! HERE ARE ALL OF THE GREAT BENEFITS OF LIVE-CONNECTED:

- Move from PINs to Image Credits. No more calling for PINs to print. Stock up on Image Credits to print any image, anytime!
- Real-time visibility to print history.
- Image Library will only show what you have authorized. New Images will appear as soon as they are available.
- Access to Quick-to-Market images.
- Updates can now be installed same day as they are released. No more DVDs!




IMPORTANT!

- Once the LIVE-Connected upgrade is installed, you will not be able to revert back to the LIVE-Disconnected Software.
- LIVE-Connected Requires access to the internet - via Wi-Fi or Ethernet.
- Must be on Update 50 or higher before proceeding.

1 Plug the USB Wi-Fi adapter into a free USB port on the back of the Controller/HUB.

2 Select 'Maintenance'.

3 Select 'Service Menu'.

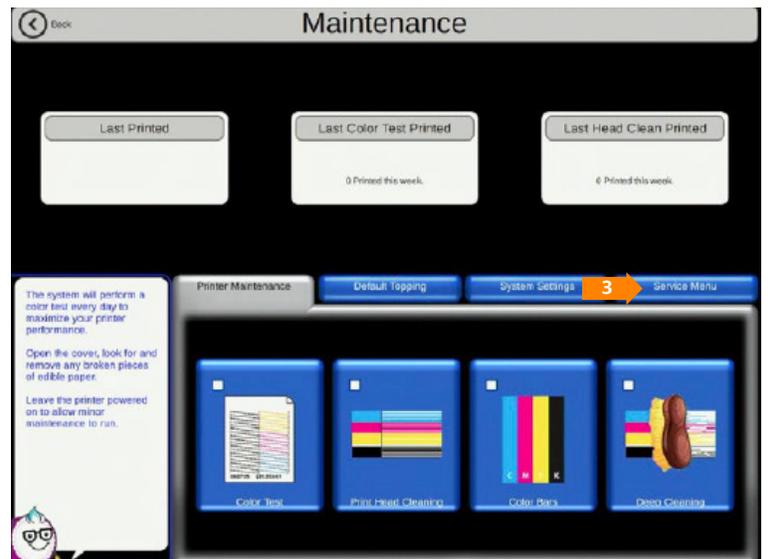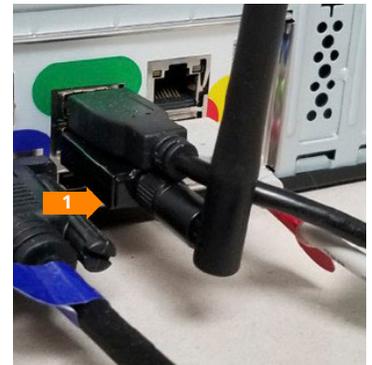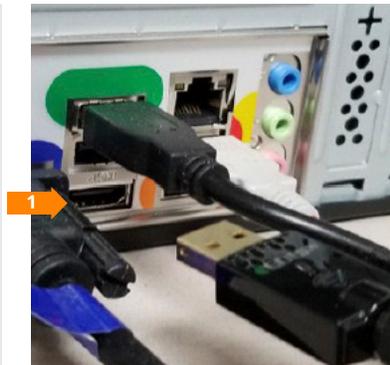

4 Using the on-screen keypad, type 80 and press 'Enter'.

The system will restart.





5 Enter 1598 when prompted for a Key Code.



6 Connect to the Internet

- A. Select Maintenance
- B. Select the System Settings tab
- C. Select Configure Internet
- D. Select the network you want to connect and enter the password
- E. Select Join
- F. Select Back to exit

Note: If you are using a Captive Wi-Fi, Terms & Conditions must be accepted.

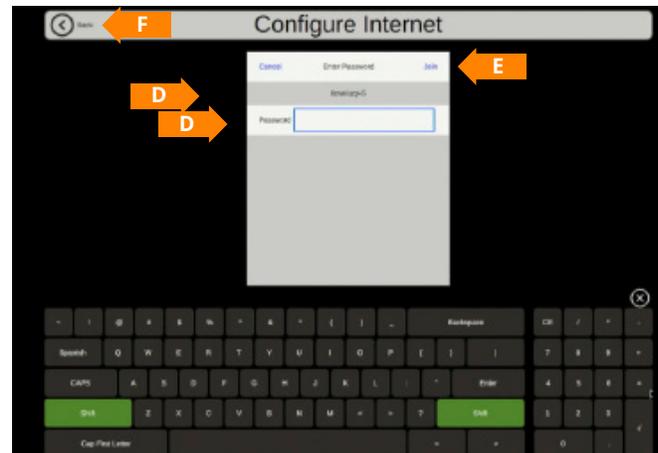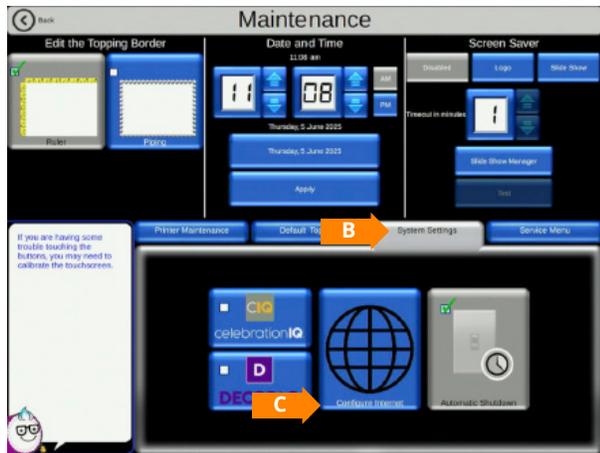

7 Confirm your connection by looking for the small Wi-Fi icon above the PhotoCake logo on the Home Screen.

Note: If the icon doesn't appear, reboot the system and ensure the Wi-Fi you are connecting to is working properly.



8 Check for updates

Once the upgrade has completed, update the system by selecting the 'PhotoCake' button and selecting 'Check for updates'.

