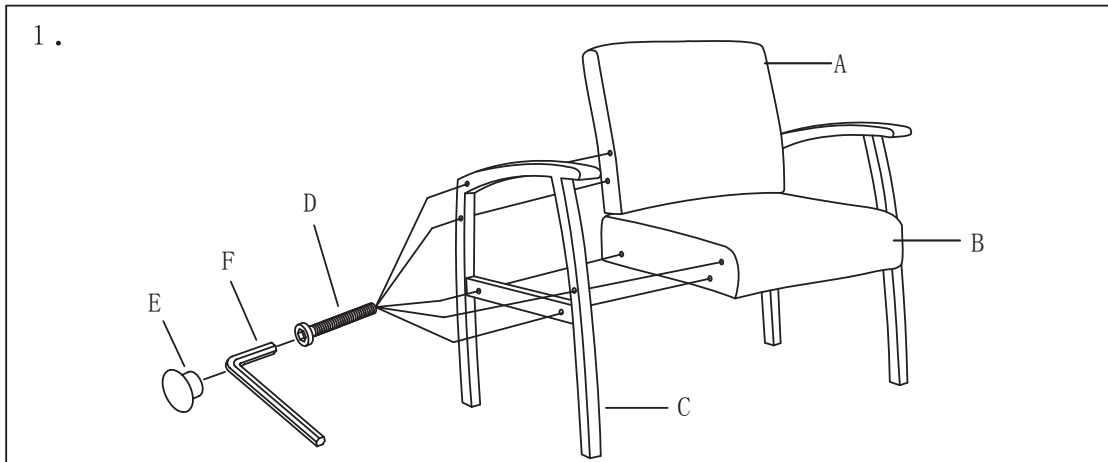
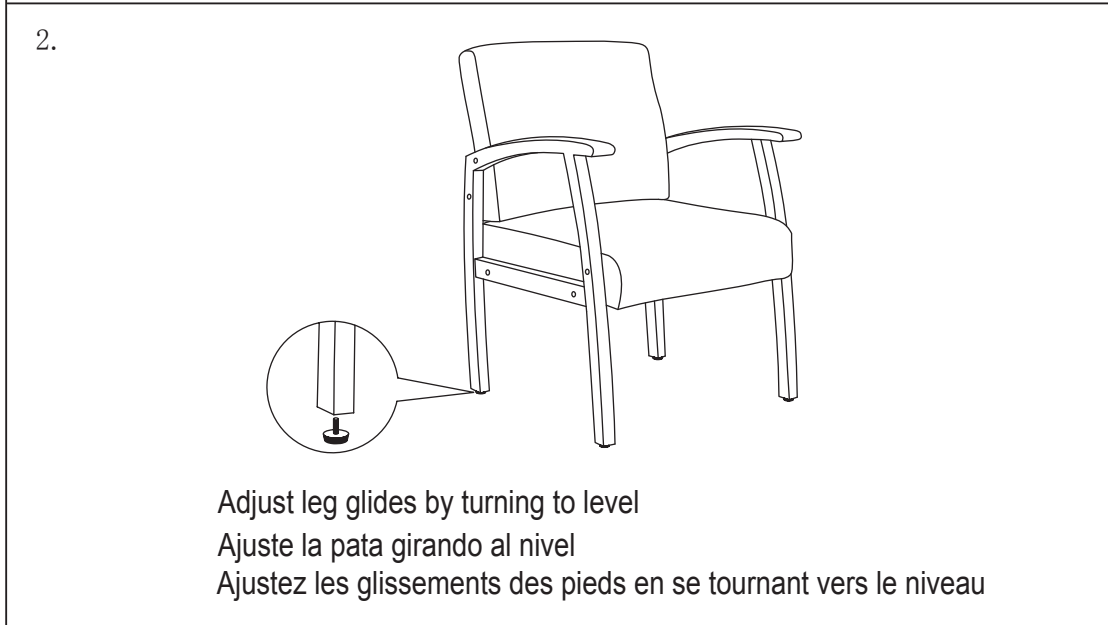


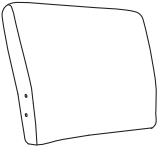
 
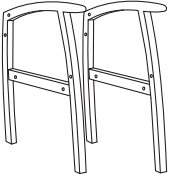
 
 



ASSEMBLY INSTRUCTIONS/ INSTRUCCIONES DE INSTALACIÓN/ INSTRUCTIONS DE MONTAGE



⚠ Important: Do not tighten screws until you have completed assembly.
Importante: No apriete los tornillos hasta que termine el ensamble
Important: Ne serrez pas les vis jusqu'à ce que vous avez terminé l'assemblage



<p>A.</p>  <p>1 PC/ PZ/ PIECE</p>	<p>B.</p>  <p>1 PC/ PZ/ PIECE</p>
<p>C.</p>  <p>1 PAIR/ PAR/ PAIRE</p>	<p>D.</p>  <p>5/16"x2-1/4" 10 PCS/ PZS/ PIECES</p>
<p>E.</p>  <p>10 PCS/ PZS/ PIECES</p>	<p>F.</p>  <p>1 PC/ PZ/ PIECE</p>

Model/ Modelo/ Modèle: ALE-RL7611M / RL7651M
 Manufactured for/ Hecho para/ Fabriqué pour Alera®/ Essendant Co.,
 One Parkway North, Deerfield, IL 60015 © 2016 Essendant Co.
 Made in/ Hecho en/ Fabriqué en China
 Product support and parts: 1-800-733-4000
 Ayuda del producto y partes / Support technique et pieces