

CD Clock Radio

User's Guide for Model CC318 v2083-01



Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

FCC WARNINGS

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
ADDITIONAL WARNINGS AND PRECAUTIONS

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- Caution marking is located at the rear or bottom of the apparatus.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **WARNING:** Shock hazard - Do Not Open.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- **WARNING: DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD.** If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- If the coin/button cell battery supplied with this product is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Completely replace all old batteries with new ones.
- Batteries should be recycled or disposed of as per state and local guidelines.




WARNING : This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov. **This product meets and complies with all Federal regulations.**

Overview

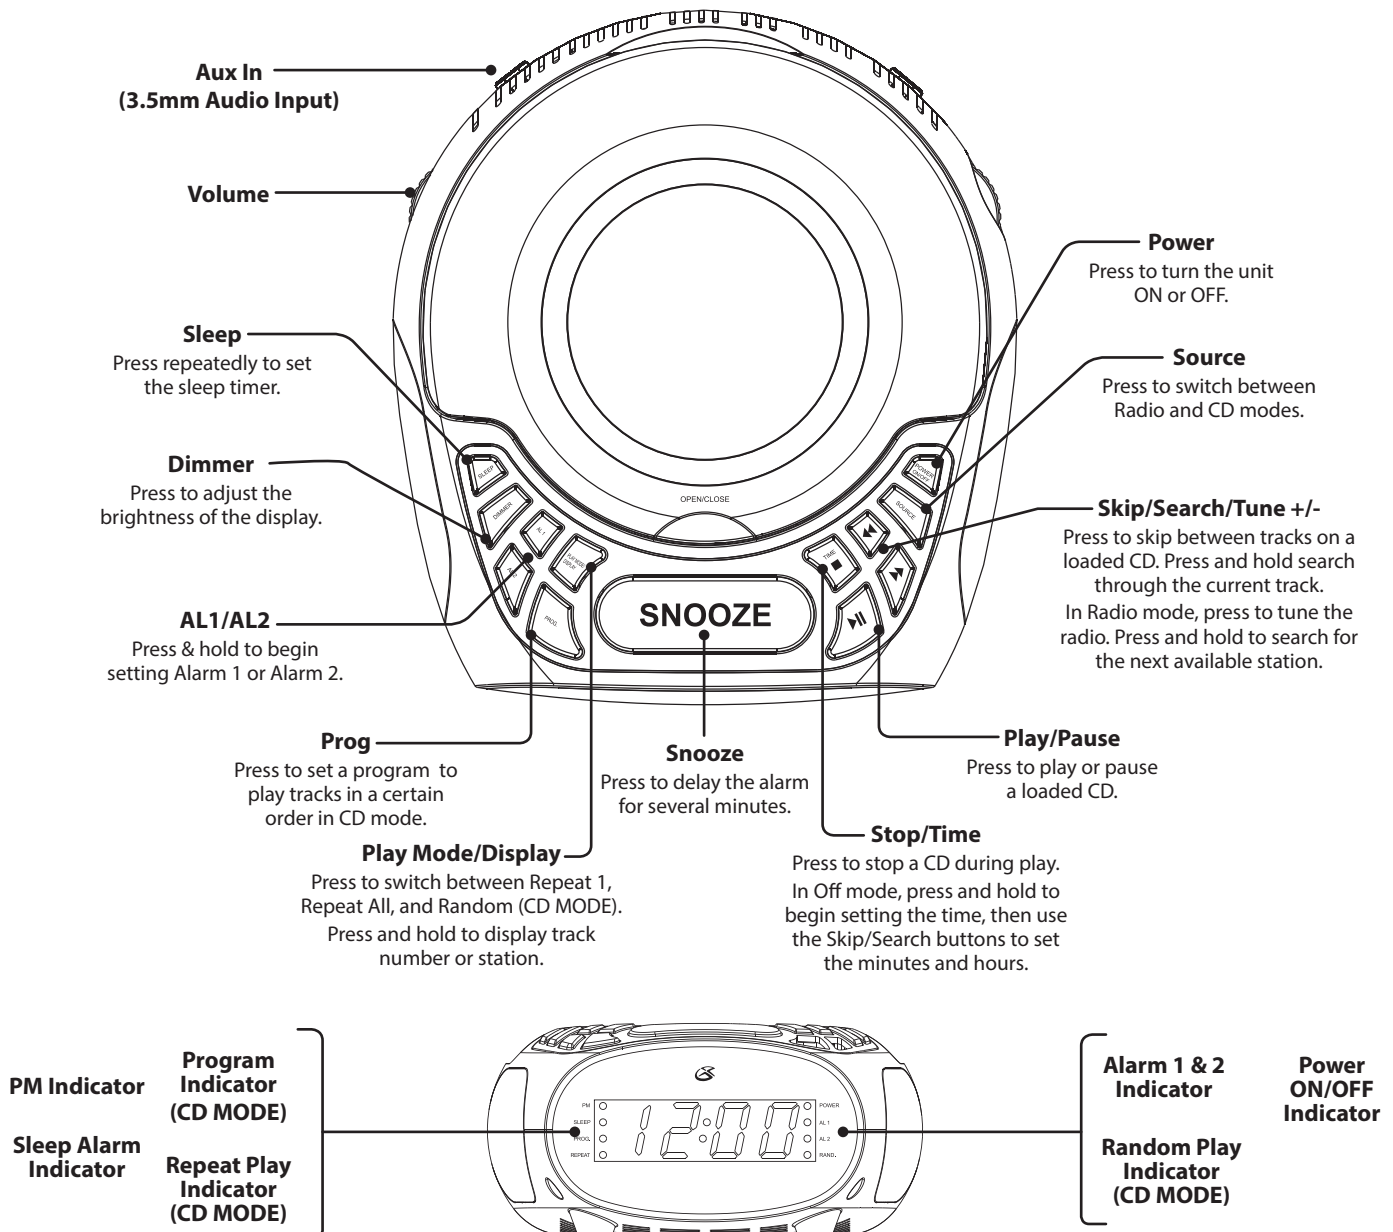


Power and Batteries

 Plug the AC power cord into a standard power outlet.

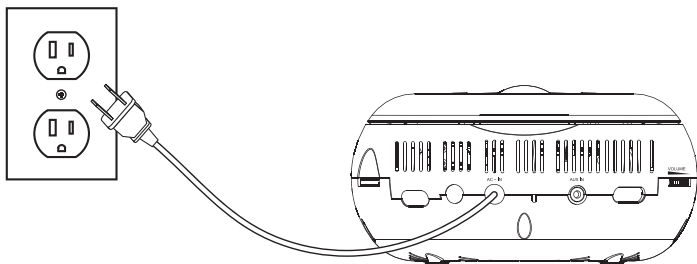

 Requires 2 AA, 1.5V batteries (not included).

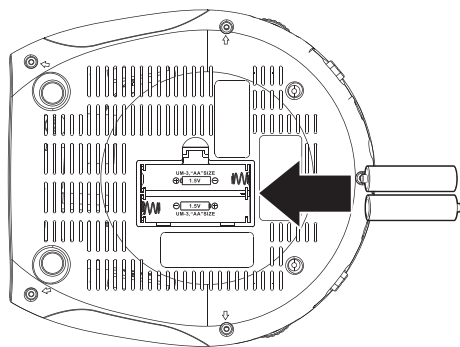

2x AA, 1.5V

Alarm and Sleep Timer

Setting the Alarm

1. With the unit OFF, press and hold the **AL1** or **AL2** button until the display flashes.
2. Press the **◀▶▶▶** buttons to select CD, buzzer (bb), or the radio.
3. Press the **AL1** or **AL2** button.
4. If using the radio, press the **◀▶▶▶** buttons to adjust the radio frequency. If using the CD player, press the **◀▶▶▶** buttons to select the CD track. *Be sure a CD is loaded in the unit.*
5. Press the **AL1** or **AL2** button.
6. Press the **◀▶▶▶** buttons to adjust the hour. *Note the PM indicator on the display.*
7. Press the **Stop/Time** button to set.
8. Press the **◀▶▶▶** buttons to adjust the minute.
9. Press the **Stop/Time** button to finish setting the alarm time.
10. Use the **Volume dial** to set the volume of the alarm, except when set to Buzzer.
11. Once the set alarm time is reached, the alarm will sound. To set the other alarm, follow the above steps and choose the alarm not currently set.

Snooze and Alarm Reset

After the alarm sounds:

Press the **Snooze** button to delay the alarm for several minutes.

OR

Press the **Power** button to turn the alarm off until the set alarm time is reached again.

Disabling the Alarm

Press the **AL1** or **AL2** buttons to turn the alarm ON or OFF.

Setting the Sleep Timer

1. Press the **Sleep** button to set the sleep timer (90, 60, 30, 15 min or OFF).
2. Once the set sleep time has expired the clock radio will automatically power off.

Clock

Setting the Clock

1. With the unit OFF, press and hold the **Stop/Time** button until the display flashes.
2. Press the **◀▶▶▶** buttons to adjust the hour. *Note the PM indicator on the display.*
3. Press the **Stop/Time** button to set.
4. Press the **◀▶▶▶** buttons to adjust the minute.
5. Press the **Stop/Time** button to finish setting the time.

CD Player

Note: This unit is not compatible with MP3 CDs.

Loading and Playing a CD

1. Open the **CD Door**.
2. Place a CD into the unit, label side facing up.
3. Close the **CD Door**.
4. Press the **Source** button to switch to CD mode.
5. Press the **Play/Pause** button to begin playing the loaded CD. Press the **◀▶▶▶** buttons to skip tracks or press and hold to search through a track.

Programming a CD

1. Press the **Stop** button to stop the CD during play.
2. Press the **Prog** button, "P01" will begin to show on the display.
3. Press the **◀▶▶▶** buttons to select a track.
4. Press the **Prog** button to save the selected track to the program. Repeat this step to program up to 20 tracks.
5. When you are finished programming, press the **Play** button to begin your program. The **Prog Indicator** will light on the display.
6. Press **Stop** to stop playing. Press **Stop** again to cancel the program, the **Prog indicator** on the display will turn OFF.

FM Radio

Radio Reception

An FM antenna is built into the clock radio. To improve radio reception, adjust the position of the clock radio.

Tuning the FM Radio

1. Press the **Power** button to turn the unit on.
2. Press the **Source** button to switch to **Radio mode**, then press the **◀▶▶▶** buttons to select the desired frequency, or press and hold to scan for the next available frequency.

Saving Radio Presets

1. Tune to the desired AM or FM frequency (see above steps).
2. Press and hold the **Prog** button. The display will begin flashing a preset. Ex: "P01".
3. Press the **◀▶▶▶** buttons to select the preset to be saved. (P01 to P23).
4. Press the **Prog** button to save that preset.
5. With the radio ON, press the **Play button** to cycle through radio presets.

Aux In

Using the Audio Input

Requires a 3.5mm audio cable (not included).

1. With the unit powered ON, connect a 3.5mm audio cable to the **Aux In** on the rear of the unit and the **audio output** on an audio device. The unit will automatically detect the connection and switch to AUX mode.
2. Use the controls on the connected device to play your audio through the unit. Use the **Volume dial** to adjust the volume.

International Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: www.gpx.com

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: www.gpx.com

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: www.gpx.com

For Warranty Information and the most up-to-date version of this User's Guide, go to www.gpx.com

Customer Service: 1-888-999-4215 | **Email Support:** prodinfo@dpiinc.com | **Email Parts:** partsinfo@dpiinc.com

Copyright © 2018 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

