



**NIGHT VISION® LCD ALARM**  
**Model 30330B**

Thank you for your purchase of this amazing clock. The utmost care has gone into the design and manufacture of your clock. Please read these instructions and store them a safe place for future reference.



**Night Vision® Technology**

This clock incorporates Night Vision® Technology. This cordless battery operated feature allows you to see the time in a dark room. When light level is extremely low the light SENSOR (7) automatically illuminates a dim glow behind the digital display. When your eyes adjust in a darkened room, you can still see the time! The sensor automatically turns off the Night Vision® glow when the room brightens.

You can also activate a bright backlight display anytime by pressing the SNOOZE/LIGHT bar (3).

**TO INSTALL AND REPLACE BATTERIES**

The LCD clock uses three 1.5V "AA" batteries. (Not included)

To install and replace the batteries. Please follow the steps below.

1. Remove the battery cover.
2. Insert batteries observing the correct polarity (see marking inside battery compartment).
3. Replace the battery cover.

Note: Do not mix new and old batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel cadmium) batteries.

**TO SET THE TIME**

1. Hold the TIME SET button (5) and press the HOUR button (1) to your desired hour. Be careful to set the time to AM or PM correctly. When PM time is set. The letter "PM" will appear.

2. Hold the TIME SET button (5) again, press the MINUTE button (2) to your desired minute. –

**TO SET THE ALARM TIME**

1. Hold the ALARM SET button (6) and press the HOUR button (1) to your desired hour. Be careful to set the time to AM or PM correctly. When PM time is set, the letter "PM" will appear.

2. Hold the ALARM SET button (6) again, press the MINUTE button (2) to your desired minute.

## TO TURN THE ALARM ON OR OFF

1. Slide the ALARM SWITCH (4) to the "AL.ON" position. The alarm symbol (bell) will be visible on the display when the alarm is activated. The alarm will sound for 60 seconds at the selected time.
2. Slide the ALARM SWITCH (4) to the "AL.OFF" position to turn the alarm off permanently.

## TO USE THE SNOOZE ALARM FEATURE

Slide the ALARM SWITCH (4) to the "AL.ON" position when the alarm sounds, press the SNOOZE/LIGHT button (3). The alarm will stop and sound again after 5 minutes

## MAINTENANCE

The batteries should be replaced if the display or alarm becomes weak or dysfunctional. Store the Clock without batteries when not in use. A soft cloth or a paper towel may be used to clean your clock. Do not use any corrosive cleanser or chemical solutions on the clock. Keep the clock clean and dry to avoid any problems.

## Two Year Warranty (U.S.A.)

Equity products are warranted for two years from the date of consumer purchase against defects in material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option. This warranty does not cover damage caused by misuse or negligence. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

### If your product is not working properly, please send:

- The Product
- a letter explaining the problem
- and \$5.00 for postage and handling to:

Equity Warranty Dept.  
2817 Losey Blvd. S  
La Crosse, WI 54601

For Customer Support, visit:  
[www.equitybylacrosse.com/support](http://www.equitybylacrosse.com/support)

*Equity* <sup>®</sup> by La Crosse <sup>™</sup>  
**2 Year Limited Warranty**  
La Crosse, WI 54601  
[www.equitybylacrosse.com](http://www.equitybylacrosse.com)



Always purchase the correct size and grade of battery most suitable for the intended use. Replace all batteries of a set at the same time. Clean the battery contacts and also those of the device prior to battery installation. Ensure the batteries are installed correctly with regard to polarity (+and-). Remove batteries from equipment with is not to be used for an extended period of time. Remove used batteries promptly. Please help in preservation of the environment and return used batteries to an authorized depot.