



M.2 SSD Drive Installation Guide

For ASUSTOR AS66 Series NAS

Table of Contents

1. Introduction3

 1.1. Notes and Precautions3

 1.2. Parts and Tools Needed3

2. Installation Guide4

 2.1. Removing the Cover4

 2.2. Installing M.2 SSD Drives5

 2.3. Replacing the Cover7

3. Appendix9

 3.1. Troubleshooting9

 3.2. Contact ASUSTOR Technical Support9

1. Introduction

1.1. Notes and Precautions

Before adding M.2 SSD Drive, please read the following precautions thoroughly.

- Your NAS and M.2 SSD Drive use high precision components and electronic connector technology. To avoid invalidation of the warranty during your product warranty period, we recommend that:
 - ✓ M.2 SSD Drive for AS66 series devices may be purchased from local dealers or or [click \(https://www.asustor.com/service/compatibility\)](https://www.asustor.com/service/compatibility) for a list of compatible M.2 SSDs.
 - ✓ If installing two drives, ASUSTOR recommends that they be the same model for optimum performance.
- Addition or removal of M.2 SSD Drive by yourself may result in an accident or malfunction of your NAS caused by breakage of the slot and module or a connection mistake. In this case, a repair fee will be charged.
- Be careful not to injure your hands or fingers with sharp edges of the M.2 SSD Drive, inner components, or circuit boards of your NAS.
- ASUSTOR does not guarantee that third party M.2 SSD Drive will work in your NAS.
- Be sure to turn off your NAS and peripherals and disconnect all attachments and connection cables before adding or removing M.2 SSD Drive.
- To prevent damage from electrostatic discharge to M.2 SSD Drive, follow the instructions below:
 - ✓ Do not work at a location that produces static electricity easily, such as on a carpet.
 - ✓ Before adding or removing M.2 SSD Drive, touch an external metal object other than your NAS to ground yourself and eliminate static electricity. Do not touch any metal parts inside the NAS.
- Do not insert a M.2 SSD Drive into the slot facing in the wrong direction. It may cause damage to the module or slot, or cause the circuit board to catch fire.
- Use a screwdriver that matches the size of the screws.
- Do not remove or loosen screws that are not specified to be removed.

1.2. Parts and Tools Needed

- Phillips head screwdriver

2. Installation Guide

2.1. Removing the Cover

- Shutdown the NAS by selecting **[Shut down]** from the ADM User Menu.



- Disconnect all cables and devices connected to the NAS including the power cord.

AS6602T



AS6604T



- Use a screwdriver to loosen the three screws found on the rear of the NAS as shown in the illustration.

AS6602T

AS6604T



- Grip the cover from both sides with two hands and then gently push it back to remove it from the chassis.

AS6602T

AS6604T



2.2. Installing M.2 SSD Drives

- Remove the two screws to free the SSD carrier board as shown in the figure below.

AS6602T

AS6604T



- Firmly grasp the SSD carrier board and gently pull it out of its slot.

AS6602T

AS6604T





- If installing one SSD, the first SSD should be installed into slot 1 underneath the SSD carrier board. Slot2 is facing up when installed.



- Remove screws from the M.2 standoffs



- Insert the SSD into the slot at an angle and push into the slot gently. Once in, lower the SSD and screw it into the standoff. Repeat the above steps to install a second M.2 SSD.

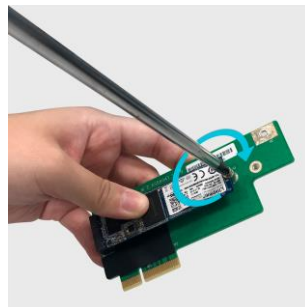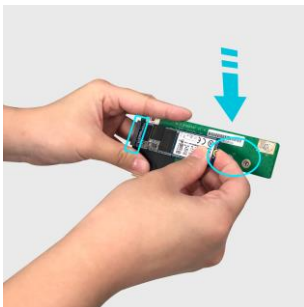

- Insert the SSD carrier board into the SSD carrier board slot as shown below

AS6602T



AS6604T



- Fasten the SSD carrier board using two screws as shown below.

AS6602T



AS6604T



2.3. Replacing the Cover

- Replace the cover and tighten the three screws that were removed previously.

AS6602T



AS6604T



- Reconnect all cables including the power cord and then start up the NAS.

AS6602T



AS6604T



3. Appendix

3.1. Troubleshooting

Q: After installing new M.2 SSD Drive my NAS won't start. What's wrong?

A: Please follow the steps below to resolve this issue:

1. Check if the LED indicators, system buzzer, and LCD display panel are operating normally.
2. If your NAS is unable to recognize the new M.2 SSD Drive or cannot be started up properly, please check that you have used M.2 SSD Drive that is compatible with the system. Also, please reinstall the M.2 SSD Drive in order to confirm that it has been installed properly.
3. If your NAS still does not operate normally, please remove the newly installed M.2 SSD Drive module, and then restart the NAS to see if it is able to operate normally.
4. If the previous steps have not solved your problem, please contact your local dealer or ASUSTOR customer service.

3.2. Contact ASUSTOR Technical Support

Contact us:

1. Email: support@asustor.com
2. Online Support Form: http://www.asustor.com/service/online_support
3. ASUSTOR Online Community: <http://forum.asustor.com/>