

MET/CAL 10.2.3 README

This document includes information related to MET/CAL 10.2.3 relative to version 10.2.2. This version of MET/CAL is compatible with MET/CONNECT version 1.3.0.

WHAT'S NEW IN VERSION 10.2.3?

- Replaced Tolerance fields with Lower/Upper Limit fields and added Fixed & Variable Quantity fields to the results CSV export file when using MET/CONNECT
- Includes all fixes released in the HotFix for version 10.2.2, including 5320/5322A FSC fixes
- For a complete list, see the table below

MET/CAL 10.2.3 DISTRIBUTION

Note: MET/CAL version 10.2.3 is compatible with MET/CONNECT version 1.3.0. Attempting to use it with earlier versions of MET/CONNECT will result in an error at attempted login.

The MET/CAL Client version 10.2.3 installer for MET/CONNECT is distributed with MET/CONNECT v1.3.0. The installer files are deployed to the MET/CONNECT server's shared folder (typically found locally on the server at C:\Program Files (x86)\Fluke\METCONNECT\Installers\METCAL or at \\<your_server>\metconnect\Installers\METCAL) when the MET/CONNECT Server installer is run so that all MET/CAL workstations have access to it.

The MET/CAL Client installer should be run on all MET/CAL workstations to perform an update to version 10.2.3. The installer can also be used to set up new MET/CAL workstations.

ADDITIONAL NOTES

Due to the changes to the log files generated by MET/CAL, it may be beneficial to remove all existing log files from each MET/CAL workstation. Log files are typically located in the current user's %TEMP%\Fluke folder. After installing MET/CAL version 10.2.3, check the logging settings on the Workstation Configuration page on the CONFIGURE tab in the MET/CAL runtime application or the Tools > MET/CAL Configuration menu in the MET/CAL Editor application. The same settings are used by both applications, so changing them in one application is reflected in the other. Refer to the online help for details on the logging settings and their use, as well as details of the log files generated and their locations.

It is recommended to leave the logging verbosity setting to either *Minimum* or *Normal*. Only use *Detailed* when needed for troubleshooting purposes.

MET/CAL 10.2.3 CHANGES

Key	Type	Description
MC-3040	ADDED	<p>Added the following fields to the CSV export file for MET/CONNECT:</p> <ul style="list-style-type: none"> - FixedQuantity - FixedQuantityUnit - VariableQuantity - VariableQuantityUnit
MC-3085	FIXED	<p>Updated the MET/CAL Client installer to set permissions on a local folder to permit encryption/decryption algorithms used by MET/CAL to function normally on later releases of Windows 10 and Windows Server operating systems</p>
METCON-1893	CHANGE	<p>Replaced the following fields in the CSV export file for MET/CONNECT:</p> <ul style="list-style-type: none"> - TolerancePositive replaced by UpperLimit - TolerancePositiveUnit replaced by UpperLimitUnit - ToleranceNegative replaced by LowerLimit - ToleranceNegativeUnit replaced by LowerLimitUnit