



LinkWare™ Live


Onboarding Kit

Report Administrator

Note: This training is intended for the user that is responsible for downloading test results from LinkWare Live to LinkWare PC and creating certification reports

FLUKE
networks®

Downloading test results into LinkWare PC

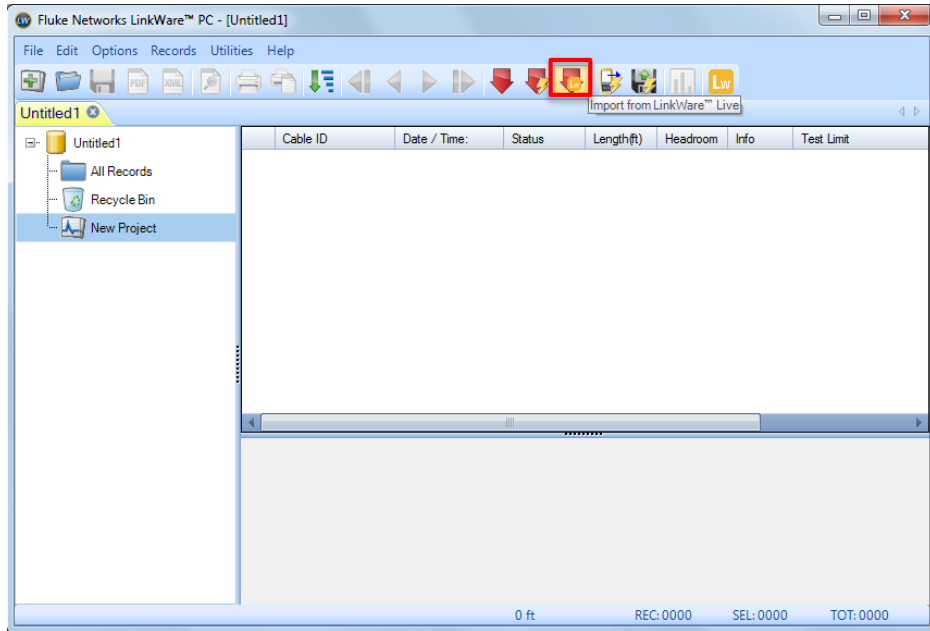


- 1) Open LinkWare PC
- 2) Click on the “Import from LinkWare Live” icon


Note: If you do not have LinkWare PC installed download it from [here](#).

Downloading test results into LinkWare PC

- Enter your LinkWare Live credentials and click **Sign-In**

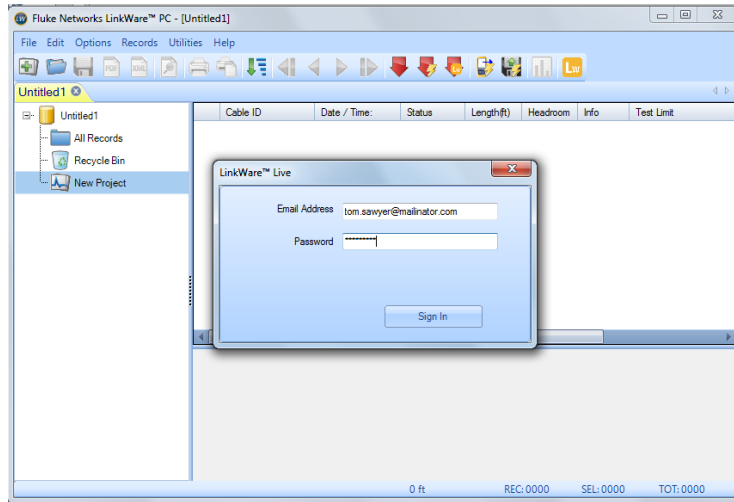


Downloading test results into LinkWare PC

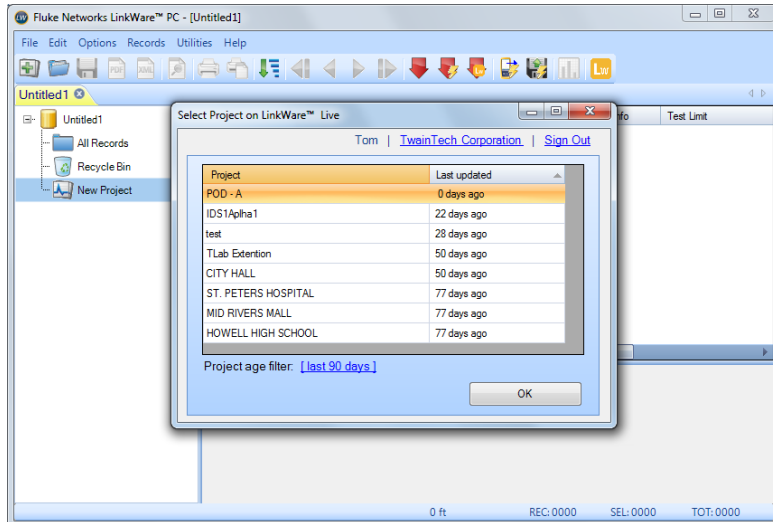

Select the project from which you want to download the test results and click **OK**

Downloading test results into LinkWare PC

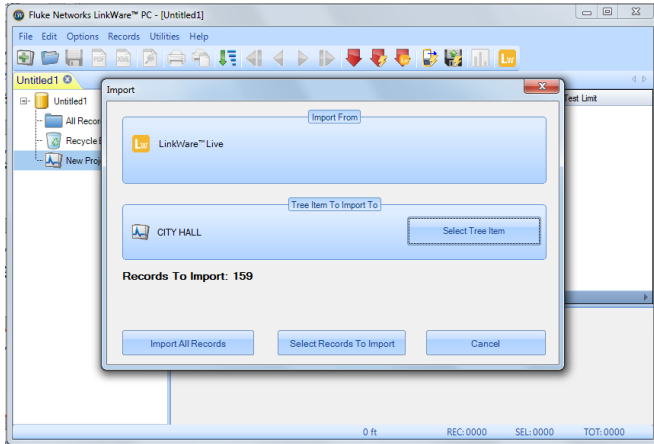

Click on **Import All Records** to download all test results or click **Select Records to Import** to download specific test results.

Test results are now downloaded in LinkWare PC and you can proceed with creating reports

Technician - Checklist



Install LinkWare PC



Import test results from LinkWare Live