

TS[®]25D Test Set Users Card

Notes: To conserve battery life, turn the test set off when not in use (TM switch in center position). Restoring default settings erases all phonebook entries.

Memory Dialing

- 1 Set the switch to Talk (T).
- 2 Press **SEL**. Main menu appears.
- 3 Use **▶** **◀** to highlight **CALL PHONEBOOK**.
- 4 Press **SEL**. Use **▶** **◀** to scroll through entries.
- 5 Use **▶** **◀** to select desired entry; then press **SEL**.

Memory Programming

Each location stores a phone number up to 23 digits. If you enter more, only the first 23 are retained. If there are no entries, the screen is blank. Press **SEL** again. See the TS25D Test Set Users Guide.

Line Voltage and Current Measurement

In the upper right-hand corner of the display:
V = Voltage (on-hook); **mA** = Current (off-hook).

Voltmeter Range: 0 Vdc to 250 Vdc

Current Meter Range: 0 mA to 120 mA

Handset Volume

To adjust the volume, use **▶** **◀**.

TS®25D Test Set Users Card

Talk Battery

- 1 Connect to dry pair.
- 2 Set the switch to Talk (T).
- 3 When **LOW VOLTAGE LOCKOUT, DOWN ARROW FOR TALK BATTERY** appears, press ◀.

Note: The Talk Battery drains the battery more quickly than other functions.

Toner

- 1 Set the switch to Monitor (M).
- 2 Press **SEL**. Main menu appears.
- 3 Use ▶ ◀ to highlight **TONER**.
- 4 Press **SEL**. **TONER ACTIVE** appears.
- 5 If data is detected, **DATA DETECTED TONER NOT AVAILABLE** appears.
- 6 To deactivate the toner, press **BACK**.

Loud Speaker/Speaker Volume



Move the test set away from your ear before you turn on the loud speaker. The volume can be quite loud.

- 1 Set the switch to Talk (T) or Monitor (M).
- 2 Press **SPKR**. Press **SPKR** again to increase volume.
- 3 Press **SPKR** again to turn off.

Icons

Battery indicator icon



Mute icon

MUTE

On hook icon



Memory dial locations

01234
56789

Tone/pulse icon



Off hook icon



Spkr/vol icon

Normal
High

Reversed polarity



Normal polarity

