




EndurEnergy Systems, Inc.

Dual Server Racking Configuration Schematics

Inverter 30 kWh

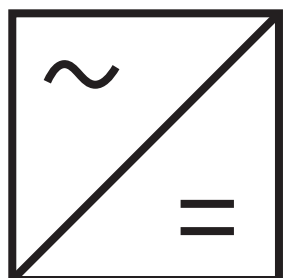

CAN

Server Rack 1



INV

Battery 1

Battery 2

Battery 3

Battery 4

Battery 5

Battery 6

Server Rack 2

INV

Battery 7

Battery 8

Battery 9

Battery 10

Battery 11

Battery 12

- Please connect batteries in series to connect the SW dial Settings.
- Batteries 1 to 6, array 1.
- Batteries 7 to 12, array 2.