



USER MANUAL

for
MBV Series
With Mitsubishi M70

Revised: August 2013

CONTENTS

1.	Safety.....	5
1.1	Intended Use	5
1.2	Important Safety Notice and Warning	5
1.2.1	Safe installation	5
1.2.2	Machine guarding	6
1.2.3	Software	6
1.2.4	Authorized personnel and training	6
1.2.5	Safe working practice	6
1.3	Safety Cautions List.....	7
1.4	Safety Devices.....	10
1.4.1	Emergency Stop.....	10
1.4.2	Guard	10
1.4.3	Window	10
1.4.4	Door Interlock	10
1.4.5	Cabinet door lock and switch.....	11
1.5	Warning Labels.....	11
1.6	Residual Risks.....	11
2.	Introduction.....	13
2.1	Consumption Material.....	13
2.1.1	Lubrication oil for linear rail and ballscrew.....	13
2.1.2	Lubrication oil for pneumatic system	13
2.1.3	Cutting fluid	13
2.1.4	Oil for chiller	13
2.2	Operation Panel.....	15
2.3	Remote Jog	23
2.4	Spindle Tooling	23
2.5	Dimensions of work table.....	24
2.6	Tool Magazine and ATC.....	24
2.7	Chip Removal	24
3.	Installation.....	25
3.1	Foundation Preparation	25
3.2	Power Preparation	25
3.2.1	Line Configuration	25
3.3	Unpacking.....	25
3.4	Machine Lifting	26
3.5	Leveling of Machine.....	26

3.6	Before Power ON	27
3.6.1	Grounding.....	27
3.6.2	Power connection.....	28
3.6.3	Misc.....	29
3.7	First Time Power ON	29
3.7.1	Rotation Direction of Motors.....	30
3.7.2	Spindle Run-in	30
4.	Operation.....	31
4.1	Power ON/OFF.....	31
4.2	Reference (or “ZERO RETURN” or “HOME”) the Machine	31
4.3	Machine Warm-up	31
4.4	Spindle Warm-up	32
4.5	Interrupting Operation.....	32
4.6	Jobs Finished	32
4.7	Jog Axis	33
4.8	Jog Axis by MPG	34
4.9	Tool Loading/Unloading	34
4.10	Large Tool management.....	34
5.	Maintenance	37
5.1	Routine Inspection.....	37
5.1.1	Daily	37
5.1.2	Weekly (In addition to daily routine)	38
5.1.3	Yearly (In addition to weekly routine).....	38
5.2	Lubrication	38
5.2.1	Automatic Lubrication System.....	38
5.2.2	FRL unit.....	38
5.3	Cleaning	39
5.3.1	Machine Interior:.....	39
6.	Trouble shooting.....	40
6.1	ATC system:	40
6.2	Cooling, Coolant and lubrication system.	40
6.3	Door switch system	40
6.4	Motors overload.....	40
6.5	Alarm messages and remedies	41
7.	Appendix	44
7.1	Power requirements: 15 kVA	44
7.2	Pneumatic requirements.....	44
7.3	Spindle run-in procedures.....	44

7.4	M-function Codes	45
7.5	User Definable Parameters	47
7.5.1	Timer table.....	47
7.5.2	Keep Relay list	48
7.5.3	Counter list	50
7.6	Machine floor space	51
MBV-6	51
MBV-10	52
MBV-12	53