

CONTENTS

Chapter 1 Safety Instructions

| | |
|---|------|
| 1.1 General Remarks..... | 1-1 |
| 1.2 Safety Description of Lifting and Movement (unpacked) | 1-5 |
| 1.3 Electrical Safety Description | 1-7 |
| 1.4 Machine Safety Description | 1-10 |
| 1.5 Potential Danger Areas..... | 1-18 |
| 1.6 Warning Signs on the Machine | 1-20 |

Chapter 2 Machine Specification

| | |
|---|------|
| 2.1 Introduction | 2-1 |
| 2.2 Noise Level | 2-1 |
| 2.3 Machine Specification | 2-2 |
| 2.4 Electrical Equipment Specification | 2-4 |
| 2.5 Machine Accessories | 2-5 |
| 2.6 Machine Accuracy | 2-6 |
| 2.7 Dimensions | 2-6 |
| 2.8 Main Part | 2-7 |
| 2.9 Power Performance Diagrams..... | 2-8 |
| 2.10 Working Range and Workpiece Weight | 2-11 |
| 2.11 Dimensions of the Working Table | 2-12 |
| 2.12 Dimensions of the Machine Tool Holder | 2-14 |
| 2.13 Specifications of the Machine Tool | 2-17 |
| 2.14 Stroke Limits for Axes and ATC..... | 2-18 |
| 2.15 The Mechanism for Tool Clamping and Unclamping | 2-19 |

Chapter 3 Shipping/Handling and Installation

| | |
|--|------|
| 3.1 Preparation | 3-1 |
| 3.2 Machine Lifting..... | 3-4 |
| 3.3 Storage | 3-13 |
| 3.4 Installation..... | 3-14 |
| 3.5 Cleaning..... | 3-15 |
| 3.6 Leveling | 3-16 |
| 3.7 Inspection | 3-17 |
| 3.8 Polycarbonate Panels..... | 3-18 |
| 3.9 Installation of the Optional Accessories | 3-19 |



CONTENTS

Chapter 4 Description of the Operation Panels

| | |
|--|------|
| 4.1 The Main Operating Panel | 4-1 |
| 4.2 The MPG Panel | 4-44 |
| 4.3 The CRT/MTD Panel | 4-48 |
| 4.4 How to Active Soft Operator Opanel key | 4-52 |

Chapter 5 Operation Procedure

| | |
|--|------|
| 5.1 Start or Stop the Machine | 5-1 |
| 5.2 Manual Operation Procedure | 5-2 |
| 5.3 Start or Stop the Spindle Rotation | 5-3 |
| 5.4 Manual tool change | 5-4 |
| 5.5 Manual Rapid Traverse Feed | 5-5 |
| 5.6 Manual Feed Motion | 5-6 |
| 5.7 MPG Feed Motion..... | 5-7 |
| 5.8 Automatic Tool Change(ATC)..... | 5-8 |
| 5.9 Automatic Operation | 5-14 |

Chapter 6 Lubrication

| | |
|-------------------------------------|-----|
| 6.1 Importance of Lubrication | 6-1 |
| 6.2 Lubrication System Diagram..... | 6-3 |
| 6.3 The Oil Guide Table..... | 6-5 |

Chapter 7 Mechanism

| | |
|--|------|
| 7.1 Headstock System | 7-1 |
| 7.2 Feed-Motion Transmission Mechanism | 7-4 |
| 7.3 Tool Magazine | 7-11 |
| 7.4 The Fully-Enclosed Splash-Guarding Enclosure | 7-14 |
| 7.5 Mechanism Adjustment | 7-15 |

Chapter 8 Pneumatic & coolant systems

| | |
|---|-----|
| 8.1 Schematic Diagram of the Pneumatic System | 8-1 |
| 8.2 Schematic Diagram of the Pneumatic Piping System..... | 8-3 |
| 8.3 Pneumatic System | 8-4 |



CONTENTS**Chapter 9 Preventive Maintenance**

| | |
|------------------------------------|-----|
| 9.1 Daily Maintenance | 9-1 |
| 9.2 Weekly Maintenance..... | 9-1 |
| 9.3 Semi-annual Maintenance | 9-1 |
| 9.4 Annual Maintenance | 9-2 |
| 9.5 Cutting Coolant Reservoir..... | 9-2 |
| 9.6 Notice | 9-3 |

Appendix A Description of the Operation Panels for MITSUBISHI M70

| | |
|--|------|
| A.1 The Main Operating Panel..... | A-1 |
| A.2 The MPG Panel | A-44 |
| A.3 The CRT/MTD Panel | A-48 |
| A.4 How to Active Soft Operator Opanel key | A-53 |

Appendix B Operation Procedure

| | |
|--|------|
| B.1 Start or Stop the Machine | B-1 |
| B.2 Manual Operation Procedure | B-2 |
| B.3 Start or Stop the Spindle Rotation | B-3 |
| B.4 Manual tool change | B-4 |
| B.5 Manual Rapid Traverse Feed | B-5 |
| B.6 Manual Feed Motion | B-6 |
| B.7 MPG Feed Motion..... | B-7 |
| B.8 Automatic Tool Change(ATC)..... | B-8 |
| B.9 Automatic Operation | B-13 |