


Photo

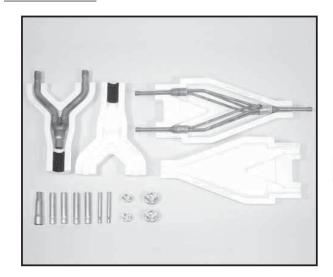

Descriptions

Branch pipe for Multi-System Twin type Twin use. (50:50)

Applicable Models

- PU-P71/100/125/140
- PUHZ-HRP71/100/125
- PUH-P71/100/125/140
- PUHZ-RP71/100/125/140


for Twin 50:50 use

Specifications


Main body	Distribution ratio	Outdoor unit capacity is divided into two (50:50)		
	Number of distribution pipes	1 each for liquid pipe and gas pipe		
	Pipe material	Phosphate deoxidized copper C1220T-OL (JIS H3300)		
Accessory	Pipe cover	Styrofoam molding (1 each for liquid pipe and gas pipe)		
	Joint	7 joints (4 types)		

Dimensions




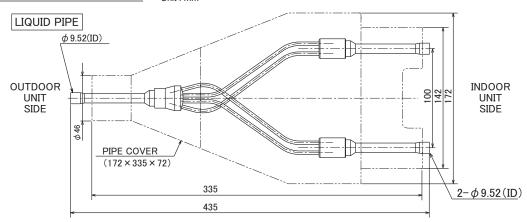




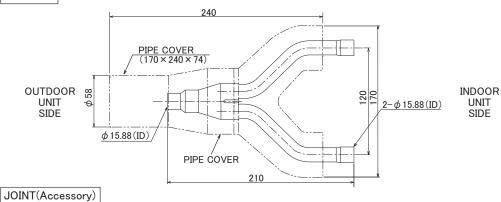

OPTION

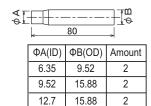

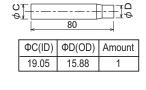

How to Use / How to Insta


Package Air-conditioner Optional Parts Instruction Sheet for Simultaneous Twin Distributing Pipe

Make sure that you have all the following parts before installation.



See the following for the specifications of gas pipe $\ensuremath{\mathbb{Q}}$,and liquid pipe $\ensuremath{\mathbb{3}}$,



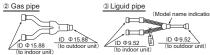


- (Model name indication) * Procure the following at local site in addition to the above
 - · Tape for heat insulator sealing
 - Extended pipe for refrigerant pipe

Pipe size and limit to refrigerant pipe


■For R410A										(Table 1-2)
0.44	Pipe size (mm)			Actual pipe length (m)			Height Difference (m)		Note 1	
Outdoor unit capacity	Gas pipe side		Liquid pipe side			4.5.6	la da sa la da sa	l- d 0 - 4d	Indoor Indoor	Number
uriii capacity	Outdoor unit side	Indoor unit side	Outdoor unit side	Indoor unit side	indoor-Outdoor	A+B+C=	indoor-indoor	Indoor-Outdoor	IIIdooi-IIIdooi	of bends
71(3Hp)	Ф 15.88 (5/8)	RP35, 50 Ф9.52(3/8)	Φ9.52 (3/8)	RP35, 50 Φ6.35(1/4)	_	50m or less	B-C = 8m or less	H = 30m or less	h = 1m or less	15 or less
100~140 (4~6Hp)		Φ12.7(1/2) RP60~125 Φ15.88(5/8)		RP60~125 Φ9.52(3/8)		75m or less				


Note 1: Limit the number of bends for refrigerant pipes to 8 in each of the $\langle A+B \rangle$ and $\langle A+C \rangle$ ranges $\frac{1}{2}$ See the installation manual provided with the main unit for details on chargeless pipe length and refrigerant additional charge amount.

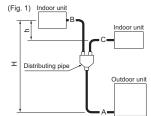

Pipe connections



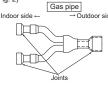

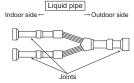

- 1. Perform work, taking care with the followings:
 Be sure to check the combination pattern of indoor and outdoor units and joints to be used (Table 2).
 Be sure to observe the limits to refrigerant pipe length and number of bends (Table 1).
 Insert the refrigerant pipe (procured at local site) and joint (§) into the expanded pipe portions of distributing pipe (this product) until they stop, and then connect them using anti-oxidization soldering.
 There is no restriction on the orientation of distributing pipe (this product) during installation.
 Take care that no foreign object, such as dust, enters during pipe connecting work.
 Remove the tag of liquid pipe (3) after checking it.


- 2. Pipe connections
 The provided joints (§ will be necessary depending on the capability of model used: See (Table 2), and connect the joints as shown in (Fig. 2).
 Do not bend or widen the distributing pipe (liquid pipe).

For R410A		(Table 2-2
Outdoor unit	Indoor unit	Joint to be used
		QOutor Φ15 99 — innor Φ12 7 lindoor gas nino side

Outdoor unit	muoor umt	John to be used	
71(3Hp)	35+35 (1.6+1.6)	®Outer Φ15.88—inner Φ12.7 [indoor gas pipe side], @Outer Φ9.52—inner Φ6.35 [indoor liquid pipe side]	
		© Outer Φ15.86—inner Φ12.7 [Indoor gas pipe side], © Outer Φ9.52—inner Φ6.55 [Indoor liquid pipe side]	
100(4Hp)	50+50 (2+2)	®Outer Φ15.88-inner Φ12.7 [indoor gas pipe side], ®Outer Φ9.52-inner Φ6.35 [indoor liquid pipe side]	
125(5Hp)	60+60 (2.5+2.5)	No joint is necessary.	
140(6Hp)	71+71 (3+3)	140 joint to hoodstary.	

※ Installation positions in brackets ()

Heat insulation work

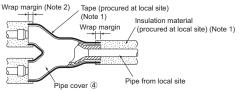

- Cover the entire refrigerant pipe (procured at local site) with heat insulation material. When using generally available heat insulation material, heat-resistant insulation material (at least 12 mm thick).
- Pipe covers ④ and ⑤ will shrink slightly at high temperatures Provide wrap margins with insulation material.
- Fit gas pipe ② into pipe covers ④, and then seal the mated portion of pipe covers ④ using heat insulation seal tape (procured at local site).

Please install contents other than this description on the main part of a product with an attached installation description, and use them as it.