

BRIGHT33® LIGHTING TRADITIONAL LED GLASS VANITY LIGHT 3-LAMP

INSTALLATION INSTRUCTIONS

bright33.com

B33T3V25W30BN

.3410127

**Thank you for purchasing
Bright33® Lighting Fixtures!**

TROUBLESHOOTING:

- Check that line voltage at fixture is correct.
- Ensure that there is voltage at lamp fixture wires. If there is no voltage, then check all connections.
- Check that fixture is grounded properly.

If fixture does not light:

- Check switch to ensure that there are no defects.
- Check fuse/circuit breaker for trips, then check wiring connections.

CLEANING AND MAINTENANCE:

CAUTION: Ensure fixture temperature is cool enough to touch. DO NOT clean or perform maintenance while fixture is energized.

- Clean lens and Suite with non-abrasive cleaning solution.
- Do not open fixture to clean LED.
- Do not touch the LED.
- Do not spray liquid directly on to LED, LED driver or wiring.

**Please read carefully before
installing fixture.**

Save these instructions, as you may need them at a later date.

Please follow the following steps for installation →

WARNINGS:



Turn power off before installation, inspection, or removal. Use all necessary precautions while performing this procedure.



Consult a qualified electrician to ensure correct branch circuit conductor. Min 90°C supply conductors.



Properly ground electrical enclosure. IT IS IMPERATIVE THAT THE OUTLET BOX BE PROPERLY GROUNDED.



DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS, OTHERWISE SAFETY WILL BE COMPROMISED.



This Integrated LED Fixture has no lamp/bulb to replace.


GENERAL: All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections, contact and obtain the services of a qualified electrician. Use UL or IEC approved wire only for input/output connections.

Remove fixture and mounting components from the box, and make sure that no parts are missing by referencing the illustration in the installation instructions.

DIMMING: This product is compatible with most common residential type dimmers. Dimming performance will depend upon dimmer, dimmer settings (dimmers with adjustments to brightness range), wiring method, and number of LED modules. For best results, set dimmer position at maximum before adjusting to a lower light level.

Figure 1

1. OUTLET BOX (NOT INCLUDED)
2. MOUNTING SCREWS
3. WALL PLATE
4. WHITE SUPPLY WIRE
5. BLACK SUPPLY WIRE
6. SUPPLY GROUND WIRE
7. WIRE NUTS
8. #8-32 FIXTURE SCREWS
9. ANCHOR SCREWS
10. WHITE FIXTURE WIRE
11. BLACK FIXTURE WIRE
12. FIXTURE GROUND WIRE
13. BACK PLATE
14. CAP NUTS
15. GLASS SHADE
16. RETAINING RING
17. WALL ANCHORS
18. SOCKET MOUNT

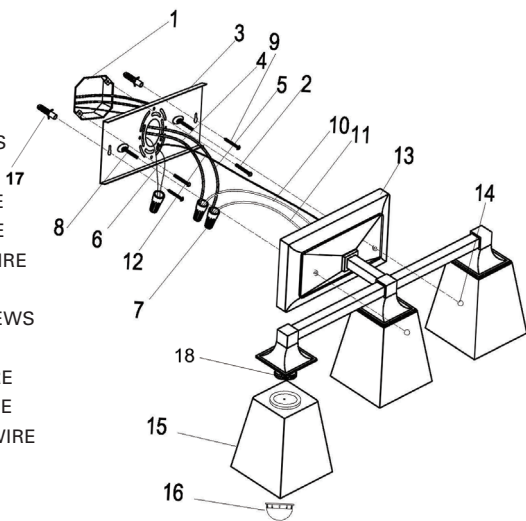

- 1 SHUT OFF MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER!
- 2 Remove contents from box. Ensure that no parts are missing. Reference the illustration included with this instruction manual.
- 3 Place the WALL PLATE (3) over the OUTLET BOX (1). Align the mounting slots of the WALLPLATE (3) with the holes of the outlet. Use a level to ensure that the WALL PLATE (3) is straight. Then, mark the location of the narrow end of each keyhole slot on the wall.
- 4 Remove the WALL PLATE (3) from the wall, and drill 1/4" holes at each of the marked keyhole locations, from (STEP 3). Into each hole, carefully insert an included WALL ANCHOR (17).
- 5 Feed the ANCHOR SCREWS (9) through the keyhole slots on the WALL PLATE (3), and thread them into the WALL ANCHORS (17) from (STEP 4), until the WALL PLATE (3) is flush against the wall.
- 6 Fasten the WALL PLATE (3) to the OUTLET BOX (1) using the included MOUNTING SCREWS (2).

- 7 Make the following wire connections (Fig.1), using the provided WIRE NUTS (7):
WHITE (-) SUPPLY WIRE (4) TO WHITE FIXTURE WIRE (10)
BLACK (+) SUPPLY WIRE (5) TO BLACK FIXTURE WIRE (11)
SUPPLY GROUND WIRE (6) TO FIXTURE GROUND WIRE (12)
If necessary, wrap all wire connections in electrical tape to ensure secure connection.

- 8 Carefully tuck all wiring back into the OUTLET BOX (1).

- 9 Place the BACK PLATE (13) over the WALL PLATE (3). Attach the BACK PLATE (13) to the WALL PLATE (3) using the #8-32 FIXTURE SCREWS (8). Tighten the CAP NUTS (14) to secure in place.

- 10 Align the GLASS SHADE (15) to the SOCKET MOUNT (18), and secure in place using the RETAINING RING (16).

Repeat as necessary.

- 11 Restore power at fuse box/circuit breaker. Check operation of Integrated LED Fixture.

- 12 Installation complete.

This device complies with Part 15 of the FCC Rules and has been tested and found to comply with the limits for Class B digital device. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by manufacturer could void user's authority to operate the equipment.

Customer Support: 330-475-8231

bright33.com





PRODUCT WARRANTY

Bright33 Products LLC ("Bright33") warrants to the ORIGINAL PURCHASER ("Customer") that this light emitting diode (LED) fixture, including its LED arrays, LED drivers, integral control devices and finish (the "Product"), will be free from defect in the manufacturing of the Product, under use of the Product as recommended by Bright33 within five (5) years of the manufacturing date (the "Warranty Period"). The finish material is warranted for a period of one (1) year. This warranty covers defects in manufacturing discovered while using the product as recommended by the manufacturer. If the Product fails due to defect in manufacturing during the Warranty Period, Bright33 will replace the defective Product or provide a refund, at our discretion.

WHAT IS NOT COVERED?

This warranty does not cover, and Bright33 is not liable for, damage or loss resulting from accident or acts of God, installation, modification, maintenance or repair of the Product, use of the Product for unintended purpose(s), failure to use the product in accordance with instructions, use of abrasive or organic solvent cleaners on or with the Product, or misuse of the Product. Bright33 recommends using a professional electrician for installation or repair of the Product.

HOW TO OBTAIN WARRANTY SERVICE

Contact our warranty department at 740-314-1269 to report the defect and obtain a return code. Send failed Product with proof of purchase, name and address within thirty (30) days of failure to:

Bright33 Products LLC
2620 Ridgewood Rd
Akron, OH 44313

Bright33 is not responsible for shipping costs of any return. Warranty coverage is conditioned upon Customer's compliance with these instructions regarding warranty service.

SOLE AND EXCLUSIVE REMEDY – LIMITATION OF LIABILITY AND DAMAGES

THIS WARRANTY IS THE SOLE AND EXCLUSIVE REMEDY OF CUSTOMER FOR ANY CLAIM, DAMAGE OR LOSS RESULTING FROM ANY DEFECT IN THE MANUFACTURING OF THE PRODUCT. Customer's remedy for any warranty claim or other claim for damage or loss shall be limited to Customer's return of the Product to Bright33, in compliance with the instructions herein, and refund of the purchase price or repair or replacement of the nonconforming Product, at Bright33's sole discretion and option. Bright33 shall not be liable for any amount exceeding the purchase price paid by Customer due to any warranty claim or other claim for damage or loss of any kind. UNDER NO CIRCUMSTANCES SHALL BRIGHT33 BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL, EXEMPLARY OR PUNITIVE DAMAGES.

DISCLAIMER

THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. EXCEPT AS EXPLICITLY STATED HEREIN, BRIGHT33 EXPRESSLY DISCLAIMS ALL WARRANTIES, WHETHER WRITTEN, ORAL, EXPRESS OR IMPLIED, TO THE FULLEST EXTENT PERMITTED BY LAW, INCLUDING ANY WARRANTY OF PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NONINFRINGEMENT. NO REPRESENTATION OR STATEMENT OF ANY EMPLOYEE, MANAGER, DIRECTOR, REPRESENTATIVE, SUBCONTRACTOR OR AGENT OF BRIGHT33 SHALL NEGATE THIS DISCLAIMER.

This Product has been found to comply with Class B digital device specifications, pursuant to part 15 of applicable FCC Rules. Product may cause interference with radio communications if not installed and used in accordance with instructions.