



Part #	Replacement Part	Name
1	0303-08	Cap
2	0303-09	Plug
3	0301-03	Base
4	0301-04	Core Axis
5	0301-11	Spring
6	0301-10	Screw
7	0301-09	Snap Ring
8	0301-08	Spring
9	0303-07	O-ring
10	0303-02	Body
11	0303-01	Washer
12	0303-06	Washer
13	0303-05	Washer
14	0303-04	Nut
15	0303-03	Tube