

ASSEMBLY INSTRUCTIONS

3 PIECE BONUS PACK #1583-22

Please read and save these instructions:


Be careful when unpacking the lamp since the wires are connected. If the wires are pulled out of their connectors, it may result in a bad connection.

Floor Lamp

1. Carefully unpack and place all parts on a soft, flat surface.
2. Insert tube (B) into lamp base (A), gently twist to tighten.
3. Insert tube (C) into tube (B), twist to tighten.
4. Insert tube (D) into tube (C), twist to tighten.
5. Insert socket assembly (E) into tube (D), twist to tighten. Gently pull any excess cord from the lamp base.
6. Place harp (G) on saddle (F).
7. Place shade (H) on harp (G) and tighten finial (I).
8. Use with one 100 watt max standard bulb or 3-way CFL equivalent. Do not exceed maximum wattage as specified on the socket label.

Table Lamp

1. Carefully unpack and place all parts on a soft, flat surface.
2. Insert socket assembly part (B) into lamp base (A), gently twist to tighten and pull any excess cord from the lamp base.
3. Place harp (D) on saddle (C).
4. Place shade (E) on harp (D) and tighten finial (F).
5. Use with one 100 watt max standard bulb or 3-way CFL equivalent. Do not exceed maximum wattage as specified on the socket label.

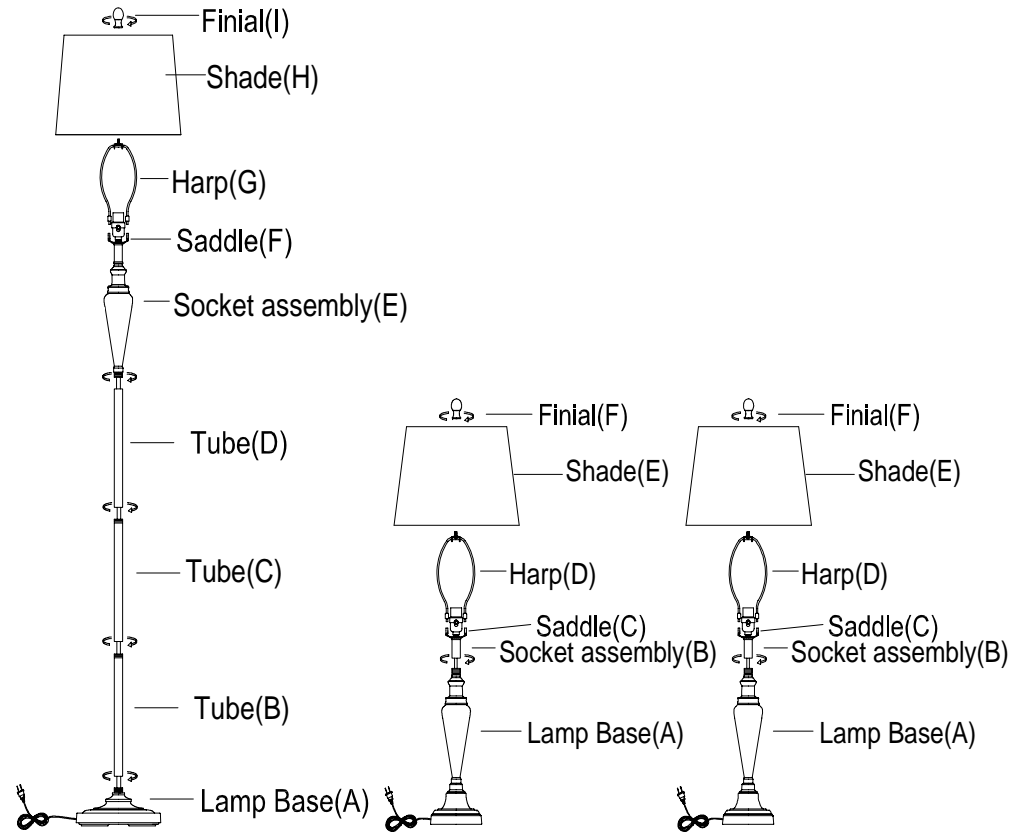

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug. Indoor use only.

Indoor use only in dry location.
Unplug to change bulb or clean the lamp.
Remove cellophane cover from the shade before use.
Keep cellophane out of reach of children and pets.



21 Penn Plaza, Suite 909, New York, NY 10001
www.adessohome.com