


ASSEMBLY INSTRUCTIONS FOR SWIVEL FLOOR LAMP

3677 1.0

Model # 3677-01
Model # 3677-22

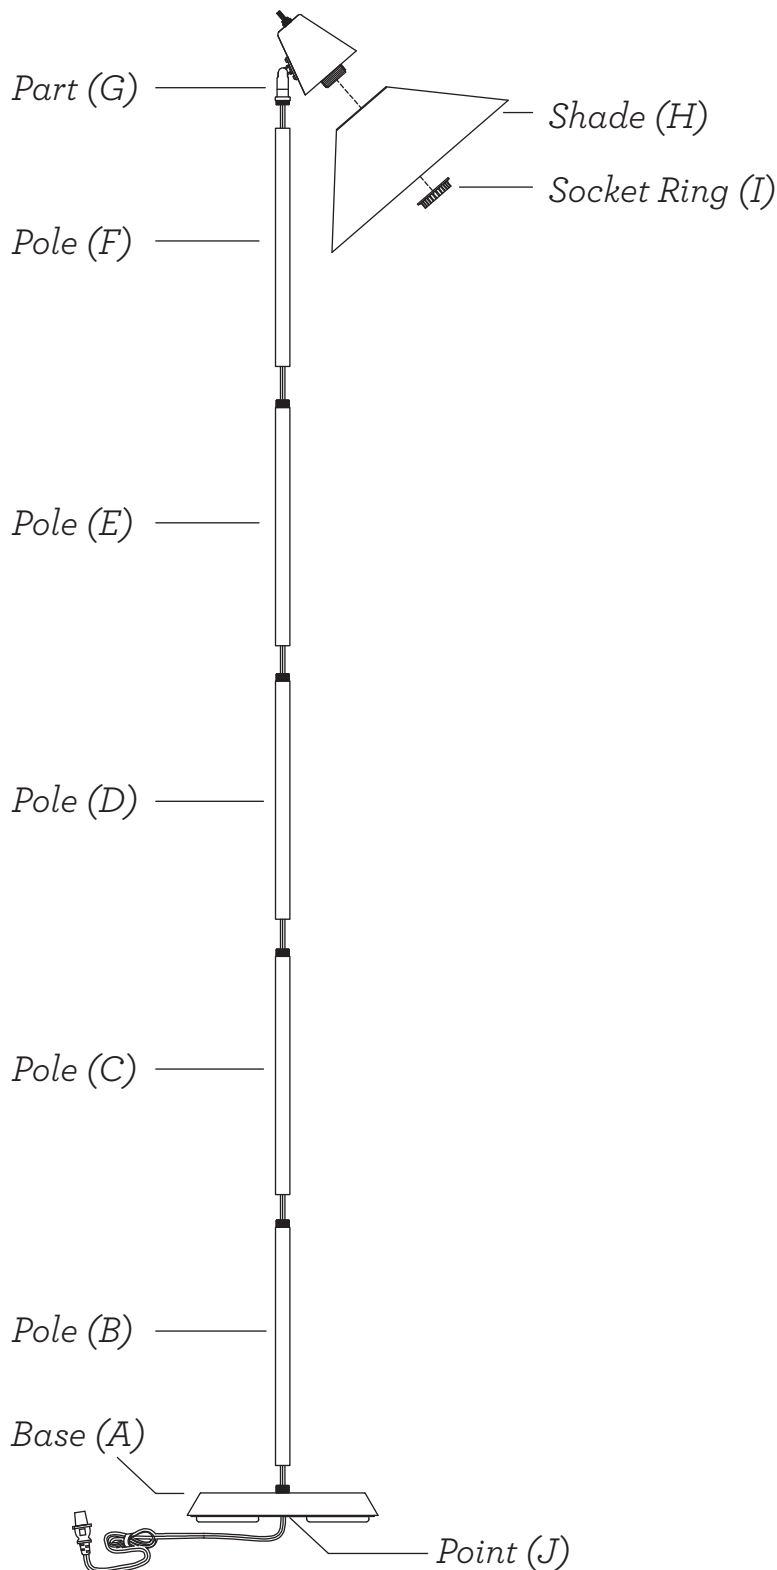

1. Screw the pole (B) clockwise into the base (A) to tighten.
2. Screw the pole (C) clockwise into the pole (B) to tighten.
3. Screw the pole (D) clockwise into the pole (C) to tighten.
4. Screw the pole (E) clockwise into the pole (D) to tighten.
5. Screw the pole (F) clockwise into the pole (E) to tighten.
6. Screw the part (G) clockwise into the pole (F) to tighten. Pull the remaining slack of the power cord out carefully through point (J).
7. Remove socket ring (I) from shade holder on the part (G) and hold shade (H) on socket while re-attaching socket ring to secure the shade to the shade holder.

GENERAL PRODUCT INFORMATION:

This product is suitable
for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. DO NOT ALTER THE PLUG.

BULB TYPE: (1) 3-way 100 watt incandescent or
26 watt CFL equivalent.
(not included)