

Safety Precautions

- Read all safety precautions and installation instructions carefully before installing or servicing this kit or the fixture. Failure to comply with these instructions could result in potentially fatal electric shock and/or property damage.
- It is recommended that a qualified electrician perform all the wiring. The fixture must be wired in accordance with all national and local electrical codes.
- Do not handle any energized fixture or attempt to energize any fixture with wet hands or while standing on a wet or damp surface or in water.

Assembly Instructions

Kit Includes:

- Hanger bars, brackets and nails
- Galvanized steel round opening rough-in plate for mounting downlight fixtures

Step 1 – Preparing for installation

- Carefully remove the hardware kit from the carton.
- Remove components from the hardware kit.


Step 2 – Follow these options below depending on your installation type:

Option A: NEW CONSTRUCTION PLATE DRYWALL INSTALLATION

New Construction plate for stud/joist mounting, fits up to 24" studs/joist spacing.

- Nail or screw adjustable brackets or plate to studs/joist. See Figure 1 & 2.
- Cut a hole in the drywall. See figure 3.
- Make appropriate wiring connections as required, follow downlight instructions (not included) to complete installation. See Figures 4, 5, & 6.


Model#	Rough-in Plate Dim.	Fixture Dim.
1060705	4-1/2" Round	4"
1060706	6-3/8" Round	6"
1060707	8-1/2" Round	8"

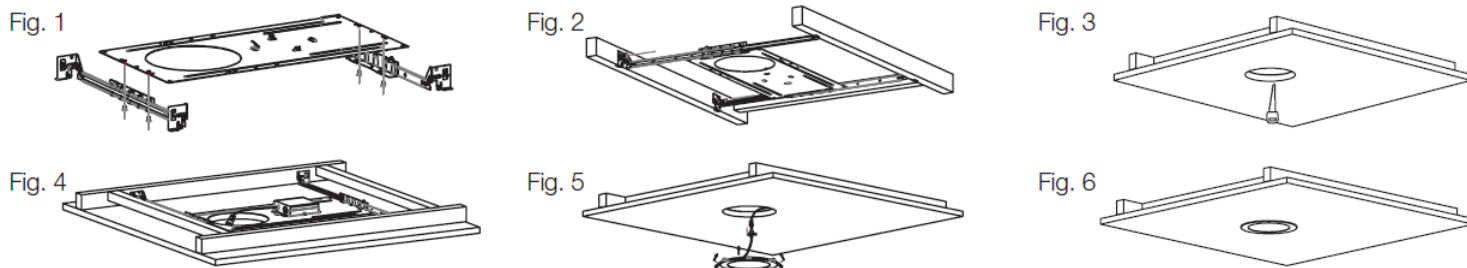

Option B: NEW CONSTRUCTION PLATE T-GRID INSTALLATION

New Construction or remodel plate for T-grid ceilings fits standard 2' x 2' and 2' x 4' T-grids.

- Screw adjustable brackets or plate to T-grid. See Figure 1.
- Cut a hole in the ceiling tile. See figure 3.
- Make appropriate wiring connections as required, follow downlight instructions (not included) to complete installation. See Figures 4, 5, & 6.

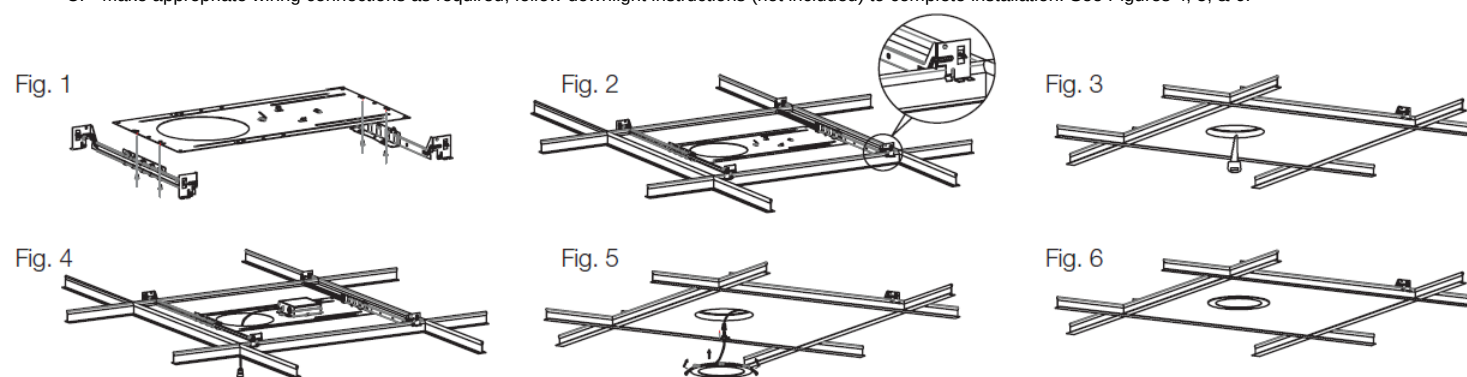

Limited Factory Warranty

AFX Inc. hereby warranty that this kit is free from defects in materials and workmanship when installed and used under normal operating conditions for a period of 1 years from date of shipment from factory. This warranty covers all component parts and extends only to replacement of defective fixture or components; it does not cover failure due to improper installation, misuse, mishandling or damage incurred in transit.